

PHOTO SENSOR

REMOVAL AND INSTALLATION

(Refer to GROUP 54A – Headlamp.)

INSPECTION

PHOTO SENSOR CHECK

The blower speed should drop when the light-receiving section of the photo sensor is covered with your hand. If not, replace the photo sensor.

OUTSIDE AIR TEMPERATURE SENSOR


INSPECTION

OUTSIDE AIR TEMPERATURE SENSOR CHECK

Measure the resistance between the sensor terminals under at least two temperatures. The resistance values should meet the left graph.

NOTE

The temperature should be within the shown range.

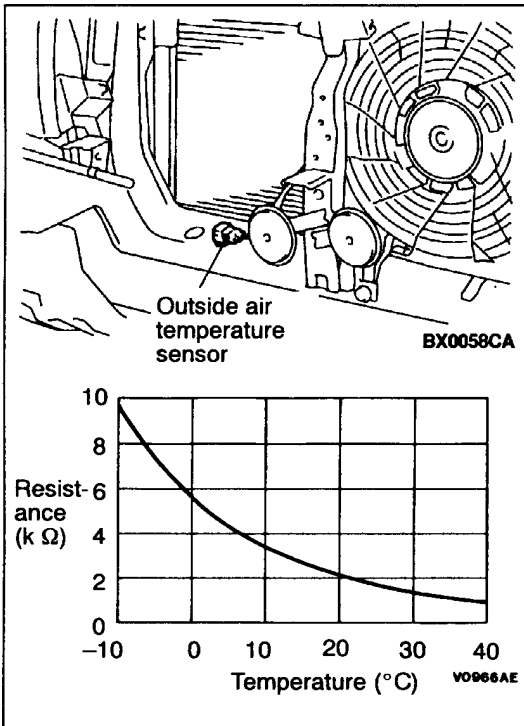

REAR A/C

ELECTRIC MOTOR FOR THE AIR OUTLET CHANGE-OVER DAMPER REMOVAL AND INSTALLATION

