

INDEX (In order of connector No.)

	Connector No.	Parts name	Circuit diagram page	Wiring diagram page
A	A-03	Auto cruise actuator	4-150	2-4, 8
	A-05	Front speed sensor (RH)	4-142, 146	2-4, 8
	A-07	Side turn signal lamp (RH)	4-81	2-4, 8
	A-09	Windshield wiper motor	4-126, 130	2-4, 8
	A-10	Brake fluid level sensor	4-97	2-4, 8
	A-11	Hydraulic unit <ABS>	4-141, 145	2-4, 8
	A-12	Motor relay <ABS>	4-141, 145	2-4, 8
	A-13	Side turn signal lamp (LH)	4-81	2-4, 8
	A-14	Front speed sensor (LH)	4-142, 146	2-4, 8
	A-15X	Power window relay	4-11, 13, 100	2-4, 8
	A-16X	A/C compressor relay	4-11, 13, 121	2-4, 8
	A-17X	Horn relay	4-11, 85	2-4, 8
	A-18X	Fog lamp relay	4-11, 16, 64	2-4, 8
	A-19X	Alternator relay	4-11, 27	2-4, 8
	A-20X	Condenser fan relay (LO)	4-11, 47, 123	2-4, 8
	A-21X	Condenser fan relay (HI)	4-11, 47, 123	2-4, 8
	A-22X	Radiator fan relay (LO)	4-11, 46, 122	2-4, 8
	A-23X	Tail lamp relay	4-11, 15, 58, 64, 100, 167	2-4, 8
	A-24X	Headlamp relay (LO)	4-11, 15, 54	2-4, 8
	A-25X	Headlamp relay (HI)	4-11, 15, 54	2-4, 8
	A-27X	Radiator fan relay (HI)	4-11, 46, 122	2-4, 8
	A-28	Connection of front harness and control harness	4-30, 38, 42, 46, 48, 49, 121, 122, 150, 158	2-4, 8
	A-29	Front turn signal lamp (LH)	4-81	2-4, 8
	A-30	Headlamp (LO:LH)	4-54	2-5, 9
	A-32	Horn (LH)	4-85	2-5, 9
	A-33	Horn (LH)	4-85	2-5, 9
	A-34	Fog lamp (LH)	4-64	2-5, 9
	A-35	Position lamp (LH)	4-60	2-5, 9
	A-36	Headlamp (HI:LH)	4-54	2-5, 9
	A-37	Air temperature sensor	4-125	2-5, 9

	Connector No.	Parts name	Circuit diagram page	Wiring diagram page
A	A-38	Dual pressure switch	4-34, 47, 123	2-5, 9
	A-39	Radiator fan motor	4-46, 122	2-5, 9
	A-41	Alternator	4-26	2-5, 9
	A-42	Alternator	4-26	2-5, 9
	A-43	A/C compressor assembly	4-120, 121	2-5, 9
	A-44	Oil pressure switch	4-94	2-5, 9
	A-45	Condenser fan motor	4-47, 123	2-5, 9
	A-46	Fog lamp (RH)	4-64	2-5, 9
	A-47	Headlamp (HI:RH)	4-54	2-5, 9
	A-48	Position lamp (RH)	4-60	2-5, 9
	A-49	Horn (RH)	4-85	2-5, 9
	A-50	Horn (RH)	4-85	2-5, 9
	A-51	Headlamp (LO:RH)	4-54	2-5, 9
	A-53	Front turn signal lamp (RH)	4-81	2-5, 9
	A-54	Windshield washer motor	4-126, 130	2-5, 9
	A-57	Power steering oil pressure switch	4-35, 43	2-6, 10
	A-58	Crank angle sensor	4-32, 40	2-6, 10
	A-60	Connection of control harness and power steering harness	4-35, 43	2-6, 10
	A-67	Condenser	4-24	2-6, 10
	A-68	Throttle position sensor	4-33, 41, 52, 152	2-6, 10
	A-70	Idle speed control servo	4-36, 44	2-6, 10
	A-72	Air flow sensor	4-36, 44	2-6, 10
	A-75	Checking connector	4-24, 31, 39	2-6, 10
	A-76	Hydraulic unit <ABS>	4-141, 145	2-6, 10
	A-77	Valve relay <ABS>	4-141, 145	2-6, 10
	A-82	Distributor assembly	4-24, 32, 40	2-6, 10
	A-84	Connection of control harness and battery harness	4-23, 50	2-6, 10
	A-85	Output shaft speed sensor	4-53	2-6, 10
A-86	Input shaft speed sensor	4-53	2-6, 10	
A-87	A/T control solenoid valve assembly	4-53	2-7, 11	
A-88	Vehicle speed sensor	4-35, 43, 49, 87, 90, 108, 128, 132	2-7, 11	

	Connector No.	Parts name	Circuit diagram page	Wiring diagram page
A	A-89	Inhibitor switch	4-23, 38, 50, 84	2-7, 11
	A-90	Water temperature gauge unit	4-86, 91	2-7, 11
	A-91	Water temperature sensor	4-32, 40	2-7, 11
	A-92	Connection of control harness and injector harness	4-33, 41	2-7, 11
	A-93	Starter	4-23	2-7, 11
	A-94	Starter	4-23	2-7, 11
	A-96	Injector (No.6)	4-33, 41	2-7, 11
	A-97	Injector (No.5)	4-33, 41	2-7, 11
	A-98	EGR solenoid valve	4-33, 41	2-7, 11
	A-100	Injector (No.4)	4-33, 41	2-7, 11
	A-101	Injector (No.3)	4-33, 41	2-7, 11
	A-103	Injector (No.2)	4-33, 41	2-7, 11
	A-104	Back up lamp switch (M/T)	4-84	2-7, 11
	A-105	Injector (No.1)	4-33, 41	2-7, 11
A-114	Variable resister	4-32, 40	2-7, 11	
B	B-01	Connection of dash harness and ABS harness	4-140, 141, 142, 144, 145, 146	2-12, 16
	B-02	Inside and outside air switching damper motor	4-125	2-12, 16
	B-03	Blower motor HI relay	4-119	2-12, 16
	B-04	Blower motor	4-118	2-12, 16
	B-05	Air bag module (squib) (passenger side)	4-155	2-12, 16
	B-06	Fin thermo sensor	4-124	2-12, 16
	B-08	Air mixing damper motor/potentiometer	4-125	2-12, 16
	B-09	Water temperature sensor (for A/C)	4-124	2-12, 16
	B-11	Hazard switch	4-80	2-12, 16
	B-12	A/C-ECU	4-119, 120, 124, 125, 135	2-12, 16
	B-13	A/C-ECU	4-47, 119, 120, 123, 124, 125, 135	2-12, 16
	B-14	Parking brake switch	4-97	2-12, 16
	B-17	Stop lamp switch or vacant terminal	4-78, 140, 144	2-12, 16
	B-18	Stop lamp switch or vacant terminal	4-48, 78, 140, 144, 150	2-12, 16

	Connector No.	Parts name	Circuit diagram page	Wiring diagram page
B	B-19	Connection of dash harness and roof harness	4-160	2-12, 16
	B-20	Connection of dash harness and front door harness (LH)	4-74, 102, 103, 108, 109, 110, 113, 114, 116, 136, 157, 169	2-12, 16
	B-21	Ignition key cylinder illumination lamp	4-77	2-12, 16
	B-22	Column switch	4-127, 131	2-12, 16
	B-23	Instrument panel ECU	4-51, 55, 56, 59, 65, 70, 75, 77, 94, 95, 96, 99, 101, 108, 127, 128, 131, 132, 137, 156, 167	2-12, 16
	B-25	Column switch	4-81	2-12, 16
	B-26	Column switch	4-55	2-12, 16
	B-27	Column switch	4-55, 59, 65, 167	2-12, 16
	B-30	Clock spring	4-155	2-13, 17
	B-32	Clock spring	4-85, 151, 171	2-13, 17
	B-36	Foot lamp (LH)	4-68, 112	2-13, 17
	B-37	Diagnosis connector	4-34, 42, 52, 56, 69, 65, 70, 75, 77, 94, 95, 96, 99, 101, 108, 115, 124, 128, 132, 137, 140, 144, 149, 154, 156	2-13, 17
	B-41	Connection of dash harness and control harness	4-34, 42, 48, 49, 51, 52, 84, 87, 90, 108, 128, 132, 149, 150, 152, 159, 166	2-13, 17
	B-42	Connection of dash harness and control harness	4-42, 52, 87, 90, 108, 152	2-17
	B-43	Connection of dash harness and control harness	4-16, 23, 24, 30, 31, 38, 39, 49, 87, 91, 121, 150, 159	2-13, 17
	B-45	SRS-ECU	4-155	2-13, 17
	B-46	Power transistor	4-119	2-13, 17
	B-47	A/C belt lock ECU	4-47, 120, 123	2-13, 17
	B-48	Foot lamp (RH)	4-68, 112	2-13, 17
	B-49	Assist ECU	4-69, 76, 86, 90, 95, 105, 109, 111, 113, 142, 146	2-13, 17
B-50	Connection of dash harness and floor harness	4-74, 104, 111	2-13, 17	
B-51	Connection of ABS harness and floor harness	4-142, 146	2-13, 17	
B-52	Assist ECU	4-36, 44, 50, 151, 158	2-13, 17	

	Connector No.	Parts name	Circuit diagram page	Wiring diagram page
B	B-53	Assist ECU	4-27, 36, 44, 51, 55, 59, 64, 69, 76, 94, 95, 97, 100, 106, 109, 111, 113, 126, 130, 137, 142, 146, 151, 157, 167	2-13, 17
	B-54	Assist ECU	4-27, 55, 59, 64, 94, 97, 100, 126, 130, 158, 167	2-13, 17
	B-55	Connection of dash harness and floor harness (RH)	4-74, 106, 111, 137, 169	2-13, 17
	B-57	Connection of ABS harness and front harness	4-141, 142, 145, 146	2-13, 17
	B-59	A/T control relay	4-53	2-14, 18
	B-65	Mode selector damper/potentiometer	4-125	2-14, 18
	B-66	Radio and tape player	4-168, 169	2-14, 18
	B-67	Radio and tape player	4-171	2-14, 18
	B-68	Ignition switch	4-16	2-14, 18
	B-69	Key reminder switch	4-69, 109, 113	2-14, 18
	B-70	Diode (for cooling circuit)	4-46, 122	2-14, 18
	B-71	J/B (5)	4-5, 15, 46, 48, 60, 64, 72, 80, 81, 85, 86, 89, 118, 122, 126, 130, 138, 139, 148, 161, 167, 168	2-14, 18
	B-73	Connection of front harness and dash harness	4-47, 59, 60, 65, 80, 85, 120, 123, 125, 142, 146, 150, 157, 159, 167	2-14, 18
	B-75	Connection of front harness and dash harness	4-13, 16, 100, 159, 160, 162	2-14, 18
	B-76	Connection of dash harness and J/B	4-3, 4, 48, 49, 69, 76, 78, 80, 81, 84, 109, 113, 139, 140, 141, 144, 145, 148, 149, 154, 160, 168	2-14, 18
	B-77	Connection of dash harness and J/B	4-3, 4, 17, 18, 20, 21, 24, 27, 31, 39, 47, 49, 51, 80, 82, 84, 85, 87, 89, 91, 94, 95, 96, 98, 108, 118, 123, 126, 130, 135, 139, 141, 143, 145, 147, 148, 149, 154, 157, 158, 160, 161, 167, 168, 172	2-14, 18
	B-78	Connection of dash harness and J/B	4-3, 4, 34, 42, 48, 56, 58, 65, 68, 69, 74, 77, 80, 94, 95, 96, 99, 100, 108, 112, 118, 128, 132, 135, 137, 140, 144, 148, 154, 156, 157, 168	2-14, 18
	B-79	Connection of roof harness and J/B	4-3, 4, 68, 69, 112, 161	2-14, 18
	B-80	Connection of instrument panel and J/B	4-3, 4, 27, 31, 39, 49, 51, 54, 72, 74, 77, 80, 82, 86, 87, 89, 91, 94, 95, 96, 98, 138, 139, 143, 147, 148, 149, 154, 156, 157, 167	2-14, 18
	B-81	Turn hazard flasher unit	4-3, 4, 80	2-14, 18

	Connector No.	Parts name	Circuit diagram page	Wiring diagram page
B	B-82	Defogger relay	4-3, 4, 21, 135	2-14, 18
	B-83	Blower relay	4-3, 4, 21, 118	2-14, 18
	B-84	Connection of front harness and J/B	4-3, 4, 17, 18, 27, 34, 42, 47, 48, 56, 58, 60, 65, 68, 72, 74, 77, 80, 81, 85, 86, 89, 94, 95, 96, 99, 100, 108, 112, 115, 116, 118, 123, 126, 128, 130, 132, 137, 138, 139, 140, 144, 148, 149, 154, 156, 158, 161, 167, 168	2-14, 18
	B-85	Connection of front harness and J/B	4-3, 4, 20, 48, 54, 77, 78, 108, 112, 116, 118, 135, 140, 144, 148, 156, 170	2-14, 18
	B-86	ETACS-ECU	4-36, 44, 69, 76, 77, 97, 99, 101, 104, 109, 110, 113, 114, 143, 147, 158, 159	2-14, 18
	B-87	ETACS-ECU	4-101, 104, 111, 115	2-15, 19
	B-89	Connection of floor harness and J/B	4-3, 4, 60, 68, 69, 72, 76, 77, 81, 84, 101, 109, 112, 113, 115, 116, 135, 139, 160, 168, 170, 172	2-15, 19
	B-90	ETACS-ECU	4-3, 4, 69, 76, 77, 99, 101, 109, 113, 158, 160	2-15, 19
	B-91	Connection of floor harness and dash harness	4-60, 78, 139, 159, 162	2-15, 19
	B-92	Connection of floor harness and dash harness	4-31, 39, 69, 76, 86, 90, 97, 109, 112, 113, 114, 115, 116, 159, 169, 172	2-15, 19
	B-99	Position indicator lamp assembly	4-51	2-15, 19
	B-101	Auto-cruise ECU	4-49, 149, 150, 152	2-15, 19
	B-102	Engine control relay	4-30, 38	2-15, 19
	B-103	Fuel pump control relay	4-31, 39	2-15, 19
	B-105	Connection of instrument panel harness and control harness	4-86, 87, 90, 91, 149, 157	2-15, 19
	B-107	O2 sensor	4-40	2-15, 19
B-108	Engine-ECU<M/T> or Engine and A/T-ECU <A/T>	4-24, 30, 31, 32, 33, 34, 35, 36, 39, 41, 42, 44, 46, 121, 122	2-15, 19	
B-109	Engine-ECU<M/T> or Engine and A/T-ECU <A/T>	4-24, 30, 32, 34, 35, 36, 38, 40, 41, 42, 43, 44, 48, 52, 53, 121, 152	2-15, 19	
B-110	Engine-ECU<M/T> or Engine and A/T-ECU <A/T>	4-34, 35, 38, 40, 41, 42, 43, 49, 52, 53, 121, 152	2-15, 19	
B-111	Engine-ECU<M/T> or Engine and A/T-ECU <A/T>	4-30, 32, 33, 34, 35, 36, 48, 50, 53	2-15, 19	
B-112	ABS-ECU	4-140, 141, 142, 144, 145, 146	2-15, 19	

	Connector No.	Parts name	Circuit diagram page	Wiring diagram page	
B	B-116	Diode (for door lamp)	4-74	2-15, 19	
	B-117	Diode (for door lamp)	4-74	2-15, 19	
	B-118	Speed alarm (standard meter)	4-87, 89	2-15, 19	
C	C-01	Sunlight sensor	4-124	2-20, 21	
	C-02	Center warning display	4-27, 94, 95, 138	2-20, 21	
	C-03	Combination meter	4-36, 44, 51, 75, 82, 86, 87, 89, 90, 91, 96, 97, 98, 143, 147, 151, 154, 157	2-20, 21	
	C-04	Combination meter	4-36, 44, 51, 54, 75, 82, 86, 87, 91, 98, 154	2-20, 21	
	C-05	Combination meter (standard meter)	4-75, 82, 86, 96, 147, 143, 151	2-20, 21	
	C-06	Rheostat	4-167	2-20, 21	
	C-07	Cruise control main switch	4-149	2-20, 21	
	C-09	Connection of instrument panel harness and dash harness	4-27, 36, 44, 51, 55, 59, 65, 70, 75, 77, 80, 86, 87, 89, 90, 91, 94, 95, 97, 99, 101, 108, 109, 119, 124, 127, 128, 131, 132, 136, 138, 143, 147, 151, 154, 156, 157, 166, 167	2-20, 21	
	C-10	Instrument panel ECU	4-27, 36, 44, 51, 55, 59, 65, 70, 75, 77, 94, 95, 97, 98, 101, 109, 127, 128, 131, 132, 136, 143, 147, 151, 157, 167	2-20, 21	
	C-11	Instrument panel ECU	4-36, 44, 51, 96, 98, 143, 147, 151	2-20, 21	
	C-12	Clock setting switch	4-138	2-20, 21	
	C-14	Front door switch (LH)	4-69, 76, 77, 101, 109, 113, 160	2-20, 21	
	C-15	Seat belt switch	4-99	2-20, 21	
	D	D-05	Room lamp	4-68, 112	2-22, 23
		D-08	Sunroof switch	4-161	2-22, 23
D-09		Connection of sunroof harness and roof harness	4-160, 161	2-22, 23	
D-10		Sunroof motor	4-161	2-22, 23	
D-11		Sunroof ECU	4-160, 161	2-22, 23	
D-12		Connection of floor harness (LH) and rear door harness (LH)	4-104, 111	2-22, 23	
D-14		Front door switch (LH)	4-69, 76, 77, 101, 109, 113, 160	2-22, 23	
D-15		Seat belt switch	4-99	2-22, 23	
D-17		Accessory socket	4-139	2-22, 23	

	Connector No.	Parts name	Circuit diagram page	Wiring diagram page
D	D-18	Accessory socket	4-139	2-22, 23
	D-20	Connection of floor harness (RH) and rear door harness (RH)	4-105, 111	2-22, 23
	D-22	Front door switch (RH)	4-69, 76, 109, 113	2-22, 23
	D-25	Connection of floor harness (RH) and floor harness (LH)	4-68, 86, 90, 95, 104, 105, 111, 142	2-22, 23
E	E-01	Rear height motor (driver seat)	4-162	2-24
	E-02	Rear height limit switch (driver seat)	4-162	2-24
	E-03	Seat back reclining motor (driver seat)	4-163	2-24
	E-04	Front height limit switch (driver seat)	4-162	2-24
	E-05	Manual power seat switch (driver seat)	4-162	2-24
	E-06	Seat cushion slide motor (driver seat)	4-163	2-24
	E-07	Connection of floor harness and power seat harness (driver seat)	4-162	2-24
	E-08	Front height motor (driver seat)	4-162	2-24
	E-23	Seat cushion slide motor (front passenger seat)	4-165	2-25
	E-24	Seat back reclining motor (front passenger seat)	4-165	2-25
	E-25	Rear height limit switch (front passenger seat)	4-164	2-25
	E-26	Rear height motor (front passenger seat)	4-164	2-25
	E-27	Front height limit switch (front passenger seat)	4-164	2-25
	E-28	Manual power seat switch (front passenger seat)	4-164	2-25
	E-29	Connection of floor harness (RH) and power seat harness (front passenger seat)	4-164	2-25
	E-30	Front height motor (front passenger seat)	4-164	2-25
F	F-01	Tweeter (RH)	4-169	2-26, 27
	F-02	Door mirror (RH)	4-137	2-26, 27
	F-04	Tweeter (LH)	4-169	2-26, 27
	F-05	Door mirror (LH)	4-136	2-26, 27
	F-07	Door speaker (LH)	4-169	2-26, 27

	Connector No.	Parts name	Circuit diagram page	Wiring diagram page
F	F-08	Front door module (driver side)	4-102, 103, 109, 110, 113, 114, 136, 157	2-26, 27
	F-10	Front door module (driver side)	4-102, 103	2-26, 27
	F-11	Power window motor assembly (LH)	4-102	2-26, 27
	F-13	Power window switch (rear LH)	4-104	2-26, 27
	F-15	Door lock actuator (rear LH)	4-111	2-26, 27
	F-16	Power window motor assembly (rear LH)	4-104	2-26, 27
	F-17	Door lock actuator (front LH)	4-110, 114	2-26, 27
	F-18	Door courtesy lamp (LH)	4-75	2-26, 27
	F-20	Trunk lid and fuel tank door opener switch	4-116	2-26, 27
	F-21	Door lock actuator (rear RH)	4-105, 111	2-26, 27
	F-23	Power window motor assembly (rear RH)	4-105	2-26, 27
	F-24	Power window switch (rear RH)	4-105	2-26, 27
	F-25	Door lock actuator (front RH)	4-111	2-26, 27
	F-26	Door courtesy lamp (RH)	4-75	2-26, 27
	F-27	Power window motor assembly (front RH)	4-106	2-26, 27
	F-29	Front door module (passenger side)	4-106	2-26, 27
	F-30	Door speaker (RH)	4-169	2-26, 27
F-31	Door key cylinder switch	4-111	2-26, 27	
G	G-01	Rear personal lamp (RH)	4-68	2-28
	G-03	Rear speaker (RH)	4-169	2-28
	G-08	Rear personal lamp (LH)	4-68	2-28
	G-09	Rear door switch (LH)	4-69, 76, 109, 113	2-28
	G-10	Diode (for rear personal lamp LH)	4-68	2-28
	G-11	Rear speaker (LH)	4-169	2-28
	G-12	Trunk room lamp	4-72	2-28
	G-13	High mount stop lamp	4-78	2-28
	G-14	Receiver (keyless entry)	4-101, 112, 115, 116	2-28
	G-28	Rear door switch (RH)	4-69, 76, 109, 113	2-28
	G-29	Diode (for rear personal lamp RH)	4-68	2-28

	Connector No.	Parts name	Circuit diagram page	Wiring diagram page
G	G-30	Connection of floor harness (LH) and rear lid harness	4-61, 72, 79, 84	2-29
	G-31	Connection of floor harness (LH) and trunk room harness	4-60, 79, 81, 116, 170, 172	2-29
	G-33	Rear lid lamp (LH)	4-61, 79, 84	2-29
	G-34	Rear combination lamp (LH)	4-60, 79, 81	2-29
	G-35	CD changer	4-170	2-29
	G-36	License plate lamp (LH)	4-61	2-29
	G-37	Trunk room lamp switch	4-72	2-29
	G-38	License plate lamp (RH)	4-61	2-29
	G-40	Rear lid lamp (RH)	4-61, 79, 84	2-29
	G-41	Rear combination lamp (RH)	4-60, 79, 81	2-29
	G-42	Trunk lid and fuel tank door opener relay	4-116	2-29
	G-43	Trunk lid and fuel tank door opener actuator	4-116	2-29
	G-44	Motor antenna	4-172	2-29
H	H-01	Fuel pump and gauge unit	4-31, 39, 86, 90, 95	2-30
	H-03	Rear speed sensor (RH) <ABS>	4-142, 146	2-30
	H-08	Rear speed sensor (LH) <ABS>	4-142, 146	2-30
	H-09	Connection of floor harness (LH) and fuel harness	4-31, 39, 86, 90, 95	2-30

INDEX (In order of parts name)

	Parts name	Connector No.	Circuit diagram page	Wiring diagram page
A	A/C belt lock ECU	B-47	4-47, 20, 23	2-13, 17
	A/C compressor assembly	A-43	4-120, 121	2-5, 9
	A/C compressor relay	A-16X	4-11, 13, 121	2-4, 8
	A/C-ECU	B-12	4-119, 120, 124, 125, 135	2-12, 16
	A/C-ECU	B-13	4-47, 119, 120, 123, 124, 125, 135	2-12, 16
	A/T control relay	B-59	4-53	2-14, 18
	A/T control solenoid valve assembly	A-87	4-53	2-7, 11
	ABS-ECU	B-112	4-140, 141, 142, 144, 145, 146	2-15, 19
	Accessory socket	D-17	4-139	2-22, 23
	Accessory socket	D-18	4-139	2-22, 23
	Air bag module (squib) (passenger side)	B-05	4-155	2-12, 16
	Air flow sensor	A-72	4-36, 44	2-6, 10
	Air mixing damper motor/potentiometer	B-08	4-125	2-12, 16
	Air temperature sensor	A-37	4-125	2-5, 9
	Alternator	A-41	4-26	2-5, 9
	Alternator	A-42	4-26	2-5, 9
	Alternator relay	A-19X	4-11, 27	2-4, 8
	Ashtray	C-13	4-139	2-20, 21
	Assist ECU	B-49	4-69, 76, 86, 90, 95, 105, 109, 111, 113, 142, 146	2-13, 17
	Assist ECU	B-52	4-36, 44, 50, 151, 158	2-13, 17
Assist ECU	B-53	4-27, 36, 44, 51, 55, 59, 64, 69, 76, 94, 95, 97, 100, 106, 109, 111, 113, 126, 130, 137, 142, 146, 151, 157, 167	2-13, 17 ^f	
Assist ECU	B-54	4-27, 55, 59, 64, 94, 97, 100, 126, 130, 158, 167	2-13, 17	
Auto cruise actuator	A-03	4-150	2-4, 8	
Auto-cruise ECU	B-101	4-49, 149, 150, 152	2-15, 19	
B	Back up lamp switch (M/T)	A-104	4-84	2-7, 11
	Blower motor	B-04	4-118	2-12, 16
	Blower motor HI relay	B-03	4-119	2-12, 16
	Blower relay	B-83	4-3, 4, 21, 118	2-14, 18

	Parts name	Connector No.	Circuit diagram page	Wiring diagram page
B	Brake fluid level sensor	A-10	4-97	2-4, 8
C	CD changer	G-35	4-170	2-29
	Center warning display	C-02	4-27, 94, 95, 138	2-20, 21
	Checking connector	A-75	4-24, 31, 39	2-6, 10
	Clock setting switch	C-12	4-138	2-20, 21
	Clock spring	B-30	4-155	2-13, 17
	Clock spring	B-32	4-85, 151, 171	2-13, 17
	Column switch	B-22	4-127, 131	2-12, 16
	Column switch	B-25	4-81	2-12, 16
	Column switch	B-26	4-55	2-12, 16
	Column switch	B-27	4-55, 59, 65, 167	2-12, 16
	Combination meter	C-03	4-36, 44, 51, 75, 82, 86, 87, 89, 90, 91, 96, 97, 98, 143, 147, 151, 154, 157	2-20, 21
	Combination meter	C-04	4-36, 44, 51, 54, 75, 82, 86, 87, 91, 98, 154	2-20, 21
	Combination meter (standard meter)	C-05	4-75, 82, 86, 96, 147, 143, 151	2-20, 21
	Condenser	A-67	4-24	2-6, 10
	Condenser fan motor	A-45	4-47, 123	2-5, 9
	Condenser fan relay (HI)	A-21X	4-11, 47, 123	2-4, 8
	Condenser fan relay (LO)	A-20X	4-11, 47, 123	2-4, 8
	Connection of ABS harness and floor harness	B-51	4-142, 146	2-13, 17
	Connection of ABS harness and front harness	B-57	4-141, 142, 145, 146	2-13, 17
	Connection of control harness and battery harness	A-84	4-23, 50	2-6, 10
	Connection of control harness and injector harness	A-92	4-33, 41	2-7, 11
	Connection of control harness and power steering harness	A-60	4-35, 43	2-6, 10
	Connection of dash harness and ABS harness	B-01	4-140, 141, 142, 144, 145, 146	2-12, 16
Connection of dash harness and control harness	B-41	4-34, 42, 48, 49, 51, 52, 84, 87, 90, 108, 128, 132, 149, 150, 152, 159, 166	2-13, 17	
Connection of dash harness and control harness	B-42	4-42, 52, 87, 90, 108, 152	2-17	

	Parts name	Connector No.	Circuit diagram page	Wiring diagram page
C	Connection of dash harness and control harness	B-43	4-16, 23, 24, 30, 31, 38, 39, 49, 87, 91, 121, 150, 159	2-13, 17
	Connection of dash harness and floor harness	B-50	4-74, 104, 111	2-13, 17
	Connection of dash harness and floor harness (RH)	B-55	4-74, 106, 111, 137, 169	2-13, 17
	Connection of dash harness and front door harness (LH)	B-20	4-74, 102, 103, 108, 109, 110, 113, 114, 116, 136, 157, 169	2-12, 16
	Connection of dash harness and J/B	B-76	4-3, 4, 48, 49, 69, 76, 78, 80, 81, 84, 109, 113, 139, 140, 141, 144, 145, 148, 149, 154, 160, 168	2-14, 18
	Connection of dash harness and J/B	B-77	4-3, 4, 17, 18, 20, 21, 24, 27, 31, 39, 47, 49, 51, 80, 82, 84, 85, 87, 89, 91, 94, 95, 96, 98, 108, 118, 123, 126, 130, 135, 139, 141, 143, 145, 147, 148, 149, 154, 157, 158, 160, 161, 167, 168, 172	2-14, 18
	Connection of dash harness and J/B	B-78	4-3, 4, 34, 42, 48, 56, 58, 65, 68, 69, 74, 77, 80, 94, 95, 96, 99, 100, 108, 112, 118, 128, 132, 135, 137, 140, 144, 148, 154, 156, 157, 168	2-14, 18
	Connection of dash harness and roof harness	B-19	4-160	2-12, 16
	Connection of floor harness (LH) and fuel harness	H-09	4-31, 39, 86, 90, 95	2-30
	Connection of floor harness (LH) and rear lid harness	G-30	4-61, 72, 79, 84	2-29
	Connection of floor harness (LH) and trunk room harness	G-31	4-60, 79, 81, 116, 170, 172	2-29
	Connection of floor harness (LH) and rear door harness (LH)	D-12	4-104, 111	2-22, 23
	Connection of floor harness (RH) and floor harness (LH)	D-25	4-68, 86, 90, 95, 104, 105, 111, 142	2-22, 23
	Connection of floor harness (RH) and power seat harness (front passenger seat)	E-29	4-164	2-25
	Connection of floor harness (RH) and rear door harness (RH)	D-20	4-105, 111	2-22, 23
	Connection of floor harness and dash harness	B-91	4-60, 78, 139, 159, 162	2-15, 19
Connection of floor harness and dash harness	B-92	4-31, 39, 69, 76, 86, 90, 97, 109, 112, 113, 114, 115, 116, 159, 169, 172	2-15, 19	
Connection of floor harness and J/B	B-89	4-3, 4, 60, 68, 69, 72, 76, 77, 81, 84, 101, 109, 112, 113, 115, 116, 135, 139, 160, 168, 170, 172	2-15, 19	

	Parts name	Connector No.	Circuit diagram page	Wiring diagram page
C	Connection of floor harness and power seat harness (driver seat)	E-07	4-162	2-24
	Connection of front harness and control harness	A-28	4-30, 38, 42, 46, 48, 49, 121, 122, 150, 158	2-4, 8
	Connection of front harness and dash harness	B-73	4-47, 59, 60, 65, 80, 85, 120, 123, 125, 142, 146, 150, 157, 159, 167	2-14, 18
	Connection of front harness and dash harness	B-75	4-13, 16, 100, 159, 160, 162	2-14, 18
	Connection of front harness and J/B	B-84	4-3, 4, 17, 18, 27, 34, 42, 47, 48, 56, 58, 60, 65, 68, 72, 74, 77, 80, 81, 85, 86, 89, 94, 95, 96, 99, 100, 108, 112, 115, 116, 118, 123, 126, 128, 130, 132, 137, 138, 139, 140, 144, 148, 149, 154, 156, 158, 161, 167, 168	2-14, 18
	Connection of front harness and J/B	B-85	4-3, 4, 20, 48, 54, 77, 78, 108, 112, 116, 118, 135, 140, 144, 148, 156, 170	2-14, 18
	Connection of instrument panel and J/B	B-80	4-3, 4, 27, 31, 39, 49, 51, 54, 72, 74, 77, 80, 82, 86, 87, 89, 91, 94, 95, 96, 98, 138, 139, 143, 147, 148, 149, 154, 156, 157, 167	2-14, 18
	Connection of instrument panel harness and control harness	B-105	4-86, 87, 90, 91, 149, 157	2-15, 19
	Connection of instrument panel harness and dash harness	C-09	4-27, 36, 44, 51, 55, 59, 65, 70, 75, 77, 80, 86, 87, 89, 90, 91, 94, 95, 97, 99, 101, 108, 109, 119, 124, 127, 128, 131, 132, 136, 138, 143, 147, 151, 154, 156, 157, 166, 167	2-20, 21
	Connection of roof harness and J/B	B-79	4-3, 4, 68, 69, 112, 161	2-14, 18
	Connection of sunroof harness and roof harness	D-09	4-160, 161	2-22, 23
	Crank angle sensor	A-58	4-32, 40	2-6, 10
	Cruise control main switch	C-07	4-149	2-20, 21
D	Defogger relay	B-82	4-3, 4, 21, 135	2-14, 18
	Diagnosis connector	B-37	4-34, 42, 52, 56, 69, 65, 70, 75, 77, 94, 95, 96, 99, 101, 108, 115, 124, 128, 132, 137, 140, 144, 149, 154, 156	2-13, 17
	Diode (for cooling circuit)	B-70	4-46, 122	2-14, 18
	Diode (for door lamp)	B-116	4-74	2-15, 19
	Diode (for door lamp)	B-117	4-74	2-15, 19
	Diode (for rear personal lamp LH)	G-10	4-68	2-28
	Diode (for rear personal lamp RH)	G-29	4-68	2-28

	Parts name	Connector No.	Circuit diagram page	Wiring diagram page
D	Distributor assembly	A-82	4-24, 32, 40	2-6, 10
	Door courtesy lamp (LH)	F-18	4-75	2-26, 27
	Door courtesy lamp (RH)	F-26	4-75	2-26, 27
	Door key cylinder switch	F-31	4-111	2-26, 27
	Door lock actuator (front LH)	F-17	4-110, 114	2-26, 27
	Door lock actuator (front RH)	F-25	4-111	2-26, 27
	Door lock actuator (rear LH)	F-15	4-111	2-26, 27
	Door lock actuator (rear RH)	F-21	4-105, 111	2-26, 27
	Door mirror (LH)	F-05	4-136	2-26, 27
	Door mirror (RH)	F-02	4-137	2-26, 27
	Door speaker (LH)	F-07	4-169	2-26, 27
	Door speaker (RH)	F-30	4-169	2-26, 27
	Dual pressure switch	A-38	4-34, 47, 123	2-5, 9
E	EGR solenoid valve	A-98	4-33, 41	2-7, 11
	Engine control relay	B-102	4-30, 38	2-15, 19
	Engine-ECU<M/T> or Engine and A/T-ECU<A/T>	B-108	4-24, 30, 31, 32, 33, 34, 35, 36, 39, 41, 42, 44, 46, 121, 122	2-15, 19
	Engine-ECU<M/T> or Engine and A/T-ECU<A/T>	B-109	4-24, 30, 32, 34, 35, 36, 38, 40, 41, 42, 43, 44, 48, 52, 53, 121, 152	2-15, 19
	Engine-ECU<M/T> or Engine and A/T-ECU<A/T>	B-110	4-34, 35, 38, 40, 41, 42, 43, 49, 52, 53, 121, 152	2-15, 19
	Engine-ECU<M/T> or Engine and A/T-ECU<A/T>	B-111	4-30, 32, 33, 34, 35, 36, 48, 50, 53	2-15, 19
	ETACS-ECU	B-86	4-36, 44, 69, 76, 77, 97, 99, 101, 104, 109, 110, 113, 114, 143, 147, 158, 159	2-14, 18
	ETACS-ECU	B-87	4-101, 104, 111, 115	2-15, 19
	ETACS-ECU	B-90	4-3, 4, 69, 76, 77, 99, 101, 109, 113, 158, 160	2-15, 19
F	Fin thermo sensor	B-06	4-124	2-12, 16
	Fog lamp (LH)	A-34	4-64	2-5, 9
	Fog lamp (RH)	A-46	4-64	2-5, 9
	Fog lamp relay	A-18X	4-11, 16, 64	2-4, 8
	Foot lamp (LH)	B-36	4-68, 112	2-13, 17
	Foot lamp (RH)	B-48	4-68, 112	2-13, 17

	Parts name	Connector No.	Circuit diagram page	Wiring diagram page
F	Front door module (driver side)	F-08	4-102, 103, 109, 110, 113, 114, 136, 157	2-26, 27
	Front door module (driver side)	F-10	4-102, 103	2-26, 27
	Front door module (passenger side)	F-29	4-106	2-26, 27
	Front door switch (LH)	D-14	4-69, 76, 77, 101, 109, 113, 160	2-20, 21
	Front door switch (RH)	D-22	4-69, 76, 109, 113	2-20, 21
	Front height limit switch (front passenger seat)	E-27	4-164	2-25
	Front height limit switch (driver seat)	E-04	4-162	2-24
	Front height motor (driver seat)	E-08	4-162	2-24
	Front height motor (front passenger seat)	E-30	4-164	2-25
	Front speed sensor (LH)	A-14	4-142, 146	2-4, 8
	Front speed sensor (RH)	A-05	4-142, 146	2-4, 8
	Front turn signal lamp (LH)	A-29	4-81	2-4, 8
	Front turn signal lamp (RH)	A-53	4-81	2-5, 9
	Fuel pump and gauge unit	H-01	4-31, 39, 86, 90, 95	2-30
	Fuel pump control relay	B-103	4-31, 39	2-15, 19
G	Glove box lamp	C-14	4-72	2-20, 21
	Glove box lamp switch	C-15	4-72	2-20, 21
H	Hazard switch	B-11	4-80	2-12, 16
	Headlamp (HI:LH)	A-36	4-54	2-5, 9
	Headlamp (HI:RH)	A-47	4-54	2-5, 9
	Headlamp (LO:LH)	A-30	4-54	2-5, 9
	Headlamp (LO:RH)	A-51	4-54	2-5, 9
	Headlamp relay (HI)	A-25X	4-11, 15, 54	2-4, 8
	Headlamp relay (LO)	A-24X	4-11, 15, 54	2-4, 8
	High mount stop lamp	G-13	4-78	2-28
	Horn (LH)	A-32	4-85	2-5, 9
	Horn (LH)	A-33	4-85	2-5, 9
	Horn (RH)	A-49	4-85	2-5, 9
	Horn (RH)	A-50	4-85	2-5, 9
Horn relay	A-17X	4-11, 85	2-4, 8	

	Parts name	Connector No.	Circuit diagram page	Wiring diagram page
H	Hydraulic unit <ABS>	A-11	4-141, 145	2-4, 8
	Hydraulic unit <ABS>	A-76	4-141, 145	2-6, 10
I	Idle speed control servo	A-70	4-36, 44	2-6, 10
	Ignition key cylinder illumination lamp	B-21	4-77	2-12, 16
	Ignition switch	B-68	4-16	2-14, 18
	Inhibitor switch	A-89	4-23, 38, 50, 84	2-7, 11
	Injector (No.1)	A-105	4-33, 41	2-7, 11
	Injector (No.2)	A-103	4-33, 41	2-7, 11
	Injector (No.3)	A-101	4-33, 41	2-7, 11
	Injector (No.4)	A-100	4-33, 41	2-7, 11
	Injector (No.5)	A-97	4-33, 41	2-7, 11
	Injector (No.6)	A-96	4-33, 41	2-7, 11
	Input shaft speed sensor	A-86	4-53	2-6, 10
	Inside and outside air switching damper motor	B-02	4-125	2-12, 16
	Instrument panel ECU	B-23	4-51, 55, 56, 59, 65, 70, 75, 77, 94, 95, 96, 99, 101, 108, 127, 128, 131, 132, 137, 156, 167	2-12, 16
	Instrument panel ECU	C-10	4-27, 36, 44, 51, 55, 59, 65, 70, 75, 77, 94, 95, 97, 98, 101, 109, 127, 128, 131, 132, 136, 143, 147, 151, 157, 167	2-20, 21
Instrument panel ECU	C-11	4-36, 44, 51, 96, 98, 143, 147, 151	2-20, 21	
J	J/B(5)	B-71	4-5, 15, 46, 48, 60, 64, 72, 80, 81, 85, 86, 89, 118, 122, 126, 130, 138, 139, 148, 161, 167, 168	2-14, 18
K	Key reminder switch	B-69	4-69, 109, 113	2-14, 18
L	License plate lamp (LH)	G-36	4-61	2-29
	License plate lamp (RH)	G-38	4-61	2-29
M	Manual power seat switch (driver seat)	E-05	4-162	2-24
	Manual power seat switch (front passenger seat)	E-28	4-164	2-25
	Mode selector damper/potentiometer	B-65	4-125	2-14, 18
	Motor antenna	G-44	4-172	2-29
	Motor relay <ABS>	A-12	4-141, 145	2-4, 8
O	O2 sensor	B-107	4-40	2-15, 19

	Parts name	Connector No.	Circuit diagram page	Wiring diagram page
O	Oil pressure switch	A-44	4-94	2-5, 9
	Output shaft speed sensor	A-85	4-53	2-6, 10
P	Parking brake switch	B-14	4-97	2-12, 16
	Position indicator lamp assembly	B-99	4-51	2-15, 19
	Position lamp (LH)	A-35	4-60	2-5, 9
	Position lamp (RH)	A-48	4-60	2-5, 9
	Power steering oil pressure switch	A-57	4-35, 43	2-6, 10
	Power transistor	B-46	4-119	2-13, 17
	Power window motor assembly (front RH)	F-27	4-106	2-26, 27
	Power window motor assembly (LH)	F-11	4-102	2-26, 27
	Power window motor assembly (rear LH)	F-16	4-104	2-26, 27
	Power window motor assembly (rear RH)	F-23	4-105	2-26, 27
	Power window relay	A-15X	4-11, 13, 100	2-4, 8
	Power window switch (rear LH)	F-13	4-104	2-26, 27
	Power window switch (rear RH)	F-24	4-105	2-26, 27
	R	Radiator fan motor	A-39	4-46, 122
Radiator fan relay (HI)		A-27X	4-11, 46, 122	2-4, 8
Radiator fan relay (LO)		A-22X	4-11, 46, 122	2-4, 8
Radio and tape player		B-66	4-168, 169	2-14, 18
Radio and tape player		B-67	4-171	2-14, 18
Rear combination lamp (LH)		G-34	4-60, 79, 81	2-29
Rear combination lamp (RH)		G-41	4-60, 79, 81	2-29
Rear door switch (LH)		G-09	4-69, 76, 109, 113	2-28
Rear door switch (RH)		G-28	4-69, 76, 109, 113	2-28
Rear height limit switch (front passenger seat)		E-25	4-164	2-25
Rear height limit switch (driver seat)		E-02	4-162	2-24
Rear height motor (front passenger seat)		E-26	4-164	2-25
Rear height motor (driver seat)		E-01	4-162	2-24
Rear lid lamp (LH)		G-33	4-61, 79, 84	2-29

	Parts name	Connector No.	Circuit diagram page	Wiring diagram page
R	Rear lid lamp (RH)	G-40	4-61, 79, 84	2-29
	Rear personal lamp (LH)	G-08	4-68	2-28
	Rear personal lamp (RH)	G-01	4-68	2-28
	Rear speaker (LH)	G-11	4-169	2-28
	Rear speaker (RH)	G-03	4-169	2-28
	Rear speed sensor (LH) <ABS>	H-08	4-142, 146	2-30
	Rear speed sensor (RH) <ABS>	H-03	4-142, 146	2-30
	Receiver (keyless entry)	G-14	4-101, 112, 115, 116	2-28
	Rheostat	C-06	4-167	2-20, 21
	Room lamp	D-05	4-68, 112	2-22, 23
S	Seat back reclining motor (front passenger seat)	E-24	4-165	2-25
	Seat back reclining motor (driver seat)	E-03	4-163	2-24
	Seat belt switch	D-15	4-99	2-22, 23
	Seat cushion slide motor (front passenger seat)	E-23	4-165	2-25
	Seat cushion slide motor (driver seat)	E-06	4-163	2-24
	Side turn signal lamp (LH)	A-13	4-81	2-4, 8
	Side turn signal lamp (RH)	A-07	4-81	2-4, 8
	Speed alarm (standard meter)	B-118	4-87, 89	2-15, 19
	SRS-ECU	B-45	4-155	2-13, 17
	Starter	A-93	4-23	2-7, 11
	Starter	A-94	4-23	2-7, 11
	Stop lamp switch or vacant terminal	B-17	4-78, 140, 144	2-12, 16
	Stop lamp switch or vacant terminal	B-18	4-48, 78, 140, 144, 150	2-12, 16
	Sunlight sensor	C-01	4-124	2-20, 21
	Sunroof ECU	D-11	4-160, 161	2-22, 23
	Sunroof motor	D-10	4-161	2-22, 23
	Sunroof switch	D-08	4-161	2-22, 23
T	Tail lamp relay	A-23X	4-11, 15, 58, 64, 100, 167	2-4, 8
	Throttle position sensor	A-68	4-33, 41, 52, 152	2-6, 10
	Trunk lid and fuel tank door opener relay	G-42	4-116	2-29

	Parts name	Connector No.	Circuit diagram page	Wiring diagram page
T	Trunk lid and fuel tank door opener actuator	G-43	4-116	2-29
	Trunk lid and fuel tank door opener switch	F-20	4-116	2-26, 27
	Trunk room lamp	G-12	4-72	2-28
	Trunk room lamp switch	G-37	4-72	2-29
	Turn hazard flasher unit	B-81	4-3, 4, 80	2-14, 18
	Tweeter (LH)	F-04	4-169	2-26, 27
	Tweeter (RH)	F-01	4-169	2-26, 27
V	Valve relay <ABS>	A-77	4-141, 145	2-6, 10
	Variable resister	A-114	4-32, 40	2-7, 11
	Vehicle speed sensor	A-88	4-35, 43, 49, 87, 90, 108, 128, 132	2-7, 11
W	Water temperature gauge unit	A-90	4-86, 91	2-7, 11
	Water temperature sensor	A-91	4-32, 40	2-7, 11
	Water temperature sensor (for A/C)	B-09	4-124	2-12, 16
	Windshield washer motor	A-54	4-126, 130	2-5, 9
	Windshield wiper motor	A-09	4-126, 130	2-4, 8