

# MITSUBISHI SIGMA

## ELECTRICAL WIRING

### FOREWORD

This Electrical Wiring Manual contains information necessary for the inspection and servicing of electrical wiring of Mitsubishi Sigma edited in the form of wiring harness configuration diagrams and function-separated circuit diagrams.

It is recommended that all service mechanics engaged in the servicing of the vehicle refer to the following publications as well as this manual.

TECHNICAL INFORMATION MANUAL  
PYGE9603

WORKSHOP MANUAL  
CHASSIS GROUP  
PWGE9610

BODY REPAIR MANUAL  
PBGE9608

ENGINE GROUP  
PWEE□□□□  
(Looseleaf edition)

PARTS CATALOGUE  
□□□□□□□□

All information, illustrations and product descriptions contained in this manual are current as at the time of publication. We, however, reserve the right to make changes at any time without prior notice or obligation.

### GROUP INDEX

HOW TO READ THE WIRING DIAGRAMS .....	1
WIRING HARNESS CONFIGURATION DIAGRAMS ...	2
SINGLE PART INSTALLATION POSITION .....	3
CIRCUIT DIAGRAM .....	4
INDEX .....	



# **HOW TO USE THIS MANUAL**

## **CONTENTS**

The preceding page contains GROUP INDEX that lists the group title and group number.

## **PAGE NUMBERS**

All page numbers consist of two sets of digits separated by a dash. The digits preceding the dash identify the number of the group. The digits following the dash represent the consecutive page number within the group. The page number can be found on the top left or right of each page.

## **OPERATION AND TROUBLESHOOTING HINTS**

In the GROUP 4 circuit diagrams, the operation and troubleshooting hints are given on the previous page or following page for each circuit where necessary.