
1. General Description

A: COMPONENT


1. SECONDARY AIR PUMP

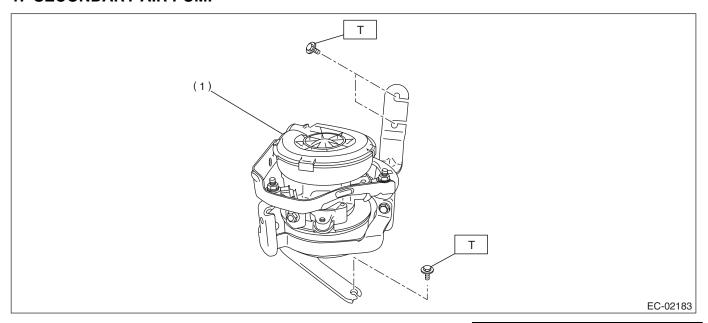

(1) Secondary air pump

Tightening torque:N·m (kgf-m, ft-lb)
T: 5 (0.5, 3.7)

2. SECONDARY AIR COMBINATION VALVE

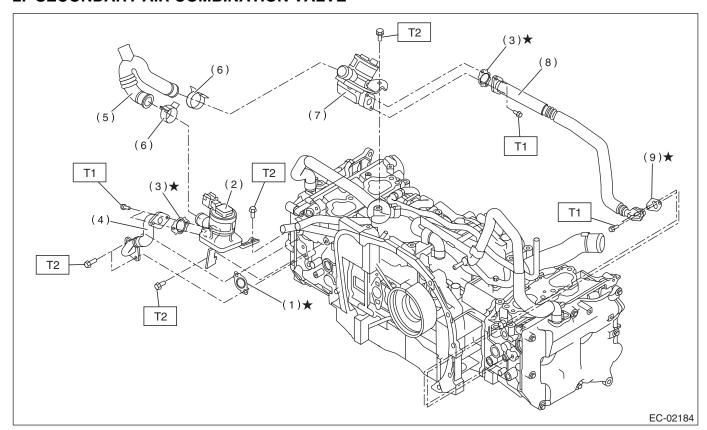

- (1) Gasket
- (2) Secondary air combination valve LH
- (3) Gasket
- (4) Pipe LH

- (5) Air duct
- (6) Clamp
- (7) Secondary air combination valve RH
- (8) Pipe RH

(9) Gasket

Tightening torque:N·m (kgf-m, ft-lb)

T1: 9 (0.9, 6.6)

T2: 19 (1.9, 13.7)

General Description

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

B: CAUTION

- Wear appropriate work clothing, including a cap, protective goggles and protective shoes when performing any work.
- Remove contamination including dirt and corrosion before removal, installation or disassembly.
- Keep the disassembled parts in order and protect them from dust and dirt.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly and replacement.

- Vehicle components are extremely hot after driving. Be wary of receiving burns from heated parts.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or rigid racks at the specified points.
- Before disconnecting connectors of sensors or units, be sure to disconnect the ground cable from the battery.

C: PREPARATION TOOL

1. SPECIAL TOOL

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
	18353AA000	CLAMP PLIERS	Used for removing and installing the PCV hose. This is a general tool made by the French company CAILLAU. (code) 54.0.000.205 To make this easier to obtain in the same way as genuine Subaru parts, it has been provided with a tool number as an ST.
ST18353AA000			