

Front Catalytic Converter


EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

2. Front Catalytic Converter

A: REMOVAL

1) Remove the center exhaust pipe. <Ref. to EX(H4DOTC)-8, REMOVAL, Center Exhaust Pipe.>

2) Disconnect the front catalytic converter (A) from the rear catalytic converter (B).

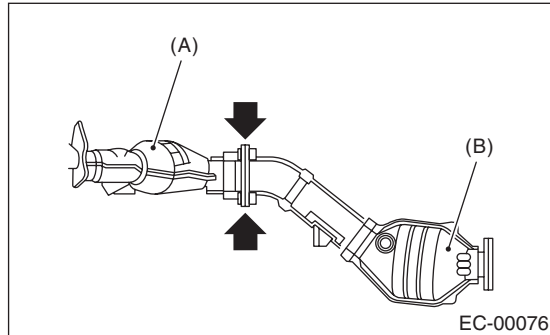

B: INSTALLATION

NOTE:

- Use a new gasket.
- Install in the reverse order of removal.

C: INSPECTION

- 1) Check the connections and welds for exhaust leaks.
- 2) Make sure there are no holes or rusting.