

Shut Valve

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

15.Shut Valve

A: REMOVAL

WARNING:

Place "NO FIRE" signs near the working area.


CAUTION:

Be careful not to spill fuel.


1) Remove the fuel filler pipe.

<Ref. to FU(H4DOTC)-53, REMOVAL, Fuel Filler Pipe.>

2) Disconnect the evaporation hose from shut valve.

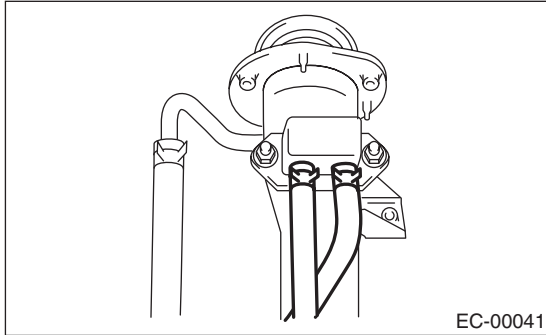

3) Remove the shut valve from the fuel filler pipe.

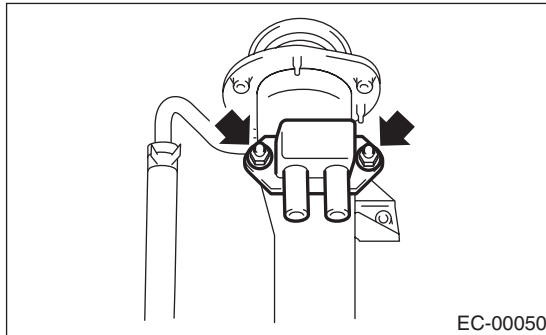


B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

4.5 N·m (0.46 kgf-m, 3.3 ft-lb)

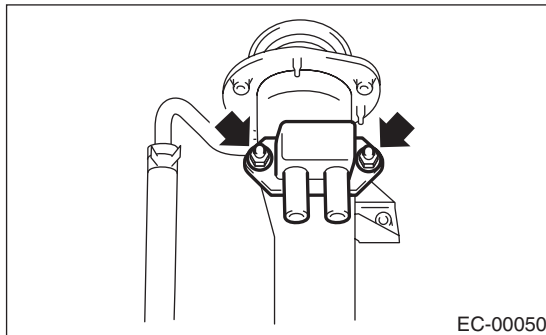

C: INSPECTION

Make sure the hoses are not cracked or loose.