

Tumble Generator Valve Position Sensor

FUEL INJECTION (FUEL SYSTEMS)

13. Tumble Generator Valve Position Sensor

A: SPECIFICATION

The tumble generator valve position sensor cannot be adjusted when installed, so it should not be removed from the tumble generator valve assembly. Refer to "Tumble Generator Valve Assembly" for removal and installation procedure. <Ref. to FU(H4DOTC)-36, REMOVAL, Tumble Generator Valve Assembly.> <Ref. to FU(H4DOTC)-36, INSTALLATION, Tumble Generator Valve Assembly.>