

### 3. Ignition Coil

#### A: REMOVAL

Direct ignition type has been adopted. Refer to "Spark Plug", "REMOVAL" for removal procedures. <Ref. to IG(H4DOTC)-4, REMOVAL, Spark Plug.>

#### B: INSTALLATION

Install in the reverse order of removal.

#### *Tightening torque:*

**16 N·m (1.6 kgf-m, 11.7 ft-lb)**

#### C: INSPECTION

For inspection procedures, refer to "Diagnostics for Engine Start Failure". <Ref. to EN(H4DOTC)(diag)-64, IGNITION CONTROL SYSTEM, Diagnostics for Engine Starting Failure.>

# Ignition Coil

IGNITION

---