# 25. Engine Trouble in General

### **A: INSPECTION**

#### NOTE:

"RANK" shown in the chart refers to the possibility of the cause of trouble in order "Very often" to "Rarely"

- A Very often
- B Sometimes
- C Rarely

Symptoms	Problem parts etc.	Possible cause	RANK
1. Engine does not start.			
1) Starter does not turn.	Starter	Defective battery-to-starter harness	В
		Defective starter switch	С
		Defective inhibitor switch or neutral switch	С
		Defective starter	В
	Battery	Improper connection of terminal	Α
		Run-down battery	Α
		Defective charging system	В
	Excessive friction	Seizure of crankshaft and connecting rod bearing	С
		Seized camshaft	С
		Seized or stuck piston and cylinder	С
2) Initial combustion does	Starter	Defective starter	С
not occur.	Engine control system <ref. basic="" diagnostic="" en(h4dotc)(diag)-2,="" procedure.="" to=""></ref.>		Α
	Fuel line	Defective fuel pump and relay	Α
		Clogged fuel line	С
		Lack of or insufficient fuel	В
	Timing belt	Degradation, etc.	В
		Defective timing	В
	Compression	Incorrect valve clearance	С
		Loosened spark plug or defective gasket	С
		Loosened cylinder head bolt or defective head gasket	С
		Improper valve sealing	С
		Defective valve stem	С
		Worn or broken valve spring	В
		Worn or stuck piston rings, cylinder and piston	С
		Incorrect valve timing	В
		Improper engine oil (low viscosity)	В

## **Engine Trouble in General**

### MECHANICAL

Symptoms	Problem parts etc.	Possible cause	RANK
3) Initial combustion occurs.	Engine control system <ref. basic="" diagnostic="" en(h4dotc)(diag)-2,="" procedure.="" to=""></ref.>		Α
	Intake system	Defective intake manifold gasket	В
		Defective throttle body gasket	В
	Fuel line	Defective fuel pump and relay	С
		Clogged fuel line	С
		Lack of or insufficient fuel	В
	Timing belt	Degradation, etc.	В
		Defective timing	В
	Compression	Incorrect valve clearance	С
		Loosened spark plug or defective gasket	С
		Loosened cylinder head bolt or defective head gasket	С
		Improper valve sealing	С
		Defective valve stem	С
		Worn or broken valve spring	В
		Worn or stuck piston rings, cylinder and piston	С
		Incorrect valve timing	В
		Improper engine oil (low viscosity)	В
) Engine stalls after initial	Engine control system <ref. basic="" diagnostic="" en(h4dotc)(diag)-2,="" procedure.="" to=""></ref.>		Α
combustion.	Intake system	Loosened or cracked intake duct	В
		Loosened or cracked PCV hose	С
		Loosened or cracked vacuum hose	С
		Defective intake manifold gasket	В
		Defective throttle body gasket	В
		Dirty air cleaner element	С
	Fuel line	Clogged fuel line	С
		Lack of or insufficient fuel	В
	Timing belt	Degradation, etc.	В
		Defective timing	В
	Compression	Incorrect valve clearance	С
		Loosened spark plug or defective gasket	С
		Loosened cylinder head bolt or defective head gasket	С
		Improper valve sealing	С
		Defective valve stem	С
		Worn or broken valve spring	В
		Worn or stuck piston rings, cylinder and piston	С
		Incorrect valve timing	В
		Improper engine oil (low viscosity)	В

Symptoms	Problem parts etc.	Possible cause	RANK
2. Rough idle and engine stall	Engine control system <ref. basic="" diagnostic="" en(h4dotc)(diag)-2,="" procedure.="" to=""></ref.>		Α
	Intake system	Loosened or cracked intake duct	Α
		Loosened or cracked PCV hose	Α
		Loosened or cracked vacuum hose	Α
		Defective intake manifold gasket	В
		Defective throttle body gasket	В
		Defective PCV valve	С
		Loosened oil filler cap	В
		Dirty air cleaner element	С
	Fuel line	Defective fuel pump and relay	С
		Clogged fuel line	С
		Lack of or insufficient fuel	В
	Timing belt	Defective timing	С
	Compression	Incorrect valve clearance	В
		Loosened spark plug or defective gasket	В
		Loosened cylinder head bolt or defective head gasket	В
		Improper valve sealing	В
		Defective valve stem	С
		Worn or broken valve spring	В
		Worn or stuck piston rings, cylinder and piston	В
		Incorrect valve timing	Α
		Improper engine oil (low viscosity)	В
	Lubrication system	Incorrect oil pressure	В
		Defective rocker cover gasket	С
	Cooling system	Overheating	С
	Others	Evaporative emission control system malfunction	Α
		Stuck or damaged throttle valve	В
		Accelerator cable out of adjustment	С

Symptoms	Problem parts etc.	Possible cause	RANK
3. Low output, hesitation and	Engine control system <ref. i<="" td="" to=""><td>EN(H4DOTC)(diag)-2, Basic Diagnostic Procedure.&gt;</td><td>Α</td></ref.>	EN(H4DOTC)(diag)-2, Basic Diagnostic Procedure.>	Α
poor acceleration	Intake system	Loosened or cracked intake duct	Α
		Loosened or cracked PCV hose	Α
		Loosened or cracked vacuum hose	В
		Defective intake manifold gasket	В
		Defective throttle body gasket	В
		Defective PCV valve	В
		Loosened oil filler cap	В
		Dirty air cleaner element	Α
	Fuel line	Defective fuel pump and relay	В
		Clogged fuel line	В
		Lack of or insufficient fuel	С
	Timing belt	Defective timing	В
	Compression	Incorrect valve clearance	В
	Compression	Loosened spark plug or defective gasket	В
		Loosened cylinder head bolt or defective head gasket	В
		Improper valve sealing	В
		Defective valve stem	С
		Worn or broken valve spring	В
		Worn or stuck piston rings, cylinder and piston	С
		Incorrect valve timing	A
		Improper engine oil (low viscosity)	В
	Lubrication system	Incorrect oil pressure	В
	Cooling system	Overheating	С
		Over-cooling	С
	Others	Evaporative emission control system malfunction	Α
4. Surging	Engine control system <ref. i<="" td="" to=""><td>EN(H4DOTC)(diag)-2, Basic Diagnostic Procedure.&gt;</td><td>Α</td></ref.>	EN(H4DOTC)(diag)-2, Basic Diagnostic Procedure.>	Α
	Intake system	Loosened or cracked intake duct	Α
		Loosened or cracked PCV hose	Α
		Loosened or cracked vacuum hose	Α
		Defective intake manifold gasket	В
		Defective throttle body gasket	В
		Defective PCV valve	В
		Loosened oil filler cap	В
		Dirty air cleaner element	В
	Fuel line	Defective fuel pump and relay	В
		Clogged fuel line	В
		Lack of or insufficient fuel	С
	Timing belt	Defective timing	В
	Compression	Incorrect valve clearance	В
	Compression	Loosened spark plug or defective gasket	С
		Loosened cylinder head bolt or defective head gasket	С
		Improper valve sealing	С
		Defective valve stem	С
		Worn or broken valve spring	С
		·	С
		Worn or stuck piston rings, cylinder and piston	
		Incorrect valve timing	A
	On allian assets as	Improper engine oil (low viscosity)	В
	Cooling system	Overheating	В
	Others	Evaporative emission control system malfunction	С

Symptoms	Problem parts etc.	Possible cause	RANK
5. Engine does not return to	<u> </u>	EN(H4DOTC)(diag)-2, Basic Diagnostic Procedure.>	A
idle.	Intake system	Loosened or cracked vacuum hose	A
	Others	Stuck or damaged throttle valve	A
	Guillere	Accelerator cable out of adjustment	В
6. Dieseling (Run-on)	Engine control system <ref. 8<="" td="" to=""><td>EN(H4DOTC)(diag)-2, Basic Diagnostic Procedure.&gt;</td><td>A</td></ref.>	EN(H4DOTC)(diag)-2, Basic Diagnostic Procedure.>	A
or brocoming (internal)	Cooling system	Overheating	В
	Others	Evaporative emission control system malfunction	В
7. After burning in exhaust		EN(H4DOTC)(diag)-2, Basic Diagnostic Procedure.>	A
system	Intake system	Loosened or cracked intake duct	С
		Loosened or cracked PCV hose	С
		Loosened or cracked vacuum hose	В
		Defective PCV valve	В
		Loosened oil filler cap	С
	Timing belt	Defective timing	В
	Compression	Incorrect valve clearance	В
	Сотргосски	Loosened spark plug or defective gasket	С
		Loosened cylinder head bolt or defective head gasket	С
		Improper valve sealing	В
		Defective valve stem	С
		Worn or broken valve spring	С
		Worn or stuck piston rings, cylinder and piston	С
		Incorrect valve timing	A
	Lubrication system	Incorrect oil pressure	С
	Cooling system	Over-cooling	С
	Others	Evaporative emission control system malfunction	С
8. Knocking	Engine control system <ref. basic="" diagnostic="" en(h4dotc)(diag)-2,="" procedure.="" to=""></ref.>		Α
	Intake system	Loosened oil filler cap	В
	Timing belt	Defective timing	В
	Compression	Incorrect valve clearance	С
	·	Incorrect valve timing	В
	Cooling system	Overheating	Α
9. Excessive engine oil	Intake system	Loosened or cracked PCV hose	Α
consumption		Defective PCV valve	В
		Loosened oil filler cap	С
	Compression	Defective valve stem	Α
		Worn or stuck piston rings, cylinder and piston	Α
	Lubrication system	Loosened oil pump attaching bolts and defective gasket	В
		Defective oil filter o-ring	В
		Defective crankshaft oil seal	В
		Defective rocker cover gasket	В
		Loosened oil drain plug or defective gasket	В
		Loosened oil pan fitting bolts or defective oil pan	В

# **Engine Trouble in General**

### MECHANICAL

Symptoms	Problem parts etc.	Possible cause	RANK
consumption  Intake system Timing belt Compression  Lubrication s	Engine control system <re< td=""><td colspan="2">Engine control system <ref. basic="" diagnostic="" en(h4dotc)(diag)-2,="" procedure.="" to=""></ref.></td></re<>	Engine control system <ref. basic="" diagnostic="" en(h4dotc)(diag)-2,="" procedure.="" to=""></ref.>	
	Intake system	Dirty air cleaner element	Α
	Timing belt	Defective timing	В
	Compression	Incorrect valve clearance	В
		Loosened spark plug or defective gasket	С
		Loosened cylinder head bolt or defective head gasket	С
		Improper valve sealing	В
		Defective valve stem	С
		Worn or broken valve spring	С
		Worn or stuck piston rings, cylinder and piston	В
		Incorrect valve timing	В
	Lubrication system	Incorrect oil pressure	С
	Cooling system	Over-cooling	С