

Engine & Cooling

Fuel

Ignition

Electrical

Running gear

Torque settings

Capacities

Notes & Illustrations



Automotive Technical
DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENU

HELP

Engine and cooling system155, 1.8 T-Spark CAT1992 to 1997

Type		AR 671.02 DOHC 93kW
Capacity (cm³) / number of cylinders		1773 / 4
Compression ratio / pressure	bar	10.0 / _
Oil pressure	bar	1.0 [5.0]
Oil temperature	°C	90
Valve clearance - inlet	mm	0.38 to 0.45
Valve clearance - exhaust	mm	0.43 to 0.50
Firing order		1-3-4-2
No 1 cylinder position		F
Thermostat opening temperature	°C	87±2
Radiator cap pressure	bar	0.98±0.10

Fuel system155, 1.8 T-Spark CAT1992 to 1997

Idle speed - manual [auto]	rpm	840±50
Fast idle speed - manual [auto]	rpm	_
CO @ idle speed [3000 rpm] - see page VI	%	≤0.2
HC @ idle speed [3000 rpm] - see page VI	ppm	≤50
CO2 @ idle speed [3000 rpm] - see page VI	%	_
O2 @ idle speed [3000 rpm] - see page VI	%	_
Carburettor / fuel injection		_ Bosch
Type / ref		M1.7-Motronic
Main jet / needle		_
Injection pressure	bar	2.8 to 3.2
Pump pressure	bar	2.8 to 3.2
Octane rating	RON	95[U]

Ignition system155, 1.8 T-Spark CAT1992 to 1997

Type		Motronic Static
Ignition coil		2xBosch
Primary resistance	ohms	0.50
Ballast resistor	ohms	_
Voltage - Tmnl 15(+) to earth	V	_
Distributor		_
Points gap (air gap)	mm	_
Dwell angle	° (%)	Computer control
Condenser capacity	µF	_
Rotation		_
Ignition timing - basic [static	° Crankshaft @ rpm	Computer control N/A
V = Vacuum NV = No Vacuum		
Total ignition advance	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	_
	° Crankshaft @ rpm	_
Centrifugal check.	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	_
	° Crankshaft @ rpm	_
Vacuum range check	mbar	Computer control
Maximum vacuum advance	° Crankshaft	_
Spark plugs		Lodge/Champion
Type		25HLD / C6YCC
Electrode gap	mm	Champion: 0.70

Electrical system155, 1.8 T-Spark CAT1992 to 1997

Battery	V / CC / RC	12 / 45Ah, 320 / 60Ah
Alternator voltage / full load current / engine rpm		14.0 / 80 / 3000
Starter motor current / voltage - cranking	A / V	350 / 9.0
- locked	A / V	750 / 4.0

Running gear155, 1.8 T-Spark CAT1992 to 1997

Brakes -		
Front (min. friction material thickness)	mm	3.0
Rear (min. friction material thickness)	mm	3.0

Tyres		
Saloon	Size	185/60x14: 195/65x14:205/50x15
Estate / Van	Size	_
Pressure - front / rear - Saloon	bar	2.2 / 2.0
- Estate / Van	bar	_

Front suspension / wheel alignment		
Toe-in (+) / Toe-out (-)	mm [°]	0
Camber		-20'±20' U/L
Castor		+3°30'±20' U/L
King pin inclination		+11°30'

Rear suspension / wheel alignment		
Toe-in (+) / Toe-out (-)	mm [°]	+0.5±0.2 U/L
Camber		-1°±15' U/L


Torque wrench settings155, 1.8 T-Spark CAT1992 to 1997

Cylinder head - stage 1	Nm	76 to 84
- stage 2	Nm	Warm engine, then cool
Cylinder head - stage 3	Nm	-360°
- stage 4	Nm	83 to 91
Big-end bearings	Nm	49 to 54 oiled
Main bearings	Nm	20 + 115°
Clutch cover	Nm	32 to 40
Flywheel [driveplate]	Nm	116 to 129
Front hubs	Nm	67 to 73 + 62±2°
Rear hubs	Nm	304 to 336
Wheel nuts / bolts	Nm	90
Spark plugs	Nm	28 to 35 oiled

Capacities155, 1.8 T-Spark CAT1992 to 1997

Engine oil & filter	litres	5.0
Gearbox - 4-speed [5-speed]	litres	2.0
Automatic transmission - refill	litres	_
Final drive	litres	WT
Cooling system	litres	8.3
Fuel tank	litres	63

Notes and Illustrations

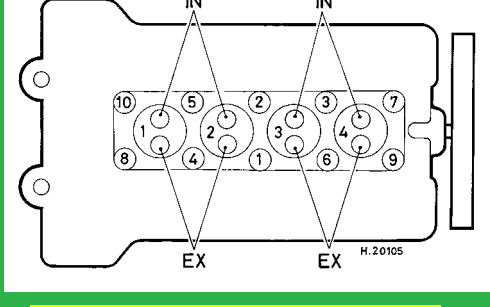

1773 cm³