

Engine & Cooling

Fuel

Ignition


Electrical

Running gear

Torque settings

Capacities

Notes & Illustrations

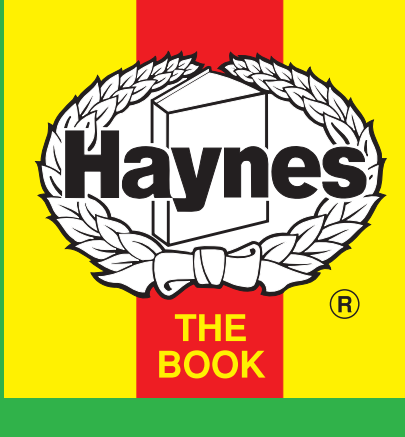

Automotive Technical
DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENU

HELP

Engine and cooling system

Coupé & Cabrio, 2.0 CAT

1992 to 1997

Type		ABK (85kW) SOHC 8V
Capacity (cm³) / number of cylinders		1984 / 4
Compression ratio / pressure	bar	10.4 / ≥9.0
Oil pressure	bar	[2.0]
Oil temperature	°C	80
Valve clearance - inlet	mm	0: Hyd.
Valve clearance - exhaust	mm	0: Hyd.
Firing order		1-3-4-2
No 1 cylinder position		TBE
Thermostat opening temperature	°C	87
Radiator cap pressure	bar	1.2 to 1.5

Fuel system

Coupé & Cabrio, 2.0 CAT

1992 to 1997

Idle speed - manual [auto]	rpm	820±50 N/A
Fast idle speed - manual [auto]	rpm	2500 to 2800
CO @ idle speed [3000 rpm] - see page VI	%	≤0.5 [≤0.3] N/A
HC @ idle speed [3000 rpm] - see page VI	ppm	≤200
CO2 @ idle speed [3000 rpm] - see page VI	%	—
O2 @ idle speed [3000 rpm] - see page VI	%	—
Carburettor / fuel injection		Volkswagen
Type / ref		Digifant
Main jet / needle		—
Injection pressure	bar	2.5
Pump pressure	bar	3.0
Octane rating	RON	95[U]

Ignition system

Coupé & Cabrio, 2.0 CAT

1992 to 1997

Type		Digifant
Ignition coil		N152
Primary resistance	ohms	0.5 to 0.7
Ballast resistor	ohms	—
Voltage - Tmnl 15(+) to earth	V	—
Distributor		—
Points gap (air gap)	mm	—
Dwell angle	° (%)	—
Condenser capacity	µF	—
Rotation		—
Ignition timing - basic [static	° Crankshaft @ rpm	6±1 BTDC @ 2000 to 2500 N/A
V = Vacuum NV = No Vacuum		—
Total ignition advance	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Centrifugal check.	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Vacuum range check	mbar	Computer control
Maximum vacuum advance	° Crankshaft	—
Spark plugs		NGK
Type		BUR6ET
Electrode gap	mm	0.70 to 0.90

Electrical system

Coupé & Cabrio, 2.0 CAT

1992 to 1997

Battery	V / CC / RC	12 / _
Alternator voltage / full load current / engine rpm		12.5 to 14.5 / _ / 2000
Starter motor current / voltage - cranking	A / V	—
- locked	A / V	—

Running gear

Coupé & Cabrio, 2.0 CAT

1992 to 1997

Brakes -		
Front (min. friction material thickness)	mm	2.0
Rear (min. friction material thickness)	mm	2.0

Tyres		
Saloon	Size	175/70x14: 195/60x14 ¹
Estate / Van	Size	—
Pressure - front / rear - Saloon	bar	2.1 / 2.1 ²
- Estate / Van	bar	—

Front suspension / wheel alignment		
Toe-in (+) / Toe-out (–)	mm [°]	[+10'±10']
Camber		-50'±30'
Castor		+1°15'±30'. Sport: +1°25'±30'
King pin inclination		—

Rear suspension / wheel alignment		
Toe-in (+) / Toe-out (–)	mm [°]	[+20'±20']
Camber		-1°±20'

Torque wrench settings

Coupé & Cabrio, 2.0 CAT

1992 to 1997

Cylinder head - stage 1	Nm	40 N
- stage 2	Nm	60
Cylinder head - stage 3	Nm	+ 90°
- stage 4	Nm	+ 90°
Big-end bearings	Nm	30 + 90°
Main bearings	Nm	65
Clutch cover	Nm	25
Flywheel [driveplate]	Nm	60 + 90° N
Front hubs	Nm	265LkC ³
Rear hubs	Nm	WSM
Wheel nuts / bolts	Nm	110
Spark plugs	Nm	20

Capacities

Coupé & Cabrio, 2.0 CAT

1992 to 1997


Engine oil & filter	litres	3.0
Gearbox - 4-speed [5-speed]	litres	2.4
Automatic transmission - refill	litres	3.0
Final drive	litres	AT: 1.0
Cooling system	litres	7.0
Fuel tank	litres	68

Notes and Illustrations

¹Also 205/60x15: 205/50x15

²205/50x15: 2.3 / 2.3

³PAS M14: 120 + 90°. PAS M16: 200 + 90°

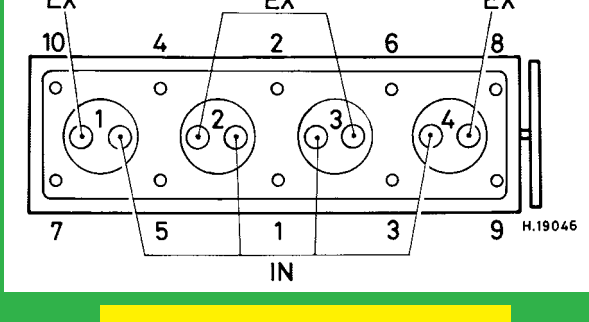

1984 cm³, 8v