

Engine & Cooling

Fuel

Ignition


Electrical

Running gear

Torque settings

Capacities

Notes & Illustrations

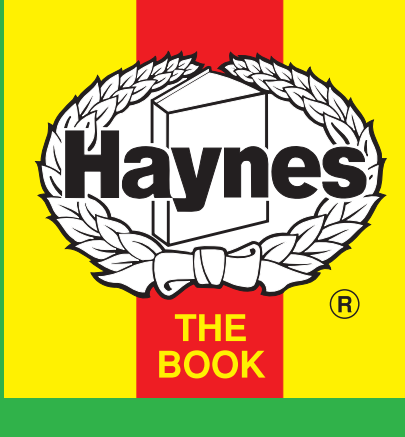

Automotive Technical
DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENU

HELP

Engine and cooling system ZX 2.0i 16V 1996 to 1997

Type	XU10J4RS (RFS) 120kW	
Capacity (cm³) / number of cylinders	1998 / 4	
Compression ratio / pressure	bar	10.4 / _
Oil pressure	bar	2.0 [3.5 to 5.5]
Oil temperature	°C	80
Valve clearance - inlet	mm	0: Hyd.
Valve clearance - exhaust	mm	0: Hyd.
Firing order	1-3-4-2	
No 1 cylinder position	FE	
Thermostat opening temperature	°C	83
Radiator cap pressure	bar	1.4

Fuel system ZX 2.0i 16V 1996 to 1997

Idle speed - manual [auto]	rpm	850±50 N/A
Fast idle speed - manual [auto]	rpm	_
CO @ idle speed [3000 rpm] - see page VI	%	_
HC @ idle speed [3000 rpm] - see page VI	ppm	_
CO2 @ idle speed [3000 rpm] - see page VI	%	≥11.0
O2 @ idle speed [3000 rpm] - see page VI	%	_
Carburettor / fuel injection	Magneti-Marelli	
Type / ref	1AP10 MPI	
Main jet / needle	_	
Injection pressure	bar	2.0 to 2.5
Pump pressure	bar	_
Octane rating	RON	95[U]

Ignition system ZX 2.0i 16V 1996 to 1997

Type	Direct electronic	
Ignition coil	4xValeo BAE 01 (1 per plug)	
Primary resistance	ohms	0.65
Ballast resistor	ohms	_
Voltage - Tmnl 15(+) to earth	V	_
Distributor	_	
Points gap (air gap)	mm	_
Dwell angle	° (%)	_
Condenser capacity	µF	_
Rotation	_	
Ignition timing - basic [static	° Crankshaft @ rpm	Computer control N/A
V = Vacuum NV = No Vacuum	_	
Total ignition advance	° Crankshaft @ rpm	_
	° Crankshaft @ rpm	_
	° Crankshaft @ rpm	_
Centrifugal check.	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	_
	° Crankshaft @ rpm	_
Vacuum range check	mbar	Computer control
Maximum vacuum advance	° Crankshaft	_
Spark plugs	Eyquem/Champion	
Type	RFC58LS / RC7YCC	
Electrode gap	mm	0.80

Electrical system ZX 2.0i 16V 1996 to 1997

Battery	V / CC / RC	12 / 200 / _
Alternator voltage / full load current / engine rpm	13.8 to 14.5 / 65 / 3600	
Starter motor current / voltage - cranking	A / V	220 /
- locked	A / V	350 /

Running gear ZX 2.0i 16V 1996 to 1997

Brakes -		
Front (min. friction material thickness)	mm	2.0
Rear (min. friction material thickness)	mm	2.0

Tyres		
Saloon	Size	195/55x15
Estate / Van	Size	_
Pressure - front / rear - Saloon	bar	2.2 / 2.3
- Estate / Van	bar	_

Front suspension / wheel alignment		
Toe-in (+) / Toe-out (-)	mm [°]	+1.0 to 3.0. PAS: +1.0 to 3.0
Camber	0±40' N/A	
Castor	+3°±40'. PAS: +3°±40' N/A	
King pin inclination	+10°45'±40'	

Rear suspension / wheel alignment		
Toe-in (+) / Toe-out (-)	mm [°]	+2.5 to 6.0
Camber	-1°±40'	

Torque wrench settings ZX 2.0i 16V 1996 to 1997


Cylinder head - stage 1	Nm	35
- stage 2	Nm	70
Cylinder head - stage 3	Nm	+ 160°
- stage 4	Nm	_
Big-end bearings	Nm	50
Main bearings	Nm	75
Clutch cover	Nm	20
Flywheel [driveplate]	Nm	50 LkC
Front hubs	Nm	320
Rear hubs	Nm	200
Wheel nuts / bolts	Nm	90
Spark plugs	Nm	25

Capacities ZX 2.0i 16V 1996 to 1997

Engine oil & filter	litres	4.25
Gearbox - 4-speed [5-speed]	litres	1.9
Automatic transmission - refill	litres	_
Final drive	litres	WT
Cooling system	litres	9.0
Fuel tank	litres	56. 96 ►: 54

Notes and Illustrations

—

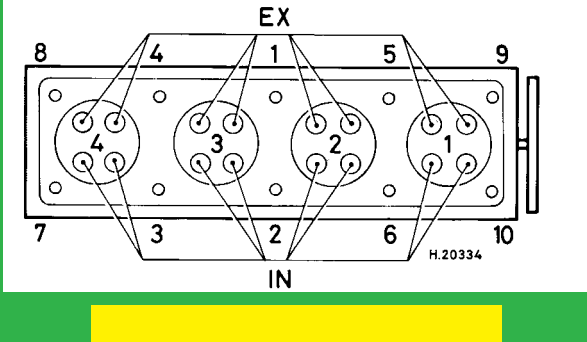

1998 cm³, 16V