


Engine & Cooling	Fuel	Ignition	Electrical	Running gear	Torque settings	Capacities	Notes & Illustrations
------------------	------	----------	------------	--------------	-----------------	------------	-----------------------

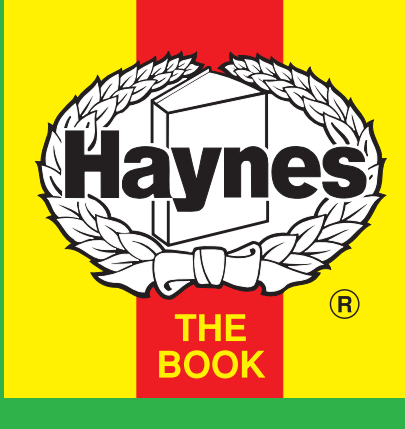

Automotive Technical
DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENU	HELP
------	------

Engine and cooling systemEscort 1.3i & Van1995 to 1997

Type		Endura-E JJA/J4C 37Kw EEC 96
Capacity (cm³) / number of cylinders		1297 / 4
Compression ratio / pressure	bar	9.5 / 13 to 16
Oil pressure	bar	0.6 [1.5]
Oil temperature	°C	80
Valve clearance - inlet	mm	0.20
Valve clearance - exhaust	mm	0.30
Firing order		1-2-4-3
No 1 cylinder position		TCE
Thermostat opening temperature	°C	85 to 89
Radiator cap pressure	bar	1.2

Fuel systemEscort 1.3i & Van1995 to 1997

Idle speed - manual [auto]	rpm	900±50
Fast idle speed - manual [auto]	rpm	—
CO @ idle speed [3000 rpm] - see page VI	%	—
HC @ idle speed [3000 rpm] - see page VI	ppm	—
CO2 @ idle speed [3000 rpm] - see page VI	%	—
O2 @ idle speed [3000 rpm] - see page VI	%	—
Carburettor / fuel injection		_Ford
Type / ref		EEC V SEFI
Main jet / needle		—
Injection pressure	bar	1.0
Pump pressure	bar	—
Octane rating	RON	95[U]

Ignition systemEscort 1.3i & Van1995 to 1997

Type		EEC V
Ignition coil		—
Primary resistance	ohms	0.40 to 0.60
Ballast resistor	ohms	—
Voltage - Tmnl 15(+) to earth	V	—
Distributor		—
Points gap (air gap)	mm	—
Dwell angle	° (%)	—
Condenser capacity	µF	—
Rotation		—
Ignition timing - basic [static	° Crankshaft @ rpm	Computer control N/A
V = Vacuum NV = No Vacuum		—
Total ignition advance	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Centrifugal check.	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Vacuum range check	mbar	Computer control
Maximum vacuum advance	° Crankshaft	—
Spark plugs		_/Champion
Type		RS9YCC
Electrode gap	mm	1.00

Electrical systemEscort 1.3i & Van1995 to 1997

Battery	V / CC / RC	—
Alternator voltage / full load current / engine rpm		—
Starter motor current / voltage - cranking	A / V	—
- locked	A / V	—

Running gearEscort 1.3i & Van1995 to 1997

Brakes -		
Front (min. friction material thickness)	mm	1.5
Rear (min. friction material thickness)	mm	1.0

Tyres		
Saloon	Size	155x13: 175/70x13: 185/60x14
Estate / Van	Size	165x13: 175/70x13: 185/60x14
Pressure - front / rear - Saloon	bar	2.0 / 1.8
- Estate / Van	bar	2.0 / 1.8

Front suspension / wheel alignment		
Toe-in (+) / Toe-out (–)	mm [°]	+2.0±1.0
Camber		-19'±1°24'. Van: -23'±1°24'
Castor		+1°12'±1°10'. Van: +37'±1°20'
King pin inclination		—

Rear suspension / wheel alignment		
Toe-in (+) / Toe-out (–)	mm [°]	+2.0±2.0
Camber		-1°+30'-1°


Torque wrench settingsEscort 1.3i & Van1995 to 1997

Cylinder head - stage 1	Nm	30. Re-use bolts once
- stage 2	Nm	+ 90°
Cylinder head - stage 3	Nm	+ 90°
- stage 4	Nm	—
Big-end bearings	Nm	4 + 90°
Main bearings	Nm	95
Clutch cover	Nm	30
Flywheel [driveplate]	Nm	67
Front hubs	Nm	270
Rear hubs	Nm	270
Wheel nuts / bolts	Nm	85
Spark plugs	Nm	17

CapacitiesEscort 1.3i & Van1995 to 1997

Engine oil & filter	litres	3.25
Gearbox - 4-speed [5-speed]	litres	2.8
Automatic transmission - refill	litres	—
Final drive	litres	WT
Cooling system	litres	7.1
Fuel tank	litres	55

Notes and Illustrations

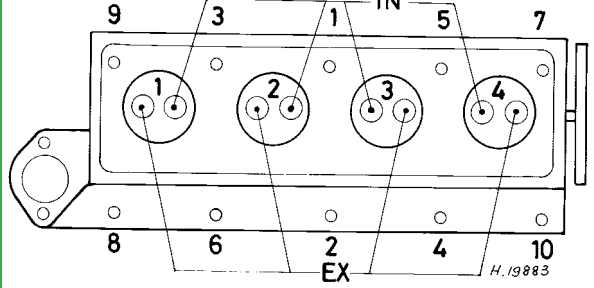

1297 cm³, Endura-E