


Engine & Cooling	Fuel	Ignition	Electrical	Running gear	Torque settings	Capacities	Notes & Illustrations
------------------	------	----------	------------	--------------	-----------------	------------	-----------------------

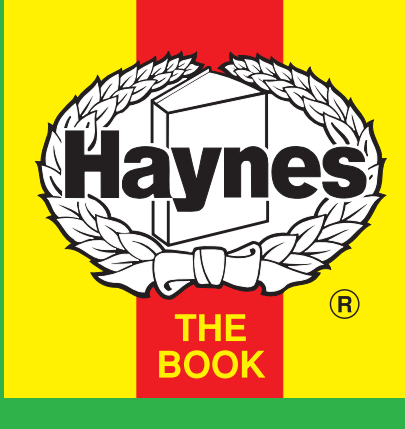

Automotive Technical
DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENU	HELP
------	------

Engine and cooling systemMondeo 2.0i 16V1996 to 1997

Type		Zetec-E NGA 16V EEC96 96kW
Capacity (cm³) / number of cylinders		1988 / 4
Compression ratio / pressure	bar	10.0 / _
Oil pressure	bar	1.3 to 2.5 [3.7 to 5.5]
Oil temperature	°C	80
Valve clearance - inlet	mm	0: Hyd.
Valve clearance - exhaust	mm	0: Hyd.
Firing order		1-3-4-2
No 1 cylinder position		TBE
Thermostat opening temperature	°C	85 to 89
Radiator cap pressure	bar	_

Fuel systemMondeo 2.0i 16V1996 to 1997

Idle speed - manual [auto]	rpm	800±50 N/A
Fast idle speed - manual [auto]	rpm	_
CO @ idle speed [3000 rpm] - see page VI	%	≤0.5 N/A
HC @ idle speed [3000 rpm] - see page VI	ppm	≤200
CO2 @ idle speed [3000 rpm] - see page VI	%	_
O2 @ idle speed [3000 rpm] - see page VI	%	_
Carburettor / fuel injection		Ford
Type / ref		EEC V / SEFI
Main jet / needle		_
Injection pressure	bar	2.1±0.2
Pump pressure	bar	2.7±0.2
Octane rating	RON	95[U]

Ignition systemMondeo 2.0i 16V1996 to 1997

Type		EEC V
Ignition coil		2x high output DIS
Primary resistance	ohms	0.5±0.05
Ballast resistor	ohms	_
Voltage - Tmnl 15(+) to earth	V	_
Distributor		_
Points gap (air gap)	mm	_
Dwell angle	° (%)	_
Condenser capacity	µF	_
Rotation		_
Ignition timing - basic [static	° Crankshaft @ rpm	Computer control N/A
V = Vacuum NV = No Vacuum		
Total ignition advance	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	_
	° Crankshaft @ rpm	_
Centrifugal check.	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	_
	° Crankshaft @ rpm	_
Vacuum range check	mbar	Computer control
Maximum vacuum advance	° Crankshaft	_
Spark plugs		Motorcraft
Type		AYRF22PP
Electrode gap	mm	1.30

Electrical systemMondeo 2.0i 16V1996 to 1997

Battery	V / CC / RC	12 / _
Alternator voltage / full load current / engine rpm		14.8 / 90, 95 / 3000
Starter motor current / voltage - cranking	A / V	_
- locked	A / V	_

Running gearMondeo 2.0i 16V1996 to 1997

Brakes -		
Front (min. friction material thickness)	mm	_
Rear (min. friction material thickness)	mm	_

Tyres		
Saloon	Size	185/65x14;195/60x14:205/55x15
Estate / Van	Size	185/65x14;195/60x14:205/55x15
Pressure - front / rear - Saloon	bar	2.1 / 2.1
- Estate / Van	bar	2.4 / 2.4

Front suspension / wheel alignment

Toe-in (+) / Toe-out (-)	mm [°]	[+10'±10']
Camber		45' to 1°45'.Est: 47' to 1°43'
Castor		+2°11'±1°. Estate: 2°14'
King pin inclination		_

Rear suspension / wheel alignment

Toe-in (+) / Toe-out (-)	mm [°]	[+18'±12']
Camber		-25'. Estate: -26'


Torque wrench settingsMondeo 2.0i 16V1996 to 1997

Cylinder head - stage 1	Nm	25
- stage 2	Nm	45
Cylinder head - stage 3	Nm	+ 105°
- stage 4	Nm	_
Big-end bearings	Nm	15 + 90°
Main bearings	Nm	80
Clutch cover	Nm	30
Flywheel [driveplate]	Nm	112
Front hubs	Nm	340
Rear hubs	Nm	290. Estate: 65
Wheel nuts / bolts	Nm	85
Spark plugs	Nm	15

CapacitiesMondeo 2.0i 16V1996 to 1997

Engine oil & filter	litres	4.25
Gearbox - 4-speed [5-speed]	litres	2.0
Automatic transmission - refill	litres	_
Final drive	litres	WT
Cooling system	litres	6.6
Fuel tank	litres	61.5

Notes and Illustrations

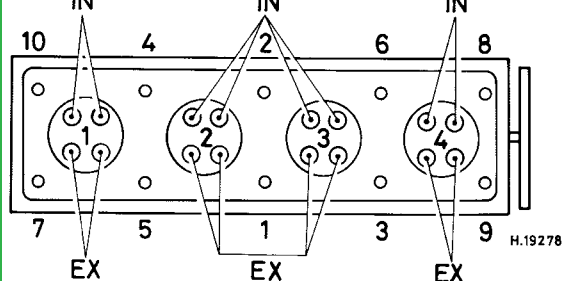

1988 cm³, 16V