 


Engine & CoolingFuelIgnitionElectricalRunning gearTorque settingsCapacitiesNotes & Illustrations

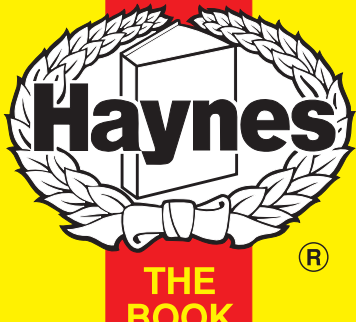

Automotive Technical
DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENUHELP

Engine and cooling system

Fiesta 1.1i & Van CAT1989 to 1997

Type		G6A HCS 37kW. US 83
Capacity (cm ³) / number of cylinders		1119 / 4
Compression ratio / pressure	bar	8.8 / 13 to 16
Oil pressure	bar	0.6 [1.5]
Oil temperature	°C	80
Valve clearance - inlet	mm	0.20 to 0.25
Valve clearance - exhaust	mm	0.30 to 0.35
Firing order		1-2-4-3
No 1 cylinder position		TCE
Thermostat opening temperature	°C	85 to 89
Radiator cap pressure	bar	1.0

Fuel system

Fiesta 1.1i & Van CAT1989 to 1997

Idle speed - manual [auto]	rpm	900±50
Fast idle speed - manual [auto]	rpm	—
CO @ idle speed [3000 rpm] - see page VI	%	≤0.3
HC @ idle speed [3000 rpm] - see page VI	ppm	≤200
CO ₂ @ idle speed [3000 rpm] - see page VI	%	—
O ₂ @ idle speed [3000 rpm] - see page VI	%	—
Carburettor / fuel injection		Ford
Type / ref		EEC IV / CFI
Main jet / needle		—
Injection pressure	bar	1.0
Pump pressure	bar	≥3.0
Octane rating	RON	95[U]

Ignition system

Fiesta 1.1i & Van CAT1989 to 1997

Type		E-DIS 4
Ignition coil		High output DIS
Primary resistance	ohms	0.5 to 1.0
Ballast resistor	ohms	—
Voltage - Tmnl 15(+) to earth	V	—
Distributor		—
Points gap (air gap)	mm	—
Dwell angle	° (%)	—
Condenser capacity	µF	—
Rotation		—
Ignition timing - basic [static	° Crankshaft @ rpm	[10±2 BTDC] N/A
V = Vacuum NV = No Vacuum		—
Total ignition advance	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Centrifugal check.	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Vacuum range check	mbar	Computer control
Maximum vacuum advance	° Crankshaft	—
Spark plugs		Motorcraft/Champion
Type		AGRF22C1 / RS9YC
Electrode gap	mm	1.00

Electrical system

Fiesta 1.1i & Van CAT1989 to 1997

Battery	V / CC / RC	12 / 270 / 50, 360 / 60,500/70
Alternator voltage / full load current / engine rpm		13.7 to 14.6 / 50, 70 / 4000
Starter motor current / voltage - cranking	A / V	—
- locked	A / V	—

Running gear

Fiesta 1.1i & Van CAT1989 to 1997

Brakes -		
Front (min. friction material thickness)	mm	1.5
Rear (min. friction material thickness)	mm	1.0

Tyres		
Saloon	Size	145x13: 155/70x13: 165/65x13
Estate / Van	Size	145x13
Pressure - front / rear - Saloon	bar	1.8 / 1.8 ¹
- Estate / Van	bar	1.8 / 1.8

Front suspension / wheel alignment		
Toe-in (+) / Toe-out (–)	mm [°]	0±1.0 ²
Camber		+25'±1°15' [+12'±1°15'] ³
Castor		+23'±1° [+18'±1°] ⁴
King pin inclination		—

Rear suspension / wheel alignment		
Toe-in (+) / Toe-out (–)	mm [°]	+0.2±2.0 ⁵
Camber		-1°1'+30'-1° ⁶

Torque wrench settings

Fiesta 1.1i & Van CAT1989 to 1997

Cylinder head - stage 1	Nm	30
- stage 2	Nm	+ 90°
Cylinder head - stage 3	Nm	+ 90°
- stage 4	Nm	—
Big-end bearings	Nm	4 + 90°
Main bearings	Nm	88 to 102
Clutch cover	Nm	24 to 35
Flywheel [driveplate]	Nm	64 to 70
Front hubs	Nm	205 to 235
Rear hubs	Nm	250 to 290
Wheel nuts / bolts	Nm	100
Spark plugs	Nm	14 to 20

Capacities


Fiesta 1.1i & Van CAT1989 to 1997

Engine oil & filter	litres	3.25
Gearbox - 4-speed [5-speed]	litres	3.1
Automatic transmission - refill	litres	3.5
Final drive	litres	WT
Cooling system	litres	7.1
Fuel tank	litres	42


Notes and Illustrations

¹155/70x13: 2.0 / 1.8
²90 ►: -2.0±1.0
³S: +22'±1°15'. 90 ►: -8'±1°20'. Van: -3'±1°20'. 92 ►: -9'±1°20'. Van: -6'±1°20'
⁴S: +36'±1°. 90 ►: +53'±1°15'. Van: +51'±1°15'. 92 ► +52'±1°15'. Van: +53'±1°15'
⁵S: +0.5±2.0. 4.90 ►: +2.3±2.0
⁶4.90 ►: -1°+30'-1°

 1: Idle speed2: CO / Mixture

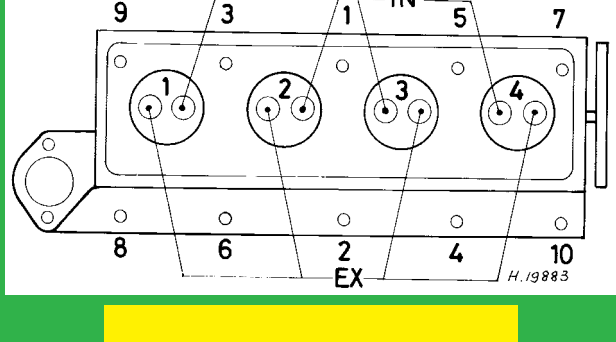

1119 cm³

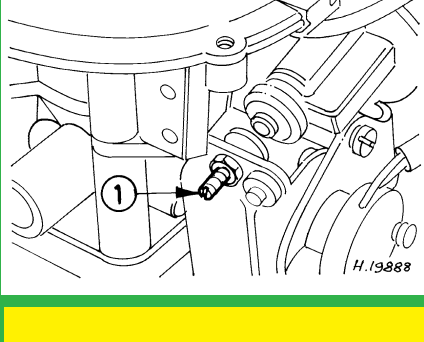 

Weber CFI