


Engine & Cooling	Fuel	Ignition	Electrical	Running gear	Torque settings	Capacities	Notes & Illustrations
------------------	------	----------	------------	--------------	-----------------	------------	-----------------------

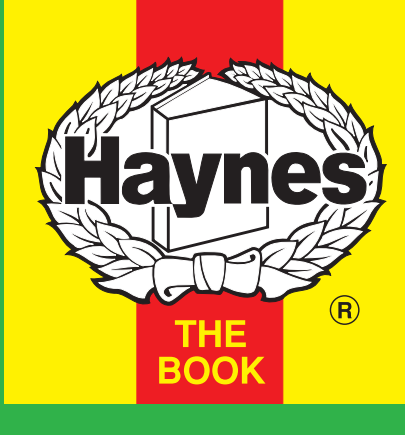

Automotive Technical
DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENU	HELP
------	------

Engine and cooling systemFiesta 1.4 16V1995 to 1997

Type	Zetec SE FHA DOHC 16V 66kW	
Capacity (cm³) / number of cylinders	1388 / 4	
Compression ratio / pressure	bar	10.3 / _
Oil pressure	bar	1.4 [3.0]
Oil temperature	°C	80
Valve clearance - inlet	mm	0.17 to 0.23
Valve clearance - exhaust	mm	0.27 to 0.33
Firing order	1-3-4-2	
No 1 cylinder position	TBE	
Thermostat opening temperature	°C	85 to 89
Radiator cap pressure	bar	1.20

Fuel systemFiesta 1.4 16V1995 to 1997

Idle speed - manual [auto]	rpm	N/A
Fast idle speed - manual [auto]	rpm	_
CO @ idle speed [3000 rpm] - see page VI	%	_
HC @ idle speed [3000 rpm] - see page VI	ppm	_
CO2 @ idle speed [3000 rpm] - see page VI	%	_
O2 @ idle speed [3000 rpm] - see page VI	%	_
Carburettor / fuel injection	_Ford	
Type / ref	EEC V SEFI	
Main jet / needle	_	
Injection pressure	bar	2.7
Pump pressure	bar	_
Octane rating	RON	95[U]

Ignition systemFiesta 1.4 16V1995 to 1997

Type	EEC V	
Ignition coil		
Primary resistance	ohms	0.4 to 0.6
Ballast resistor	ohms	_
Voltage - Tmnl 15(+) to earth	V	_
Distributor	_	
Points gap (air gap)	mm	_
Dwell angle	° (%)	_
Condenser capacity	µF	_
Rotation	_	
Ignition timing - basic [static	° Crankshaft @ rpm	Computer control N/A
V = Vacuum NV = No Vacuum		
Total ignition advance	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	_
	° Crankshaft @ rpm	_
Centrifugal check.	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	_
	° Crankshaft @ rpm	_
Vacuum range check	mbar	Computer control
Maximum vacuum advance	° Crankshaft	_
Spark plugs	_/Champion	
Type	RE7YCC	
Electrode gap	mm	1.00

Electrical systemFiesta 1.4 16V1995 to 1997

Battery	V / CC / RC	_
Alternator voltage / full load current / engine rpm		
Starter motor current / voltage - cranking	A / V	_
- locked	A / V	_

Running gearFiesta 1.4 16V1995 to 1997

Brakes -		
Front (min. friction material thickness)	mm	1.5
Rear (min. friction material thickness)	mm	1.5

Tyres		
Saloon	Size	185/55x14
Estate / Van	Size	_
Pressure - front / rear - Saloon	bar	2.2 / 1.8
- Estate / Van	bar	_

Front suspension / wheel alignment		
Toe-in (+) / Toe-out (-)	mm [°]	0±1.0
Camber	-40'±1°10'. PAS: -37'±1°10'	
Castor	1°20'±1°15'. PAS: 2°14'±1°15'	
King pin inclination	_	

Rear suspension / wheel alignment		
Toe-in (+) / Toe-out (-)	mm [°]	2.3±2.0
Camber	-1°±70'	


Torque wrench settingsFiesta 1.4 16V1995 to 1997

Cylinder head - stage 1	Nm	15
- stage 2	Nm	30
Cylinder head - stage 3	Nm	+90°
- stage 4	Nm	_
Big-end bearings	Nm	8 + 90°
Main bearings	Nm	WSM
Clutch cover	Nm	30
Flywheel [driveplate]	Nm	85
Front hubs	Nm	270
Rear hubs	Nm	270
Wheel nuts / bolts	Nm	85
Spark plugs	Nm	15

CapacitiesFiesta 1.4 16V1995 to 1997

Engine oil & filter	litres	4.0
Gearbox - 4-speed [5-speed]	litres	2.8
Automatic transmission - refill	litres	
Final drive	litres	WT
Cooling system	litres	7.1
Fuel tank	litres	42

Notes and Illustrations

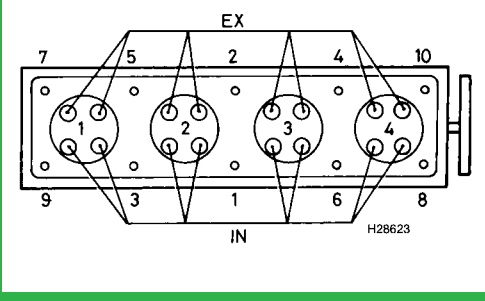

1388 cm³, 16V