

Engine & Cooling

Fuel

Ignition

Electrical

Running gear

Torque settings

Capacities

Notes & Illustrations



Automotive Technical
DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENU

HELP

Engine and cooling systemPrelude 2.0i 16V CAT1992 to 1997

Type		F20A4 SOHC 16V 98kW
Capacity (cm ³) / number of cylinders		1997 / 4
Compression ratio / pressure	bar	9.5 / ≥9.3
Oil pressure	bar	0.7 [3.5]
Oil temperature	°C	80
Valve clearance - inlet	mm	0.24 to 0.28
Valve clearance - exhaust	mm	0.28 to 0.32
Firing order		1-3-4-2
No 1 cylinder position		TBE
Thermostat opening temperature	°C	76 to 80
Radiator cap pressure	bar	0.93 to 1.23

Fuel systemPrelude 2.0i 16V CAT1992 to 1997

Idle speed - manual [auto]	rpm	770±50
Fast idle speed - manual [auto]	rpm	1400±200
CO @ idle speed [3000 rpm] - see page VI	%	≤0.1 N/A
HC @ idle speed [3000 rpm] - see page VI	ppm	≤200
CO2 @ idle speed [3000 rpm] - see page VI	%	—
O2 @ idle speed [3000 rpm] - see page VI	%	—
Carburettor / fuel injection		Honda
Type / ref		PGM-Fi MPI
Main jet / needle		—
Injection pressure	bar	2.4 to 2.8
Pump pressure	bar	2.5
Octane rating	RON	95[U]

Ignition systemPrelude 2.0i 16V CAT1992 to 1997

Type		Computerized
Ignition coil		—
Primary resistance	ohms	0.6 to 0.8
Ballast resistor	ohms	—
Voltage - Tmnl 15(+) to earth	V	—
Distributor		Hitachi
Points gap (air gap)	mm	—
Dwell angle	° (%)	—
Condenser capacity	µF	—
Rotation		Clockwise
Ignition timing - basic [static	° Crankshaft @ rpm	15±2 BTDC @ 770±50
V = Vacuum NV = No Vacuum		—
Total ignition advance	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Centrifugal check.	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Vacuum range check	mbar	Computer control
Maximum vacuum advance	° Crankshaft	—
Spark plugs		NGK/Champion
Type		ZFR6F-11 / RC7YCC
Electrode gap	mm	1.00 to 1.10

Electrical systemPrelude 2.0i 16V CAT1992 to 1997

Battery	V / CC / RC	12 / 52, 65Ah
Alternator voltage / full load current / engine rpm		13.5 to 14.5 / 65, 80 / 3000
Starter motor current / voltage - cranking	A / V	—
- locked	A / V	—

Running gearPrelude 2.0i 16V CAT1992 to 1997

Brakes -		
Front (min. friction material thickness)	mm	1.6
Rear (min. friction material thickness)	mm	1.6

Tyres		
Saloon	Size	195/60x14: 195/65x14
Estate / Van	Size	—
Pressure - front / rear - Saloon	bar	2.0 / 2.0
- Estate / Van	bar	—

Front suspension / wheel alignment

Toe-in (+) / Toe-out (–)	mm [°]	0±2.0
Camber		0±1°
Castor		+2°40'±30'
King pin inclination		—

Rear suspension / wheel alignment

Toe-in (+) / Toe-out (–)	mm [°]	+2.0±2.0
Camber		-45'±1°. 4WS: -45'±30'


Torque wrench settingsPrelude 2.0i 16V CAT1992 to 1997

Cylinder head - stage 1	Nm	40 oiled
- stage 2	Nm	70
Cylinder head - stage 3	Nm	100
- stage 4	Nm	—
Big-end bearings	Nm	32
Main bearings	Nm	35, then 75 oiled
Clutch cover	Nm	26
Flywheel [driveplate]	Nm	105 [75]
Front hubs	Nm	250
Rear hubs	Nm	185
Wheel nuts / bolts	Nm	110
Spark plugs	Nm	18


CapacitiesPrelude 2.0i 16V CAT1992 to 1997

Engine oil & filter	litres	3.8
Gearbox - 4-speed [5-speed]	litres	1.9
Automatic transmission - refill	litres	2.4
Final drive	litres	WT
Cooling system	litres	7.1 [7.0]
Fuel tank	litres	60

Notes and Illustrations

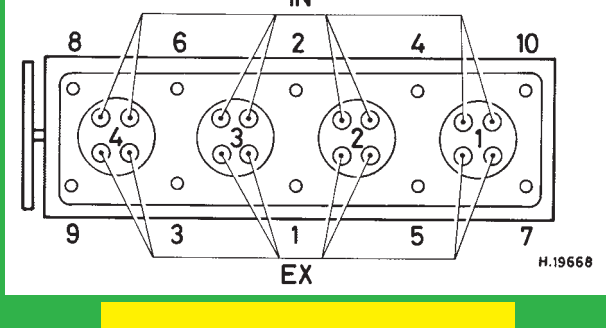

1997 cm³

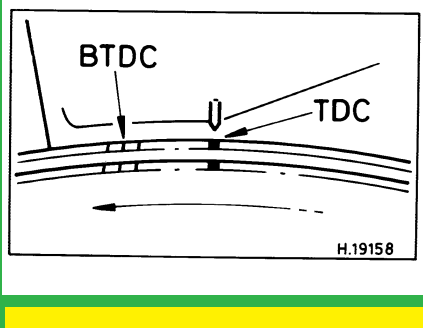

1997 cm³