

Engine & Cooling

Fuel

Ignition

Electrical

Running gear

Torque settings

Capacities

Notes & Illustrations



Automotive Technical
DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENU

HELP

Engine and cooling systemCivic & CRX 1.6 VT CAT1990 to 1991

Type		B16A1 DOHC 16V VTEC
Capacity (cm ³) / number of cylinders		1595 / 4
Compression ratio / pressure	bar	10.2 / ≥9.3
Oil pressure	bar	0.7 [3.5]
Oil temperature	°C	80
Valve clearance - inlet	mm	0.15 to 0.19
Valve clearance - exhaust	mm	0.17 to 0.21
Firing order		1-3-4-2
No 1 cylinder position		TBE
Thermostat opening temperature	°C	78±2
Radiator cap pressure	bar	0.74 to 1.03

Fuel systemCivic & CRX 1.6 VT CAT1990 to 1991

Idle speed - manual [auto]	rpm	750±50
Fast idle speed - manual [auto]	rpm	1600 to 2000
CO @ idle speed [3000 rpm] - see page VI	%	≤0.1
HC @ idle speed [3000 rpm] - see page VI	ppm	≤200
CO2 @ idle speed [3000 rpm] - see page VI	%	—
O2 @ idle speed [3000 rpm] - see page VI	%	—
Carburettor / fuel injection		Honda
Type / ref		PGM-Fi
Main jet / needle		—
Injection pressure	bar	2.5 to 2.6
Pump pressure	bar	2.5
Octane rating	RON	95[U]

Ignition systemCivic & CRX 1.6 VT CAT1990 to 1991

Type		Computerized
Ignition coil		—
Primary resistance	ohms	0.63 to 0.77
Ballast resistor	ohms	—
Voltage - Tmnl 15(+) to earth	V	—
Distributor		Denso
Points gap (air gap)	mm	[equal gaps]
Dwell angle	° (%)	—
Condenser capacity	µF	—
Rotation		Clockwise
Ignition timing - basic [static	° Crankshaft @ rpm	15±2 BTDC @ idle
V = Vacuum NV = No Vacuum		V
Total ignition advance	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Centrifugal check.	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Vacuum range check	mbar	Computer control
Maximum vacuum advance	° Crankshaft	—
Spark plugs		NGK/Champion
Type		BKR6E-N11 / RC7YCC
Electrode gap	mm	1.00 to 1.10

Electrical systemCivic & CRX 1.6 VT CAT1990 to 1991

Battery	V / CC / RC	12 / 47Ah
Alternator voltage / full load current / engine rpm		13.5 to 16.0 / 70 / 2000
Starter motor current / voltage - cranking	A / V	280 to 350 / 8.0
- locked	A / V	380 / 5.0

Running gearCivic & CRX 1.6 VT CAT1990 to 1991

Brakes -		
Front (min. friction material thickness)	mm	1.6
Rear (min. friction material thickness)	mm	1.6

Tyres		
Saloon	Size	195/60x14
Estate / Van	Size	—
Pressure - front / rear - Saloon	bar	1.9 / 1.8
- Estate / Van	bar	—

Front suspension / wheel alignment

Toe-in (+) / Toe-out (–)	mm [°]	0±2.0
Camber		0±1°
Castor		+3°±1°
King pin inclination		—

Rear suspension / wheel alignment

Toe-in (+) / Toe-out (–)	mm [°]	+2.0+2.0-1.0
Camber		-30'±1°

Torque wrench settingsCivic & CRX 1.6 VT CAT1990 to 1991

Cylinder head - stage 1	Nm	30 oiled
- stage 2	Nm	85
Cylinder head - stage 3	Nm	—
- stage 4	Nm	—
Big-end bearings	Nm	32
Main bearings	Nm	58 oiled
Clutch cover	Nm	26
Flywheel [driveplate]	Nm	105
Front hubs	Nm	185
Rear hubs	Nm	185
Wheel nuts / bolts	Nm	110
Spark plugs	Nm	18

 
CapacitiesCivic & CRX 1.6 VT CAT1990 to 1991

Engine oil & filter	litres	4.0
Gearbox - 4-speed [5-speed]	litres	2.1
Automatic transmission - refill	litres	—
Final drive	litres	WT
Cooling system	litres	4.7
Fuel tank	litres	45


Notes and Illustrations




1: Idle speed 2: CO / Mixture

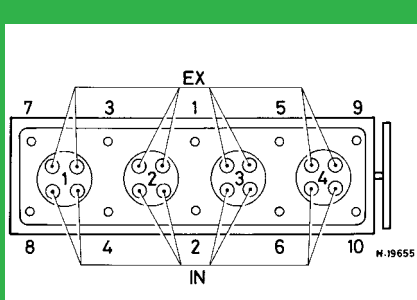


1595 cm³

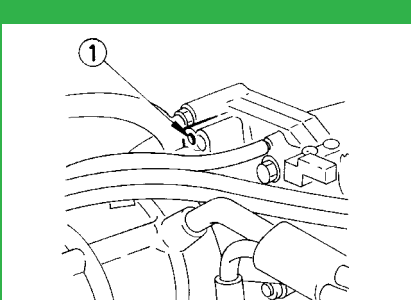 

PGM-Fi, 1595 cm³

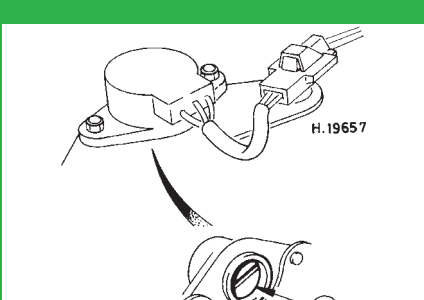 

PGM-Fi, 1595 cm³

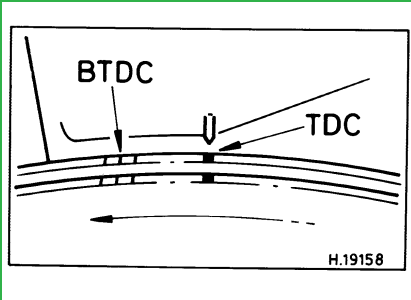 

1595 cm³