

Engine & Cooling

Fuel

Ignition

Electrical

Running gear

Torque settings

Capacities

Notes & Illustrations



Automotive Technical
DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENU

HELP

Engine and cooling systemAccent 1.3i1995 to 1997

Type		SOHC 62kW
Capacity (cm³) / number of cylinders		1341 / 4
Compression ratio / pressure	bar	9.5 /
Oil pressure	bar	1.5
Oil temperature	°C	80
Valve clearance - inlet	mm	0: Hyd.
Valve clearance - exhaust	mm	0: Hyd.
Firing order		1-3-4-2
No 1 cylinder position		TBE
Thermostat opening temperature	°C	88
Radiator cap pressure	bar	0.80 to 1.10

Fuel systemAccent 1.3i1995 to 1997

Idle speed - manual [auto]	rpm	800±100
Fast idle speed - manual [auto]	rpm	—
CO @ idle speed [3000 rpm] - see page VI	%	≤0.2
HC @ idle speed [3000 rpm] - see page VI	ppm	≤50
CO2 @ idle speed [3000 rpm] - see page VI	%	—
O2 @ idle speed [3000 rpm] - see page VI	%	—
Carburettor / fuel injection		_ Hyundai
Type / ref		MPI
Main jet / needle		—
Injection pressure	bar	—
Pump pressure	bar	—
Octane rating	RON	95[U]

Ignition systemAccent 1.3i1995 to 1997

Type		Electronic
Ignition coil		—
Primary resistance	ohms	—
Ballast resistor	ohms	—
Voltage - Tmnl 15(+) to earth	V	—
Distributor		—
Points gap (air gap)	mm	—
Dwell angle	° (%)	—
Condenser capacity	µF	—
Rotation		—
Ignition timing - basic [static	° Crankshaft @ rpm	7±5 BTDC @ 800±100
V = Vacuum NV = No Vacuum		—
Total ignition advance	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Centrifugal check.	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Vacuum range check	mbar	Computer control
Maximum vacuum advance	° Crankshaft	—
Spark plugs		NGK
Type		BKR5ES-11
Electrode gap	mm	1.00 to 1.10

Electrical systemAccent 1.3i1995 to 1997

Battery	V / CC / RC	12 / 45Ah
Alternator voltage / full load current / engine rpm		14.7±0.3 / 75 / _
Starter motor current / voltage - cranking	A / V	—
- locked	A / V	—

Running gearAccent 1.3i1995 to 1997

Brakes -		
Front (min. friction material thickness)	mm	1.0
Rear (min. friction material thickness)	mm	1.0

Tyres		
Saloon	Size	155x13
Estate / Van	Size	—
Pressure - front / rear - Saloon	bar	1.9 / 1.9
- Estate / Van	bar	—

Front suspension / wheel alignment		
Toe-in (+) / Toe-out (–)	mm [°]	0±3.0
Camber		0°±30’
Castor		2°±30’
King pin inclination		12°8’±30’

Rear suspension / wheel alignment		
Toe-in (+) / Toe-out (–)	mm [°]	+4.0 to 8.0
Camber		-41’±30’


 
Torque wrench settingsAccent 1.3i1995 to 1997

Cylinder head - stage 1	Nm	70
- stage 2	Nm	75
Cylinder head - stage 3	Nm	—
- stage 4	Nm	—
Big-end bearings	Nm	32 to 38
Main bearings	Nm	55 to 60
Clutch cover	Nm	15 to 22
Flywheel [driveplate]	Nm	130 to 140
Front hubs	Nm	200 to 260
Rear hubs	Nm	180 to 220
Wheel nuts / bolts	Nm	100
Spark plugs	Nm	25

CapacitiesAccent 1.3i1995 to 1997

Engine oil & filter	litres	3.0
Gearbox - 4-speed [5-speed]	litres	2.2
Automatic transmission - refill	litres	—
Final drive	litres	WT
Cooling system	litres	6.0
Fuel tank	litres	45

Notes and Illustrations

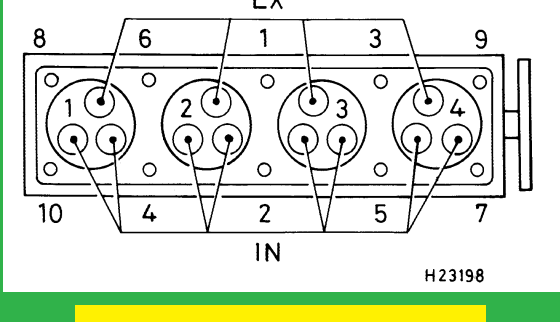

1341 cm³, 12V