

ISUZU

Trooper 2.6 (UBS17)

1988 to 1992

Engine & Cooling

Fuel

Ignition

 
Electrical

Running gear

Torque settings

Capacities

Notes & Illustrations

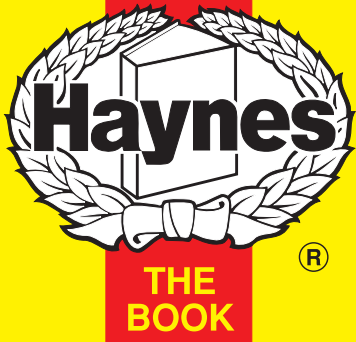

Automotive Technical
DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENU

HELP

Engine and cooling system

Trooper 2.6 (UBS17)

1988 to 1992

Type		4ZE1 83kW
Capacity (cm ³) / number of cylinders		2559 / 4
Compression ratio / pressure	bar	8.3 / ≥8.2
Oil pressure	bar	[3.9 to 4.9]
Oil temperature	°C	50
Valve clearance - inlet	mm	0.20
Valve clearance - exhaust	mm	0.20
Firing order		1-3-4-2
No 1 cylinder position		TBE
Thermostat opening temperature	°C	82
Radiator cap pressure	bar	0.9 to 1.2

Fuel system

Trooper 2.6 (UBS17)

1988 to 1992

Idle speed - manual [auto]	rpm	900±50
Fast idle speed - manual [auto]	rpm	—
CO @ idle speed [3000 rpm] - see page VI	%	2.0±0.5
HC @ idle speed [3000 rpm] - see page VI	ppm	—
CO2 @ idle speed [3000 rpm] - see page VI	%	—
O2 @ idle speed [3000 rpm] - see page VI	%	—
Carburettor / fuel injection		—
Type / ref		MPI
Main jet / needle		—
Injection pressure	bar	—
Pump pressure	bar	—
Octane rating	RON	97[E 95 RON]

Ignition system

Trooper 2.6 (UBS17)

1988 to 1992

Type		Electronic
Ignition coil		—
Primary resistance	ohms	0.9
Ballast resistor	ohms	—
Voltage - Tmnl 15(+) to earth	V	—
Distributor		—
Points gap (air gap)	mm	—
Dwell angle	° (%)	—
Condenser capacity	µF	—
Rotation		Clockwise
Ignition timing - basic [static	° Crankshaft @ rpm	12 BTDC @ 900
V = Vacuum NV = No Vacuum		—
Total ignition advance	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Centrifugal check.	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Vacuum range check	mbar	Computer control
Maximum vacuum advance	° Crankshaft	—
Spark plugs		NGK/Champion
Type		BPR6ES / RN7YC
Electrode gap	mm	0.70 to 0.80

Electrical system

Trooper 2.6 (UBS17)

1988 to 1992

Battery	V / CC / RC	12 / _ / 65Ah
Alternator voltage / full load current / engine rpm		14.2 to 14.8 / _ / 1900
Starter motor current / voltage - cranking	A / V	230 / 8.0
- locked	A / V	—

Running gear

Trooper 2.6 (UBS17)

1988 to 1992

Brakes -		
Front (min. friction material thickness)	mm	1.0
Rear (min. friction material thickness)	mm	1.0

Tyres		
Saloon	Size	—
Estate / Van	Size	235/75x15
Pressure - front / rear - Saloon	bar	—
- Estate / Van	bar	1.8 / 1.8

Front suspension / wheel alignment		
Toe-in (+) / Toe-out (–)	mm [°]	+2.0±2.0
Camber		+30'±30'
Castor		+2°30'±45'
King pin inclination		+10°±30'

Rear suspension / wheel alignment		
Toe-in (+) / Toe-out (–)	mm [°]	—
Camber		—

Torque wrench settings

Trooper 2.6 (UBS17)

1988 to 1992

Cylinder head - stage 1	Nm	79
- stage 2	Nm	88 to 108
Cylinder head - stage 3	Nm	—
- stage 4	Nm	—
Big-end bearings	Nm	57 to 61
Main bearings	Nm	83 to 113
Clutch cover	Nm	16 to 20
Flywheel [driveplate]	Nm	54 to 64
Front hubs	Nm	WSM
Rear hubs	Nm	WSM
Wheel nuts / bolts	Nm	Steel: 78 to 118 ¹
Spark plugs	Nm	17 to 21

Capacities

Trooper 2.6 (UBS17)

1988 to 1992


Engine oil & filter	litres	4.0
Gearbox - 4-speed [5-speed]	litres	3.0. Transfer: 1.5
Automatic transmission - refill	litres	4.5. Transfer: 0.8
Final drive	litres	Front: 1.5 ²
Cooling system	litres	9.8
Fuel tank	litres	83

Notes and Illustrations


¹Alloy: 108 to 127

²Rear: 1.8

 
1: Idle speed 2: CO / Mixture

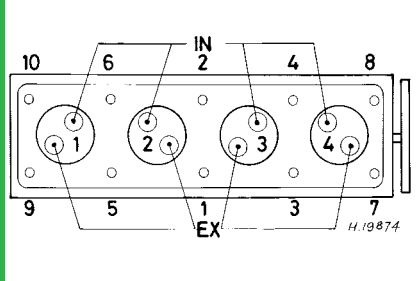

2559 cm³

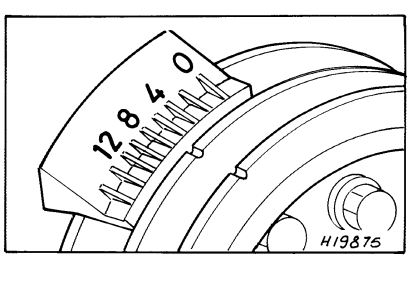 

2559 cm³

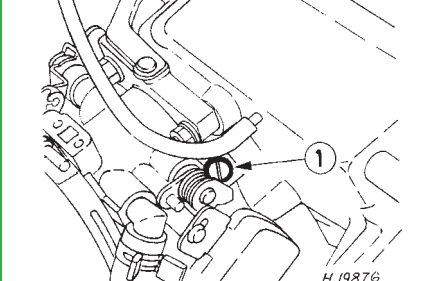 

MPI