

Engine & Cooling

Fuel

Ignition

Electrical

Running gear

Torque settings

Capacities

Notes & Illustrations



Automotive Technical
DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENU

HELP

Engine and cooling system

Sportage 2.0i

1995 to 1997

Type		FE SOHC 8V
Capacity (cm³) / number of cylinders		1998 / 4
Compression ratio / pressure	bar	8.6 / ≥8.1
Oil pressure	bar	[3.5 to 4.5]
Oil temperature	°C	80
Valve clearance - inlet	mm	0.30
Valve clearance - exhaust	mm	0.30
Firing order		1-3-4-2
No 1 cylinder position		TBE
Thermostat opening temperature	°C	83.5 to 86.5
Radiator cap pressure	bar	0.75 to 1.03

Fuel system

Sportage 2.0i

1995 to 1997

Idle speed - manual [auto]	rpm	800±50 N/A
Fast idle speed - manual [auto]	rpm	—
CO @ idle speed [3000 rpm] - see page VI	%	≤0.5
HC @ idle speed [3000 rpm] - see page VI	ppm	≤200
CO2 @ idle speed [3000 rpm] - see page VI	%	—
O2 @ idle speed [3000 rpm] - see page VI	%	—
Carburettor / fuel injection		—
Type / ref		SMFI MPI
Main jet / needle		—
Injection pressure	bar	3.0
Pump pressure	bar	—
Octane rating	RON	95[U]

Ignition system

Sportage 2.0i

1995 to 1997

Type		Computerized
Ignition coil		—
Primary resistance	ohms	0.55 to 0.66
Ballast resistor	ohms	—
Voltage - Tmnl 15(+) to earth	V	—
Distributor		—
Points gap (air gap)	mm	—
Dwell angle	° (%)	—
Condenser capacity	µF	—
Rotation		—
Ignition timing - basic [static	° Crankshaft @ rpm	4±6 BTDC @ 800±50 WSM
V = Vacuum NV = No Vacuum		—
Total ignition advance	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Centrifugal check.	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Vacuum range check	mbar	Computer control
Maximum vacuum advance	° Crankshaft	—
Spark plugs		NGK
Type		BKR5E
Electrode gap	mm	0.70 to 0.80

Electrical system

Sportage 2.0i

1995 to 1997

Battery	V / CC / RC	12 / 48Ah
Alternator voltage / full load current / engine rpm		—
Starter motor current / voltage - cranking	A / V	—
- locked	A / V	—

Running gear

Sportage 2.0i

1995 to 1997

Brakes -		
Front (min. friction material thickness)	mm	2.0
Rear (min. friction material thickness)	mm	1.5

Tyres		
Saloon	Size	—
Estate / Van	Size	205/70x15
Pressure - front / rear - Saloon	bar	—
- Estate / Van	bar	1.8 / 1.8

Front suspension / wheel alignment		
Toe-in (+) / Toe-out (–)	mm [°]	+2.5±2.5
Camber		+0.44°±0.50°
Castor		+3°58'±0.5°
King pin inclination		—

Rear suspension / wheel alignment		
Toe-in (+) / Toe-out (–)	mm [°]	—
Camber		—

Torque wrench settings

Sportage 2.0i

1995 to 1997

Cylinder head - stage 1	Nm	40 oiled
- stage 2	Nm	80 to 86
Cylinder head - stage 3	Nm	—
- stage 4	Nm	—
Big-end bearings	Nm	65 to 69
Main bearings	Nm	82 to 88
Clutch cover	Nm	18 to 27
Flywheel [driveplate]	Nm	96 to 103
Front hubs	Nm	WSM
Rear hubs	Nm	WSM
Wheel nuts / bolts	Nm	88 to 108
Spark plugs	Nm	15 to 23

Capacities


Sportage 2.0i

1995 to 1997


Engine oil & filter	litres	3.9
Gearbox - 4-speed [5-speed]	litres	1.25. Transfer: 1.3
Automatic transmission - refill	litres	6.8
Final drive	litres	Front: 1.2. Rear: 1.2
Cooling system	litres	7.5
Fuel tank	litres	60. 2D: 57

Notes and Illustrations



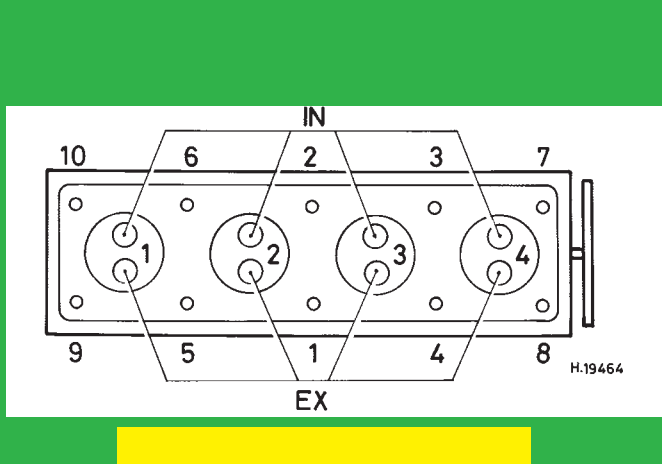

1998 cm³, 8V

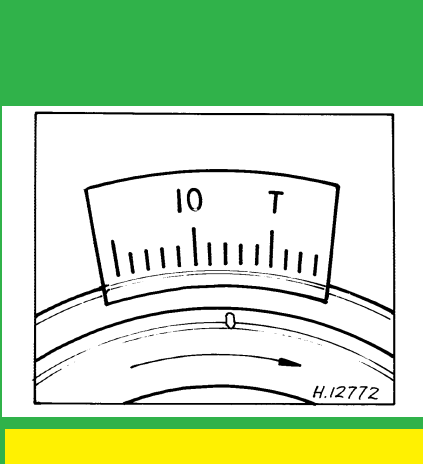

1998 cm³, 8V