

Engine & Cooling

Fuel

Ignition

Electrical

Running gear

Torque settings

Capacities

Notes & Illustrations



Automotive Technical
DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENU

HELP

Engine and cooling system323 Turbo 4x41986 to 1989

Type		B6. DOHC Turbo
Capacity (cm³) / number of cylinders		1597 / 4
Compression ratio / pressure	bar	7.9 / ≥7.5
Oil pressure	bar	[3.5 to 4.4]
Oil temperature	°C	—
Valve clearance - inlet	mm	0: Hyd.
Valve clearance - exhaust	mm	0: Hyd.
Firing order		1-3-4-2
No 1 cylinder position		TBE
Thermostat opening temperature	°C	82±1.5
Radiator cap pressure	bar	0.76 to 1.04

Fuel system323 Turbo 4x41986 to 1989

Idle speed - manual [auto]	rpm	800 to 900
Fast idle speed - manual [auto]	rpm	—
CO @ idle speed [3000 rpm] - see page VI	%	≤0.3
HC @ idle speed [3000 rpm] - see page VI	ppm	≤200
CO2 @ idle speed [3000 rpm] - see page VI	%	—
O2 @ idle speed [3000 rpm] - see page VI	%	—
Carburettor / fuel injection		Mazda
Type / ref		EGI electronic injection
Main jet / needle		—
Injection pressure	bar	1.7 to 2.2
Pump pressure	bar	4.4 to 5.9
Octane rating	RON	96[E 98 RON]

Ignition system323 Turbo 4x41986 to 1989

Type		Electronic
Ignition coil		—
Primary resistance	ohms	3.1
Ballast resistor	ohms	—
Voltage - Tmnl 15(+) to earth	V	—
Distributor		—
Points gap (air gap)	mm	—
Dwell angle	° (%)	—
Condenser capacity	µF	—
Rotation		Anticlockwise
Ignition timing - basic [static	° Crankshaft @ rpm	12±1 BTDC @ idle
V = Vacuum NV = No Vacuum		NV
Total ignition advance	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Centrifugal check.	° Crankshaft @ rpm	0 @ 1200
	° Crankshaft @ rpm	18 @ 3500
	° Crankshaft @ rpm	25 @ 5800
Vacuum range check	mbar	80 to 600
Maximum vacuum advance	° Crankshaft	18
Spark plugs		NGK/Champion
Type		BCPR6E / RC7YC
Electrode gap	mm	0.70 to 0.80

Electrical system323 Turbo 4x41986 to 1989

Battery	V / CC / RC	12 / 50Ah
Alternator voltage / full load current / engine rpm		14.1 to 14.7 / _ / 2500
Starter motor current / voltage - cranking	A / V	60 / 11.5 (no load)
- locked	A / V	—

Running gear323 Turbo 4x41986 to 1989

Brakes -		
Front (min. friction material thickness)	mm	2.0
Rear (min. friction material thickness)	mm	1.0

Tyres		
Saloon	Size	185/60x14
Estate / Van	Size	—
Pressure - front / rear - Saloon	bar	2.0 / 1.8
- Estate / Van	bar	—

Front suspension / wheel alignment		
Toe-in (+) / Toe-out (–)	mm [°]	+2.0±3.0
Camber		+1°4'±30'
Castor		+1°48'±45'
King pin inclination		+13°

Rear suspension / wheel alignment		
Toe-in (+) / Toe-out (–)	mm [°]	—
Camber		—

Torque wrench settings323 Turbo 4x41986 to 1989

Cylinder head - stage 1	Nm	40
- stage 2	Nm	76 to 81
Cylinder head - stage 3	Nm	—
- stage 4	Nm	—
Big-end bearings	Nm	65 to 69
Main bearings	Nm	54 to 59
Clutch cover	Nm	18 to 26
Flywheel [driveplate]	Nm	96 to 103
Front hubs	Nm	157 to 236
Rear hubs	Nm	157 to 236
Wheel nuts / bolts	Nm	118
Spark plugs	Nm	15 to 23

 
Capacities323 Turbo 4x41986 to 1989

Engine oil & filter	litres	3.6
Gearbox - 4-speed [5-speed]	litres	3.6 ¹
Automatic transmission - refill	litres	—
Final drive	litres	Ft. 0.5. Rear 0.7
Cooling system	litres	6.0
Fuel tank	litres	50


Notes and Illustrations

¹Transfer box: 0.5


1: Idle speed 2: CO / Mixture

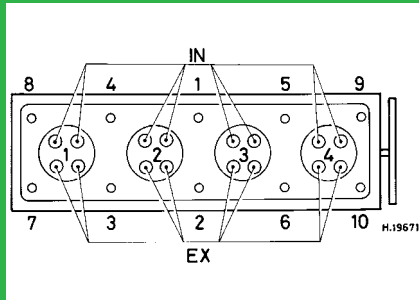


1597 cm³, 16V

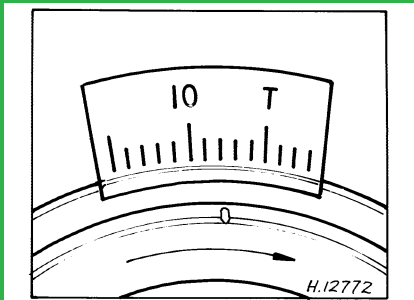 

1597 cm³, 16V

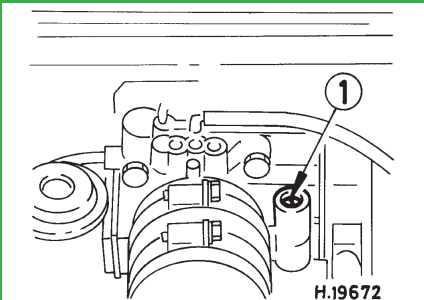 

Fuel injection, Turbo

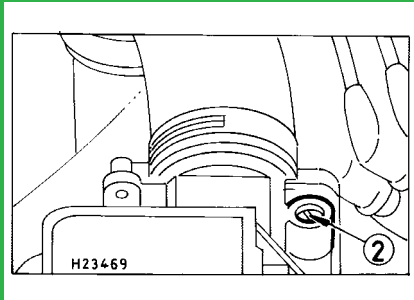 

Fuel injection, Turbo