



HELP

Engine and cooling system		Colt, Lancer 1500	1988 to 1990
Type		4G15	

Type		4G15
Capacity (cm ³) / number of cylinders		1468 / 4
Compression ratio / pressure	bar	9.4 / ≥9.6
Oil pressure	bar	—
Oil temperature	°C	—
Valve clearance - inlet	mm	0.15 H
Valve clearance - exhaust	mm	0.25 H
Firing order		1-3-4-2
No 1 cylinder position		TBE
Thermostat opening temperature	°C	88
Radiator cap pressure	bar	0.76 to 1.04

Fuel system	Colt. Lancer 1500	1988 to 1990
-------------	-------------------	--------------

Idle speed - manual [auto]	rpm	800±50 [850±50]
Fast idle speed - manual [auto]	rpm	—
CO @ idle speed [3000 rpm] - see page VI	%	1.0±0.5
HC @ idle speed [3000 rpm] - see page VI	ppm	≤1200
CO ₂ @ idle speed [3000 rpm] - see page VI	%	—
O ₂ @ idle speed [3000 rpm] - see page VI	%	—
Carburettor / fuel injection		Aisan
Type / ref		5EUA [5EVA, AT] (2V)
Main jet / needle		—
Injection pressure	bar	—
Pump pressure	bar	0.19 to 0.26
Octane rating	RON	98[E 95 RON]

Ignition system	Colt, Lancer 1500	1988 to 1990
-----------------	-------------------	--------------

Type		Electronic
Ignition coil		F-100
Primary resistance	ohms	1.08 to 1.32
Ballast resistor	ohms	1.22 to 1.49
Voltage - Tmnl 15(+) to earth	V	—
Distributor		Mitsubishi
Points gap (air gap)	mm	—
Dwell angle	° (%)	—
Condenser capacity	µF	—
Rotation		—
Ignition timing - basic [static	° Crankshaft @ rpm	4±2 BTDC @ idle
V = Vacuum NV = No Vacuum		NV
Total ignition advance	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Centrifugal check.	° Crankshaft @ rpm	0 @ 1600
	° Crankshaft @ rpm	6 @ 3800
	° Crankshaft @ rpm	14 @ 6000
Vacuum range check	mbar	173 to 400
Maximum vacuum advance	° Crankshaft	15
Spark plugs		NGK/Champion
Type		BPR6ES / RN9YC
Electrode gap	mm	0.70 to 0.80

Electrical system	Colt, Lancer 1500	1988 to 1990
-------------------	-------------------	--------------

Battery	V / CC / RC	12 / 101 / 348
Alternator voltage / full load current / engine rpm		13.4 to 14.9 / _ / 2500
Starter motor current / voltage - cranking	A / V	—
	locked	A / V

	Colt	Lancer	1500	1988 to 1990
Running gear				

Running year	Colt, Lancer 1900	1900 to 1909
Brakes -		

Front (min. friction material thickness)	mm	2.0
Rear (min. friction material thickness)	mm	1.0

Rear (min. inflation material thickness)	mm	1.0
Tyres		

Saloon	Size	155x13: 175/70x13
Estate / Van	Size	—
Pressure - front / rear - Saloon	bar	2.0 / 2.0
- Estate / Van	bar	

Front suspension / wheel alignment	0.00
------------------------------------	------

Toe-in (+) / Toe-out (-)	mm [°]	0±1.5
Camber		0±30'
Castor		+2°20'±30'
King pin inclination		+12°30'

Rear suspension / wheel alignment	
Toe in (i) / Toe out (o)	mm [m]
0+2.35 PW	

Toe-in (+) / Toe-out (-)	mm [-]	0±2.25 PW
Camber		-40'±35'

Torque wrench settings	Colt, Lancer 1500	1988 to 1990
------------------------	-------------------	--------------

Cylinder head - stage 1	Nm	35
- stage 2	Nm	70 to 75 C
Cylinder head - stage 3	Nm	80 to 85 H
- stage 4	Nm	—
Big-end bearings	Nm	32 to 35
Main bearings	Nm	50 to 55
Clutch cover	Nm	15 to 21
Flywheel [driveplate]	Nm	130 to 140
Front hubs	Nm	200 to 260
Rear hubs	Nm	150 to 200
Wheel nuts / bolts	Nm	90 to 110
Spark plugs	Nm	20 to 30


Capacities	Colt, Lancer 1500	1988 to 1990
------------	-------------------	--------------

Engine oil & filter	litres	3.4
Gearbox - 4-speed [5-speed]	litres	1.8
Automatic transmission - refill	litres	6.1
Final drive	litres	WT
Cooling system	litres	5.0
Fuel tank	litres	50

Notes and Illustrations



1: Idle speed 2: CO / Mixture

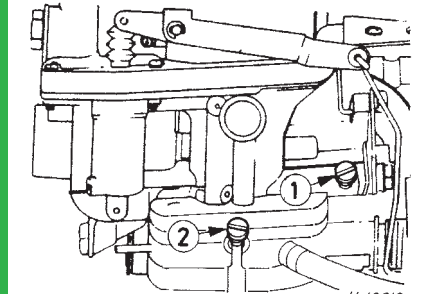

Aisan, 8V