

Engine & Cooling

Fuel

Ignition

Electrical

Running gear

Torque settings

Capacities

Notes & Illustrations



Automotive Technical
DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENU

HELP

Engine and cooling systemSunny 1.6 (B12, N13)1986 to 1989

Type		E16S SOHC
Capacity (cm³) / number of cylinders		1597 / 4
Compression ratio / pressure	bar	9.6 / ≥10.8
Oil pressure	bar	2.0 [3.9]
Oil temperature	°C	—
Valve clearance - inlet	mm	0.25 H
Valve clearance - exhaust	mm	0.30 H
Firing order		1-3-4-2
No 1 cylinder position		TBE
Thermostat opening temperature	°C	82
Radiator cap pressure	bar	0.78 to 0.98

Fuel systemSunny 1.6 (B12, N13)1986 to 1989

Idle speed - manual [auto]	rpm	800±50 [850 (950 PAS)±50]
Fast idle speed - manual [auto]	rpm	2400±200 [2800±200]
CO @ idle speed [3000 rpm] - see page VI	%	1.5±0.5
HC @ idle speed [3000 rpm] - see page VI	ppm	≤1200
CO2 @ idle speed [3000 rpm] - see page VI	%	—
O2 @ idle speed [3000 rpm] - see page VI	%	—
Carburettor / fuel injection		Hitachi
Type / ref		DCZ328-31 [-32 AT]
Main jet / needle		98, 135
Injection pressure	bar	—
Pump pressure	bar	0.20 to 0.27
Octane rating	RON	97[RA] ¹

Ignition systemSunny 1.6 (B12, N13)1986 to 1989

Type		Electronic
Ignition coil		Hanshin STC-143
Primary resistance	ohms	1.0 to 1.3
Ballast resistor	ohms	—
Voltage - Tmnl 15(+) to earth	V	—
Distributor		Hitachi
Points gap (air gap)	mm	[0.30 to 0.50]
Dwell angle	° (%)	—
Condenser capacity	µF	—
Rotation		Anticlockwise
Ignition timing - basic [static	° Crankshaft @ rpm	4±2 BTDC @ idle ¹
V = Vacuum NV = No Vacuum		NV
Total ignition advance	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Centrifugal check.	° Crankshaft @ rpm	0 @ 1360
	° Crankshaft @ rpm	12 @ 2800
	° Crankshaft @ rpm	25 @ 5400
Vacuum range check	mbar	147 to 333 ²
Maximum vacuum advance	° Crankshaft	10
Spark plugs		NGK/Champion
Type		BPR6ES / RN9YC
Electrode gap	mm	0.80 to 0.90

Electrical systemSunny 1.6 (B12, N13)1986 to 1989

Battery	V / CC / RC	12 / 60Ah
Alternator voltage / full load current / engine rpm		14.1 to 14.7 / _ / 2500
Starter motor current / voltage - cranking	A / V	60 / 11.5 (no load)
- locked	A / V	—

Running gearSunny 1.6 (B12, N13)1986 to 1989

Brakes -		
Front (min. friction material thickness)	mm	2.0
Rear (min. friction material thickness)	mm	1.5

Tyres		
Saloon	Size	155x13: 175/70x13: 185/60x14
Estate / Van	Size	155x13: 175/70x13
Pressure - front / rear - Saloon	bar	2.1 / 2.1
- Estate / Van	bar	2.1 / 2.1

Front suspension / wheel alignment

Toe-in (+) / Toe-out (–)	mm [°]	-0.5 to +1.5
Camber		-50' to +40' ³
Castor		+35' to 2°5' ⁴
King pin inclination		+13°5' to 14°35' ⁵

Rear suspension / wheel alignment

Toe-in (+) / Toe-out (–)	mm [°]	0 to -4.0 ⁶
Camber		-1°45' to -15' ⁷

Torque wrench settingsSunny 1.6 (B12, N13)1986 to 1989

Cylinder head - stage 1	Nm	29
- stage 2	Nm	69
Cylinder head - stage 3	Nm	Loosen, then 29
- stage 4	Nm	69 to 74
Big-end bearings	Nm	31 to 37
Main bearings	Nm	49 to 59
Clutch cover	Nm	22 to 29
Flywheel [driveplate]	Nm	78 to 88 ⁸
Front hubs	Nm	196 to 275
Rear hubs	Nm	186 to 255 ⁹
Wheel nuts / bolts	Nm	98 to 118
Spark plugs	Nm	20 to 29

 
CapacitiesSunny 1.6 (B12, N13)1986 to 1989

Engine oil & filter	litres	3.2
Gearbox - 4-speed [5-speed]	litres	2.7. Transfer: 1.1
Automatic transmission - refill	litres	6.3
Final drive	litres	WT. 4x4: 1.0
Cooling system	litres	4.3 [Copper: 4.9]
Fuel tank	litres	B12: 52. N13: 50


Notes and Illustrations

- ¹[E 95 RON]: 2±2 BTDC @ idle
- ²[AT: 267 to 453]
- ³Coupé: -1°5' to +25'
- ⁴Coupé: +45' to 2°15'. 4x4: +10' to 1°40'
- ⁵Coupé: +13°25' to 14°55'. 4x4: +12°50' to 14°15'
- ⁶Coupé: +0.5 to -3.5.4x4: 0 to 4
- ⁷Coupé: -1°55' to -25'. 4x4: -55' to +35'
- ⁸Driveplate: [93 to 103]
- ⁹4x4: 235 to 314


1: Idle speed 2: CO / Mixture

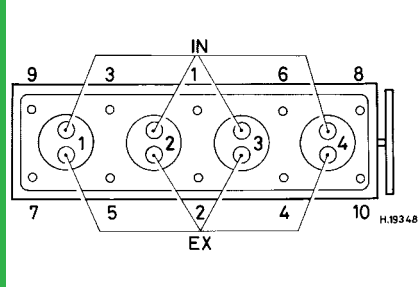

1597 cm³, 8V

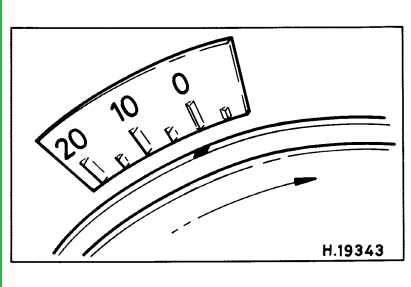 

1597 cm³, 8V

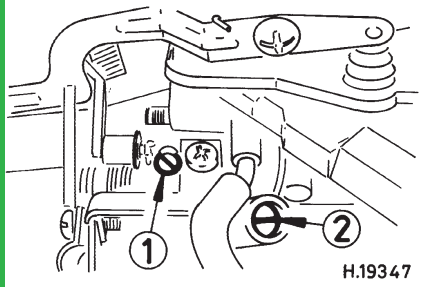 

Hitachi DCZ