

Engine & Cooling

Fuel

Ignition

Electrical

Running gear

Torque settings

Capacities

Notes & Illustrations



Automotive
Technical
DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENU

HELP

Engine and cooling systemIbiza & Cordoba 1.8i1993 to 1995

Type		ABS. SOHC 8V 66kW
Capacity (cm³) / number of cylinders		1781 / 4
Compression ratio / pressure	bar	10.0 / ≥7.5
Oil pressure	bar	[2.0]
Oil temperature	°C	80
Valve clearance - inlet	mm	0: Hyd.
- exhaust	mm	0: Hyd.
Firing order		1-3-4-2
No 1 cylinder position		TBE
Thermostat opening temperature	°C	87 to 102
Radiator cap pressure	bar	1.3 to 1.5

Fuel systemIbiza & Cordoba 1.8i1993 to 1995

Idle speed - manual [auto]	rpm	750 to 1000 N/A
Fast idle speed - manual [auto]	rpm	—
CO @ idle speed [3000 rpm] - see page VI	%	0.2 to 1.2 N/A
HC @ idle speed [3000 rpm] - see page VI	ppm	≤200
CO2 @ idle speed [3000 rpm] - see page VI	%	—
O2 @ idle speed [3000 rpm] - see page VI	%	—
Carburettor / fuel injection		Bosch
Type / ref		Mono-Motronic
Main jet / needle		—
Injection pressure	bar	0.8 to 1.2
Pump pressure	bar	2.0
Octane rating	RON	95[U]

Ignition systemIbiza & Cordoba 1.8i1993 to 1995

Type		Motronic
Ignition coil		Bosch N152
Primary resistance	ohms	0.5 to 0.7
Ballast resistor	ohms	—
Voltage - Tmnl 15(+) to earth	V	—
Distributor		Bosch
Points gap (air gap)	mm	—
Dwell angle	° (%)	—
Condenser capacity	µF	—
Rotation		Anticlockwise
Ignition timing - basic [static	° Crankshaft @ rpm	6±1 BTDC @ 750 to 1000
V = Vacuum NV = No Vacuum		NV
Total ignition advance	° Crankshaft @ rpm	30 to 38 BTDC @ 3000
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Centrifugal check.	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Vacuum range check	mbar	Computer control
Maximum vacuum advance	° Crankshaft	—
Spark plugs		Bosch/Champion
Type		W7DTC / N7BYC
Electrode gap	mm	0.70 to 0.90

Electrical systemIbiza & Cordoba 1.8i1993 to 1995

Battery	V / CC / RC	12 / 45, 54, 63Ah
Alternator voltage / full load current / engine rpm		14.1 / 70, 80 / 3000
Starter motor current / voltage - cranking	A / V	—
- locked	A / V	—

Running gearIbiza & Cordoba 1.8i1993 to 1995

Brakes -		
Front (min. friction material thickness)	mm	7.0 with backing
Rear (min. friction material thickness)	mm	2.5 with backing

Tyres		
Saloon	Size	175/70x13: 185/60x14
Estate / Van	Size	—
Pressure - front / rear - Saloon	bar	2.1 / 1.8
- Estate / Van	bar	—

Front suspension / wheel alignment		
Toe-in (+) / Toe-out (–)	mm [°]	[0±10']
Camber		-30'±20'
Castor		+1°30'±30'
King pin inclination		—

Rear suspension / wheel alignment		
Toe-in (+) / Toe-out (–)	mm [°]	[+15'±5']
Camber		-1°34'±20'


Torque wrench settingsIbiza & Cordoba 1.8i1993 to 1995

Cylinder head - stage 1	Nm	40
- stage 2	Nm	60
- stage 3	Nm	+ 90°
- stage 4	Nm	+ 90°
Big-end bearings	Nm	30 + 90° N
Main bearings	Nm	65
Clutch cover	Nm	25
Flywheel [driveplate]	Nm	60 + 90° N
Front hubs	Nm	265
Rear hubs	Nm	WSM
Wheel nuts / bolts	Nm	110
Spark plugs	Nm	25


CapacitiesIbiza & Cordoba 1.8i1993 to 1995

Engine oil & filter	litres	4.0
Gearbox - 4-speed [5-speed]	litres	2.0
Automatic transmission - refill	litres	3.0
Final drive	litres	WT
Cooling system	litres	5.5
Fuel tank	litres	47

Notes and Illustrations

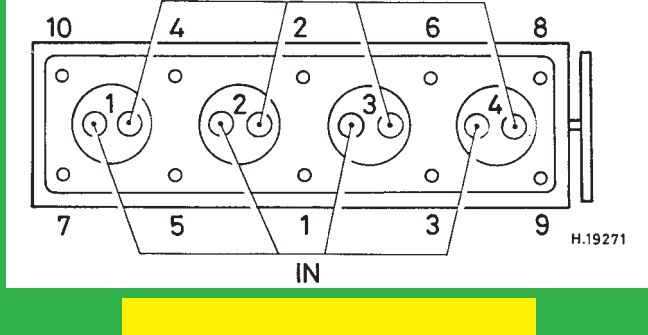

1781 cm³, 8V

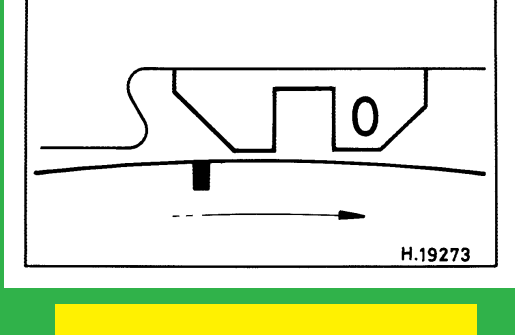

1781 cm³, 8V