

Engine & Cooling

Fuel

Ignition

Electrical

Running gear

Torque settings

Capacities

Notes & Illustrations



Automotive Technical
DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENU

HELP

Engine and cooling systemIbiza & Cordoba 2.0i1993 to 1997

Type		2E. SOHC 8V 85kW
Capacity (cm³) / number of cylinders		1984 / 4
Compression ratio / pressure	bar	10.4 / ≥7.5
Oil pressure	bar	[2.0]
Oil temperature	°C	80
Valve clearance - inlet	mm	0: Hyd.
- exhaust	mm	0: Hyd.
Firing order		1-3-4-2
No 1 cylinder position		TBE
Thermostat opening temperature	°C	87 to 102
Radiator cap pressure	bar	1.3 to 1.5

Fuel systemIbiza & Cordoba 2.0i1993 to 1997

Idle speed - manual [auto]	rpm	770 to 870 N/A
Fast idle speed - manual [auto]	rpm	2500 to 2800
CO @ idle speed [3000 rpm] - see page VI	%	≤0.5 [≤0.3]
HC @ idle speed [3000 rpm] - see page VI	ppm	≤200
CO2 @ idle speed [3000 rpm] - see page VI	%	—
O2 @ idle speed [3000 rpm] - see page VI	%	—
Carburettor / fuel injection		Volkswagen
Type / ref		Digifant
Main jet / needle		—
Injection pressure	bar	3.0
Pump pressure	bar	2.5 to 3.0
Octane rating	RON	95[U]

Ignition systemIbiza & Cordoba 2.0i1993 to 1997

Type		Digifant
Ignition coil		Bosch
Primary resistance	ohms	0.5 to 0.7
Ballast resistor	ohms	—
Voltage - Tmnl 15(+) to earth	V	—
Distributor		—
Points gap (air gap)	mm	—
Dwell angle	° (%)	—
Condenser capacity	µF	—
Rotation		Anticlockwise
Ignition timing - basic [static	° Crankshaft @ rpm	6±1 BTDC @ 2000 to 2500
V = Vacuum NV = No Vacuum		—
Total ignition advance	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Centrifugal check.	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Vacuum range check	mbar	Computer control
Maximum vacuum advance	° Crankshaft	—
Spark plugs		Champion
Type		N7BMC
Electrode gap	mm	≤0.60

Electrical systemIbiza & Cordoba 2.0i1993 to 1997

Battery	V / CC / RC	12 / 54Ah
Alternator voltage / full load current / engine rpm		14.1 / 70, 80 / 3000
Starter motor current / voltage - cranking	A / V	—
- locked	A / V	—

Running gearIbiza & Cordoba 2.0i1993 to 1997

Brakes -		
Front (min. friction material thickness)	mm	7.0 with backing
Rear (min. friction material thickness)	mm	7.0 with backing

Tyres		
Saloon	Size	185/60x14
Estate / Van	Size	—
Pressure - front / rear - Saloon	bar	2.4 / 2.0
- Estate / Van	bar	—

Front suspension / wheel alignment		
Toe-in (+) / Toe-out (–)	mm [°]	[0±10°]
Camber		-42'±20'
Castor		+1°55'±30'
King pin inclination		—

Rear suspension / wheel alignment		
Toe-in (+) / Toe-out (–)	mm [°]	[+15'±5']
Camber		-1°34'±20'


Torque wrench settingsIbiza & Cordoba 2.0i1993 to 1997

Cylinder head - stage 1	Nm	40
- stage 2	Nm	60
- stage 3	Nm	+ 90°
- stage 4	Nm	+ 90°
Big-end bearings	Nm	30 + 90° N
Main bearings	Nm	65
Clutch cover	Nm	25
Flywheel [driveplate]	Nm	60 + 90° N
Front hubs	Nm	265
Rear hubs	Nm	WSM
Wheel nuts / bolts	Nm	110
Spark plugs	Nm	30


CapacitiesIbiza & Cordoba 2.0i1993 to 1997

Engine oil & filter	litres	4.0
Gearbox - 4-speed [5-speed]	litres	2.0
Automatic transmission - refill	litres	—
Final drive	litres	WT
Cooling system	litres	5.5
Fuel tank	litres	47

Notes and Illustrations

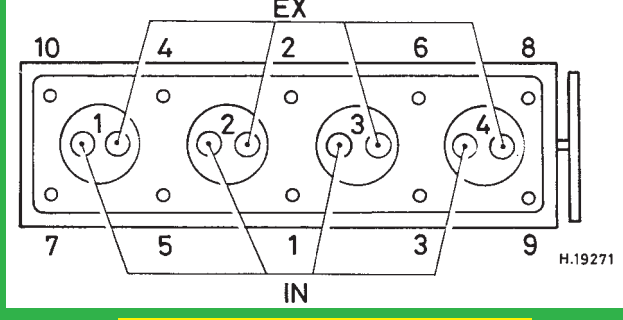

1984 cm³, 8V

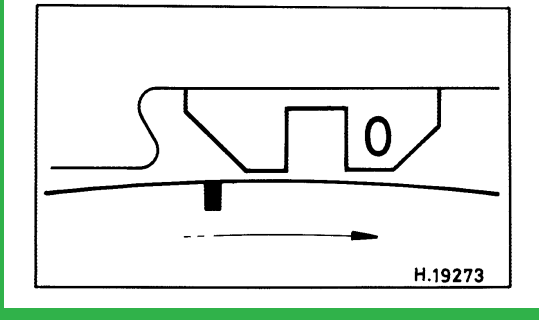

1984 cm³, 8V