

Engine & Cooling

Fuel

Ignition

Electrical

Running gear

Torque settings

Capacities

Notes & Illustrations



Automotive Technical
DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENU

HELP

Engine and cooling systemBaleno 1.81996 to 1997

Type	J18A DOHC 16V	
Capacity (cm ³) / number of cylinders	1839 / 4	
Compression ratio / pressure	bar	9.8 / _
Oil pressure	bar	_
Oil temperature	°C	_
Valve clearance - inlet	mm	_
- exhaust	mm	_
Firing order	1-3-4-2	
No 1 cylinder position	_	
Thermostat opening temperature	°C	_
Radiator cap pressure	bar	_

Fuel systemBaleno 1.81996 to 1997

Idle speed - manual [auto]	rpm	_
Fast idle speed - manual [auto]	rpm	_
CO @ idle speed [3000 rpm] - see page VI	%	≤0.3 N/A
HC @ idle speed [3000 rpm] - see page VI	ppm	≤200
CO2 @ idle speed [3000 rpm] - see page VI	%	_
O2 @ idle speed [3000 rpm] - see page VI	%	_
Carburettor / fuel injection	_ Suzuki	
Type / ref	MPI	
Main jet / needle	_	
Injection pressure	bar	_
Pump pressure	bar	_
Octane rating	RON	95[U]

Ignition systemBaleno 1.81996 to 1997

Type	_	
Ignition coil	_	
Primary resistance	ohms	_
Ballast resistor	ohms	_
Voltage - Tmnl 15(+) to earth	V	_
Distributor	_	
Points gap (air gap)	mm	_
Dwell angle	° (%)	_
Condenser capacity	µF	_
Rotation	_	
Ignition timing - basic [static ° Crankshaft @ rpm V = Vacuum NV = No Vacuum	_	
Total ignition advance	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	_
	° Crankshaft @ rpm	_
Centrifugal check.	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	_
	° Crankshaft @ rpm	_
Vacuum range check	mbar	Computer control
Maximum vacuum advance	° Crankshaft	_
Spark plugs	Nippon Denso/NGK	
Type	K20PR-U11 / BKR6E-11	
Electrode gap	mm	1.10

Electrical systemBaleno 1.81996 to 1997

Battery	V / CC / RC	12 / 36Ah
Alternator voltage / full load current / engine rpm	_	
Starter motor current / voltage - cranking	A / V	_
- locked	A / V	_

Running gearBaleno 1.81996 to 1997

Brakes -		
Front (min. friction material thickness)	mm	_
Rear (min. friction material thickness)	mm	_

Tyres		
Saloon	Size	185/60x14
Estate / Van	Size	_
Pressure - front / rear - Saloon	bar	Refer to vehicle
- Estate / Van	bar	_

Front suspension / wheel alignment		
Toe-in (+) / Toe-out (-)	mm [°]	_
Camber	_	
Castor	_	
King pin inclination	_	

Rear suspension / wheel alignment		
Toe-in (+) / Toe-out (-)	mm [°]	_
Camber	_	

Torque wrench settingsBaleno 1.81996 to 1997

Cylinder head - stage 1	Nm	_
- stage 2	Nm	_
- stage 3	Nm	_
- stage 4	Nm	_
Big-end bearings	Nm	_
Main bearings	Nm	_
Clutch cover	Nm	_
Flywheel [driveplate]	Nm	_
Front hubs	Nm	_
Rear hubs	Nm	_
Wheel nuts / bolts	Nm	_
Spark plugs	Nm	_

CapacitiesBaleno 1.81996 to 1997

Engine oil & filter	litres	4.7
Gearbox - 4-speed [5-speed]	litres	2.4
Automatic transmission - refill	litres	_
Final drive	litres	WT Rear: 0.7
Cooling system	litres	5.3
Fuel tank	litres	51

Notes and Illustrations

