

TOYOTA

Land Cruiser Colorado

1996 to 1997

Engine & Cooling

Fuel

Ignition


Electrical

Running gear

Torque settings

Capacities

Notes & Illustrations

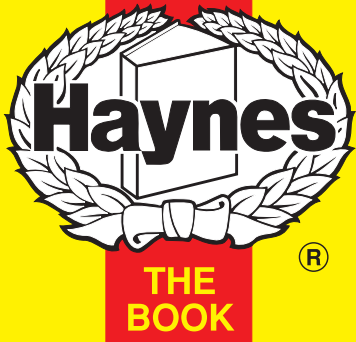

Automotive Technical
DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENU

HELP

Engine and cooling system

Land Cruiser Colorado

1996 to 1997

Type		5VZ-FE V6 24V DOHC
Capacity (cm ³) / number of cylinders		3378 / 6
Compression ratio / pressure	bar	_ / ≥10.2
Oil pressure	bar	0.3 [2.5 to 5.3]
Oil temperature	°C	80
Valve clearance - inlet	mm	0.13 to 0.23
- exhaust	mm	0.27 to 0.37
Firing order		1-2-3-4-5-6
No 1 cylinder position		—
Thermostat opening temperature	°C	80
Radiator cap pressure	bar	0.75 to 1.0

Fuel system

Land Cruiser Colorado

1996 to 1997

Idle speed - manual [auto]	rpm	700±50 N/A
Fast idle speed - manual [auto]	rpm	—
CO @ idle speed [3000 rpm] - see page VI	%	1.5±0.5 WSM
HC @ idle speed [3000 rpm] - see page VI	ppm	≤200
CO2 @ idle speed [3000 rpm] - see page VI	%	—
O2 @ idle speed [3000 rpm] - see page VI	%	—
Carburettor / fuel injection		_Toyota
Type / ref		MPI
Main jet / needle		—
Injection pressure	bar	2.7 to 3.1
Pump pressure	bar	—
Octane rating	RON	95[U]

Ignition system

Land Cruiser Colorado

1996 to 1997

Type		Electronic
Ignition coil		—
Primary resistance	ohms	0.67 to 1.23
Ballast resistor	ohms	—
Voltage - Tmnl 15(+) to earth	V	—
Distributor		—
Points gap (air gap)	mm	—
Dwell angle	° (%)	—
Condenser capacity	µF	—
Rotation		—
Ignition timing - basic [static	° Crankshaft @ rpm	8° to 12° BTDC @ 700±50 ²
V = Vacuum NV = No Vacuum		
Total ignition advance	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Centrifugal check.	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Vacuum range check	mbar	Computer control
Maximum vacuum advance	° Crankshaft	—
Spark plugs		Nippon Denso/NGK
Type		K16TR11 / BKR5EK-11
Electrode gap	mm	1.10

Electrical system

Land Cruiser Colorado

1996 to 1997

Battery	V / CC / RC	—
Alternator voltage / full load current / engine rpm		14.8 / 80
Starter motor current / voltage - cranking	A / V	—
- locked	A / V	—

Running gear

Land Cruiser Colorado

1996 to 1997

Brakes -		
Front (min. friction material thickness)	mm	1.0
Rear (min. friction material thickness)	mm	1.0

Tyres		
Saloon	Size	—
Estate / Van	Size	265/70x16
Pressure - front / rear - Saloon	bar	—
- Estate / Van	bar	2.0 / 2.0

Front suspension / wheel alignment

Toe-in (+) / Toe-out (–)	mm [°]	3.0±2.0
Camber		-0°05'±45'
Castor		2°45'±45'
King pin inclination		—

Rear suspension / wheel alignment

Toe-in (+) / Toe-out (–)	mm [°]	—
Camber		—

Torque wrench settings

Land Cruiser Colorado

1996 to 1997

Cylinder head - stage 1	Nm	34
- stage 2	Nm	+90°
- stage 3	Nm	+90°
- stage 4	Nm	—
Big-end bearings	Nm	25 +90°
Main bearings	Nm	61 +90°
Clutch cover	Nm	19
Flywheel [driveplate]	Nm	85 (83) N
Front hubs	Nm	235
Rear hubs	Nm	WSM
Wheel nuts / bolts	Nm	110
Spark plugs	Nm	18

Capacities

Land Cruiser Colorado

1996 to 1997

Engine oil & filter	litres	5.2
Gearbox - 4-speed [5-speed]	litres	2.2
Automatic transmission - refill	litres	2.0
Final drive	litres	Front: 1.1 Rear: 1.1 ¹
Cooling system	litres	8.0
Fuel tank	litres	—

Notes and Illustrations

¹Transfer box: 1.2

² TE1 & E1 shorted

3378 cm³ 24V

3378 cm³ 24V