


Column




Removal


1. Remove the center pad.
2. Remove the steering shaft nut.
3. Remove the steering wheel by rocking it slightly from side-to-side as you pull steadily with both hands.

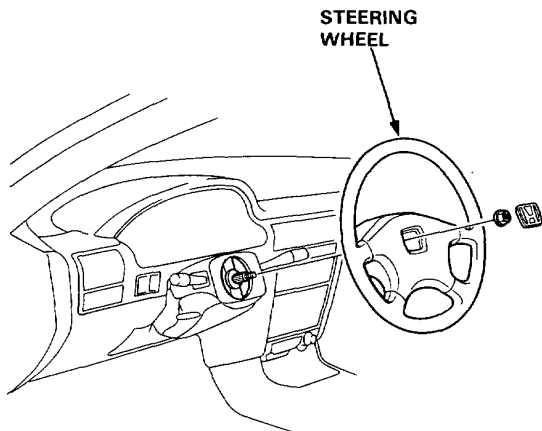


4. Remove the lower cover and driver's knee bolster.

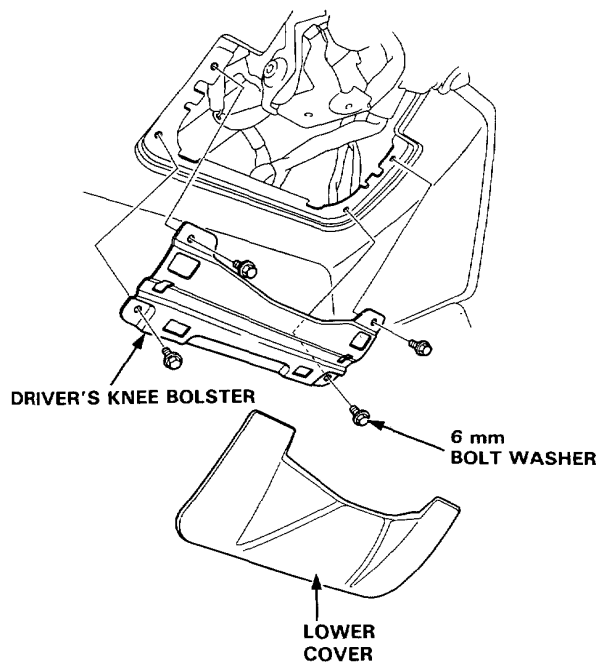

5. Remove the upper and lower column covers.

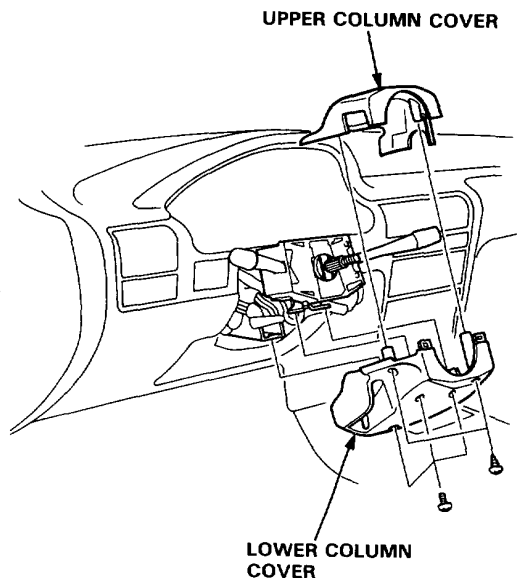

6. Disconnect each wire coupler from the combination switch.
7. Remove the turn signal canceling sleeve and combination switch assembly.

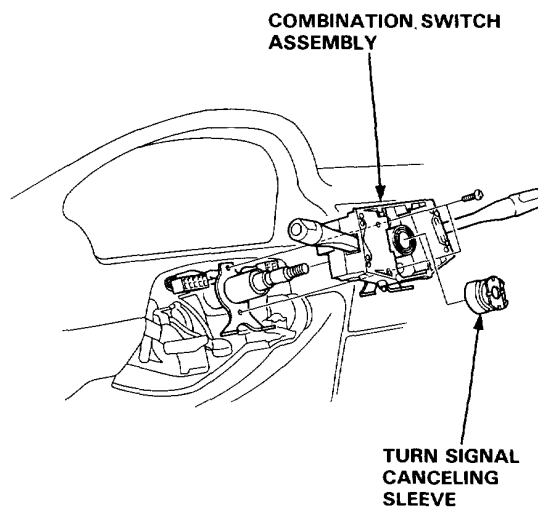

(cont'd)

Wiring Diagrams

Index

Air Conditioner	17	Lights, Interior	
Anti-Lock Brake System (ALB)	14	Courtesy Lights	3
Automatic Transmission Control System	14	Dashlight Brightness Control	6
Battery	1	Dome Lights	3
Blower Controls	17	Glove Box Light	6
Charging System	1	Trunk Light	6
Cigarette Lighter	10	Vanity Mirror Light	6
Clock	10	Lighting System	6
Cooling Fan Control	16	Mirror, Power	6
Cruise Control System	12	Seat, Power	13
Defogger, Rear Window	11	Starting System	1
Door Lock, Power	12	Stereo Sound System	10
Fuel and Emissions	16	Sunroof	11
Gauges	2	Turn Signal / Hazard Flasher System	13
Headlight Adjuster System	4	Warning System	
Horns	4	ALB Warning	2
Ignition Switch	1	Brake Warning	2
Ignition System	1	Charge Warning	2
Indicators		Check Engine Warning	2
Cruise Control Indicator	2	Hazard Warning	2
Trunk Open Indicator	2	Light-on Warning	5
High Beam Indicator	2	Oil Pressure Warning	2
Shift Lever Position Indicator	4	Washers	
Turn Signal Indicator	2	Windshield	13
Integrated Control Unit	5	Headlight Washer	13
Lights, Exterior		Windows, Power	7
Back-up Lights	10	Wipers	
Brake Lights	3	Windshield	7
Hazard Lights	2		
Headlights	6		
License Plate Lights	6		
Marker Lights	6		
Taillights	6		