



Column

Removal (cont'd)


8. Disconnect each wire coupler from the fuse box under the left side of the dash.

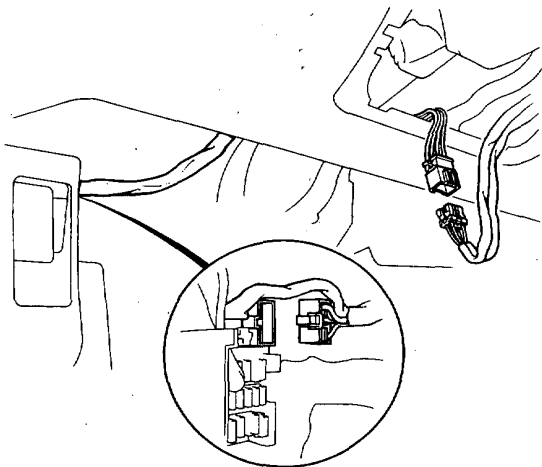


9. Remove the steering joint cover.

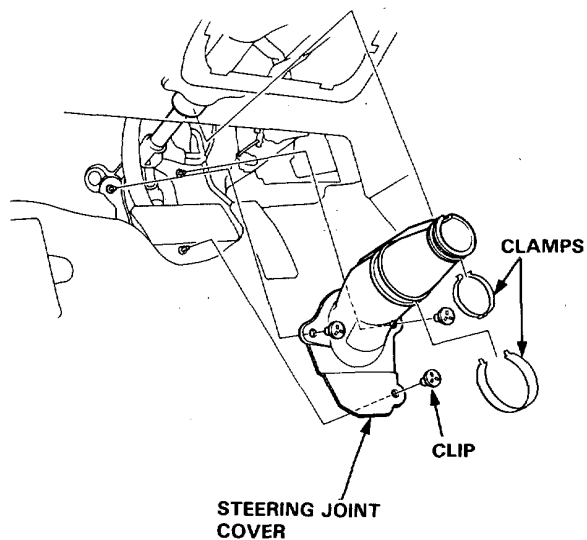

10. Remove the steering joint bolts and move the joint toward the column.

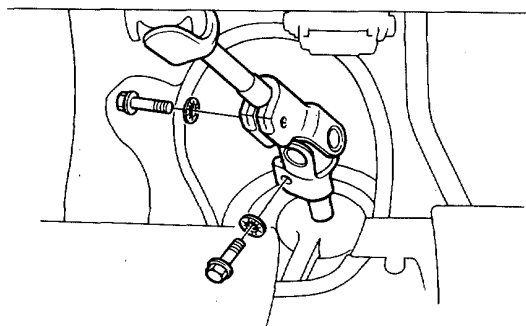

11. Remove the column holder.
12. Remove the attaching nuts, then remove the steering column assembly.

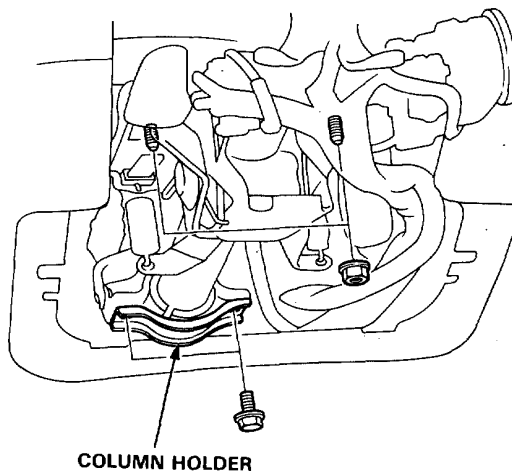



Inspection

Tilt lever adjustment:

Attach a spring scale 10 mm (0.39 in) from the end of knob. Measure the force required to move the lever.

If the force measured is not within the specification, remove the spin stopper then adjust the tilt lock bolt (tighten or loosen) until the correct force can be obtained.

Preload: 75 N (7.5 kg, 17-lbs)

