



8. Using solvent and a brush, wash any oil and dirt off the control unit, its lines, and that end of the gearbox. Blow dry with compressed air.


9. Using flare nut wrenches, disconnect the four lines from the control unit.

A: From pump: 14 mm wrench

B: To oil cooler: 12 mm wrench


C: To reservoir: 17 mm wrench

D: To speed sensor: 12 mm wrench

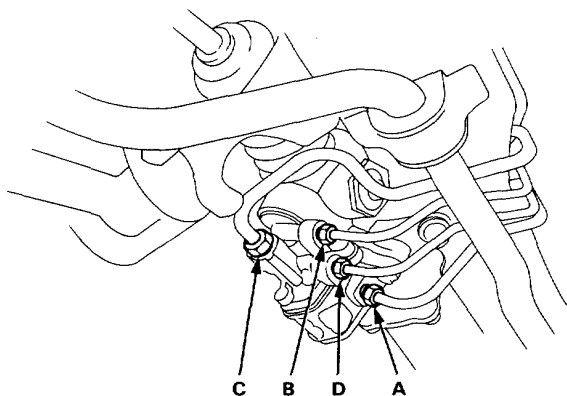

10. Disconnect the 4P connector from the oxygen sensor.


11. Remove the header pipe bracket nuts.

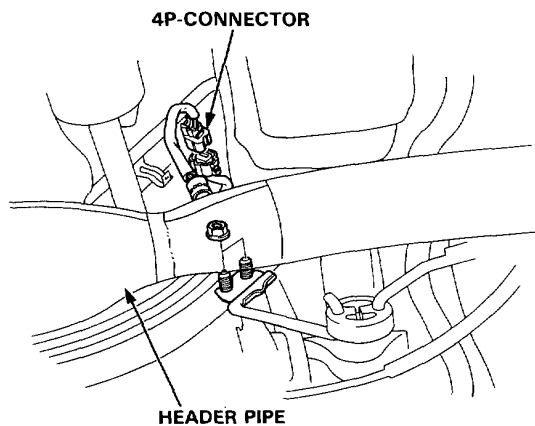

12. Remove the self-locking nuts that connect the header pipe to the catalytic converter, and the header pipe to the exhaust manifold.


13. Remove the header pipe.

CAUTION: Replace the exhaust gasket and self-locking nuts when you reinstall the pipe.

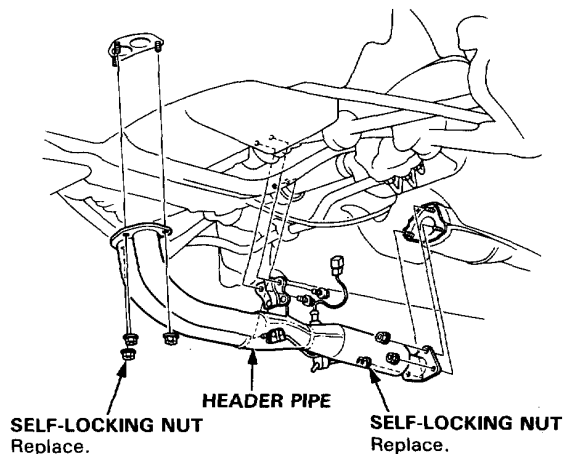

Automatic transmission:

14. Remove the control cable from the clamp by removing the cable holder.

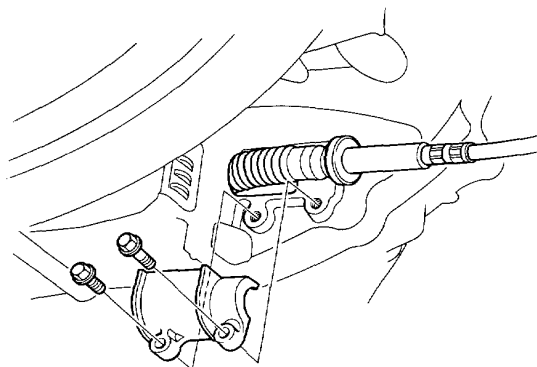


(cont'd)

Steering Gearbox

Removal (cont'd)


4WS Only.

- Separate the joint guard cap and the joint guard.
- Remove the joint bolt from the driven pinion side.

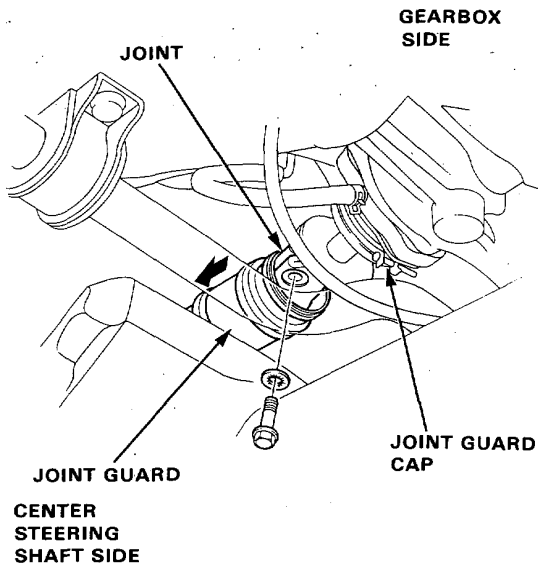


- Remove the joint bolt from the center steering shaft side, then slide the joint back to disconnect it from the driven pinion.

15. Remove the bolts, and lower the stabilizer.

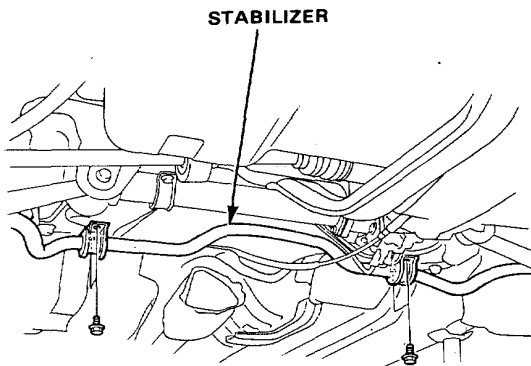


16. Remove the steering gearbox mounting bolts.

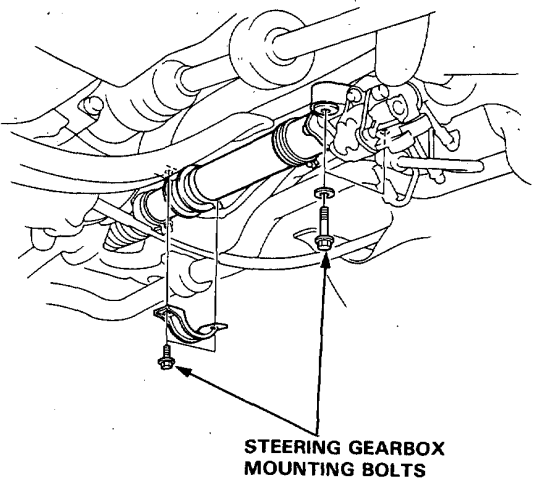

17. Slide the tie rod all the way to the right side.

18. Slide the gearbox right so that the left tie rod clears the bottom of the rear beam, then remove the gearbox.

CAUTION: Be careful not to bend or damage the four power steering lines when removing the gearbox assembly.

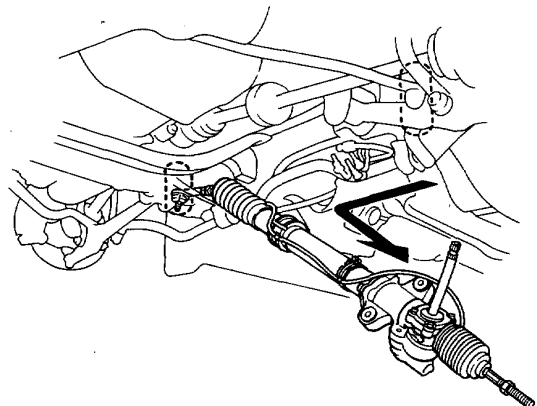

Steering Gearbox



Illustrated Index (2WS)

NOTE:

- LH Drive shown, RH Drive is similar.
- The valve body unit removal see pages 11-38.

CAUTION:

- Before disassembling the gearbox, wash it off with solvent and a brush.
- Thoroughly clean all disassembled parts.
- Always replace O-rings and seals.
- Replace parts with damaged sliding surfaces.
- Do not dip seals and O-rings in solvent; coat O-rings with grease, make sure they stay in position during reassembly, and use the appropriate special tools to install them where necessary.

-  **STEERING GREASE** Part Number 08733-B070E

