

Front Suspension

Knuckle/Hub

NOTE:

- Use only genuine Honda aluminum wheel weights. Non-genuine aluminum wheel weights may corrode and damage aluminum wheel.
- Remove the center cap by prying it out with a flat screwdriver. Avoid damage to the cap by not allowing it to fall during removal. Use a rag at the point you are going to pry, because aluminum alloy wheels can be easily damaged.

CAUTION: Use a rag at the point you are going to pry, because aluminum alloy wheels can be easily damaged.

