

# Front Suspension

## Illustrated Index

### Overall Suspension

#### CAUTION:

- Replace the self-locking nuts after removal.
- Replace the self-locking bolts if you can easily thread a non-self locking nut past their nylon locking inserts. (If should require 1 N·m (0.1 kg-m, 0.7 lb-ft) of torque to turn the test nut on the bolt).

#### NOTE:

- Wipe off the grease before tightening the nut at the ball joint.
- Torque specifications, see page 12-15.

