 


# Rear Suspension



## Torque Specifications-4WS

### CAUTION:

- Replace the self-locking nuts after removal.
- Replace the self-locking bolts if you can easily thread a non-self-locking nut past nylon locking inserts. (If should require 1 N·m (0.1 kg-m, 0.7 lb-ft) of torque to turn the test nut on the bolt).

The vehicle should be on the ground before any bolts or nuts connected to rubber mounts or bushings are tightened.

NOTE: Wipe off the grease before tightening the nut at the ball joint.

