

Upper Arm/Stabilizer/Trailing Arm/Lower Arm



Index/Inspection-4WS

Overall Suspension

NOTE:

- Use only genuine Honda aluminum wheel weights. Non-genuine aluminum wheel weights may corrode and damage aluminum wheel.
- Remove the center cap by prying it out with a flat screwdriver. Avoid damage to the cap by not allowing it to fall during removal.
- Torque specifications, see page 12-27.

