





Bushing Replacement

Knuckle Bushing

Removal:

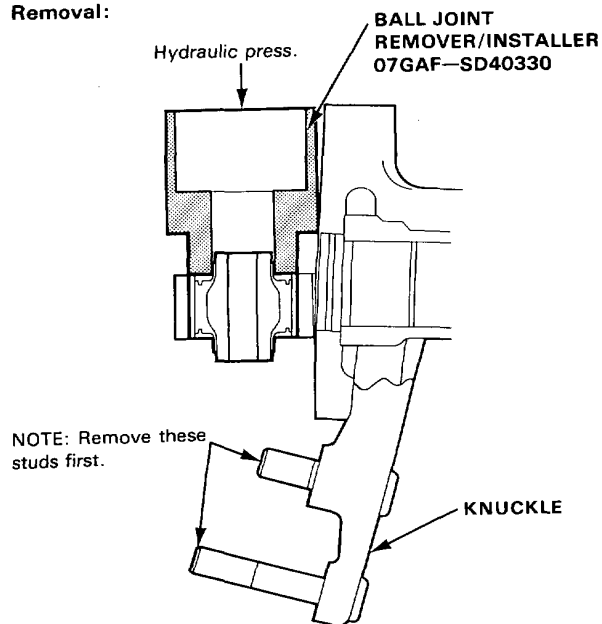

Installation:

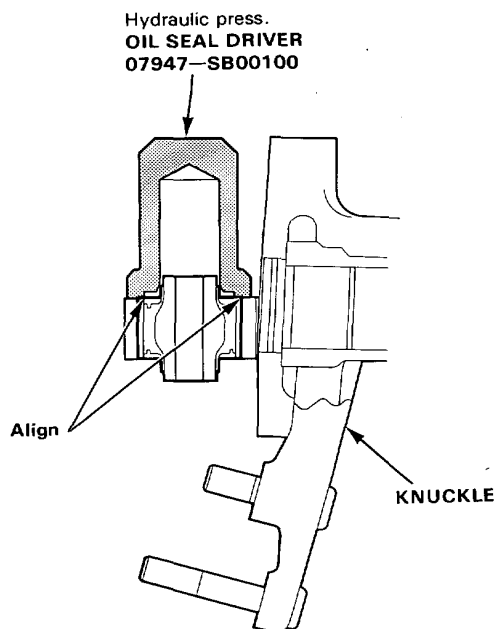


Lower Arm Bushings

(Lower Arm A/Lower Arm B)

Install the bushings so that 8.5 ± 0.5 mm (0.34 ± 0.02 in) protrudes from the lower arm A or B as shown.

Removal:

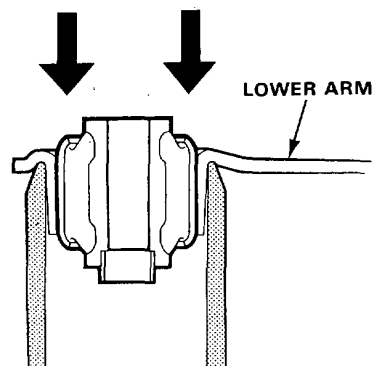

Installation:

