

Troubleshooting



Flowchart



Problem Code 1: Hydraulic Controlled Components.

NOTE: The LED does not blink when the following failures occur.

- The contact points of the motor relay remain closed (the motor runs continuously even after the ignition key is removed).
- YEL/RED lead is shorted or the control unit is internally shorted (the motor stops when the ignition switch is turned lock).

Pre-test steps:

- Check ALB 40A Fuse.
- Check all brake system hoses and pipes (low and high pressure) for signs of leaking, bending or kinking.
- Check reservoir fluid level, and if necessary, fill to the MAX level.

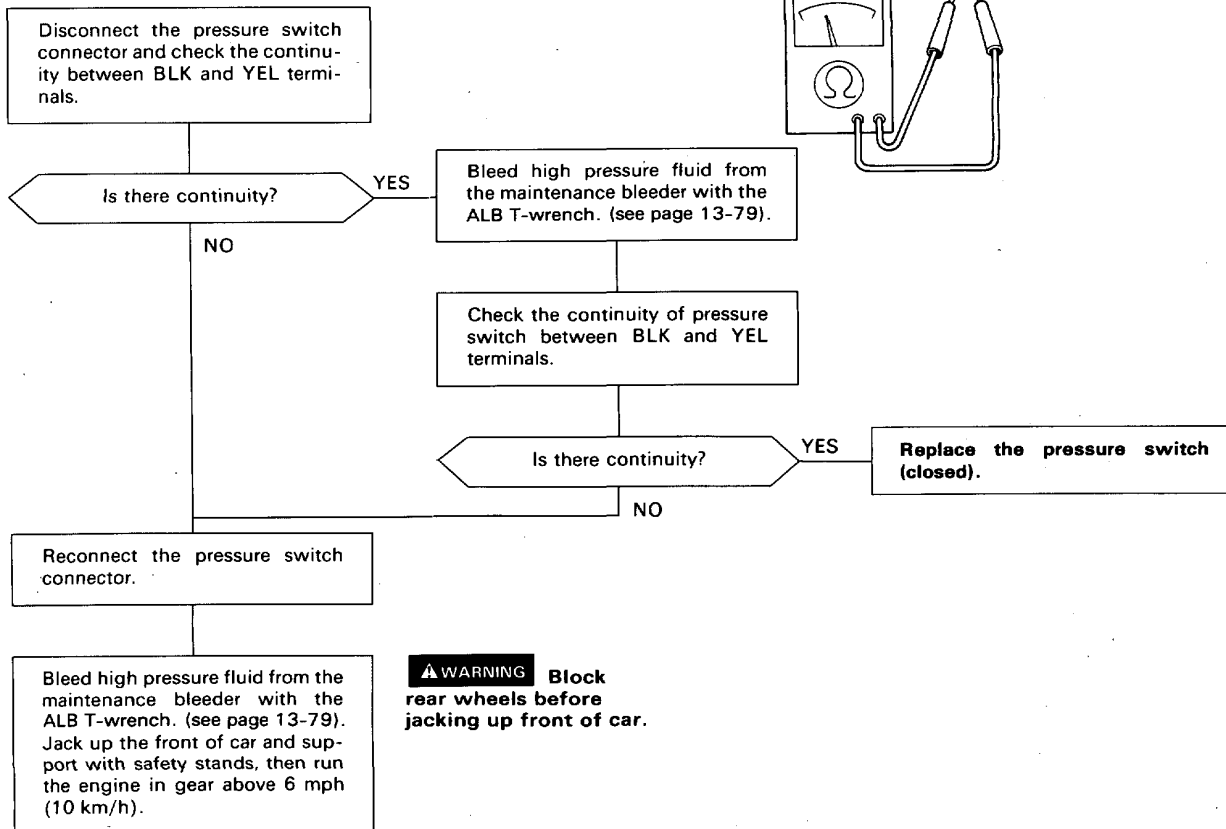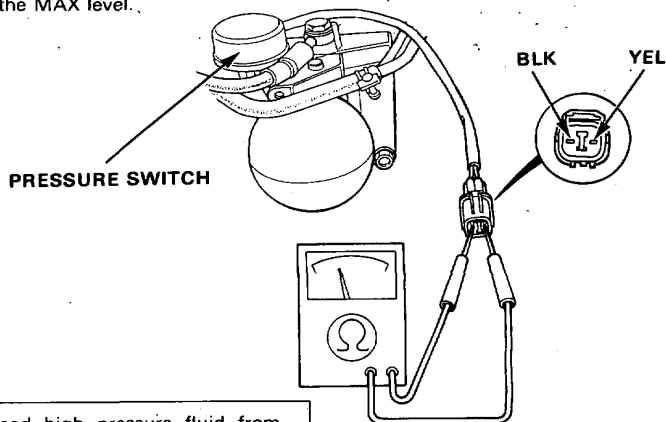

⚠ WARNING Block rear wheels before jacking up front of car.

(To page 13-52).

(cont'd)