


Accumulator Unit

Accumulator/Pressure Switch

1. Drain the high pressure brake fluid from the power unit (see page 13-64).
2. Remove three 6 mm flange bolts, then remove the accumulator from the accumulator bracket.
3. Remove the pressure switch bolt and oil bolt then remove the pressure switch from the bracket.

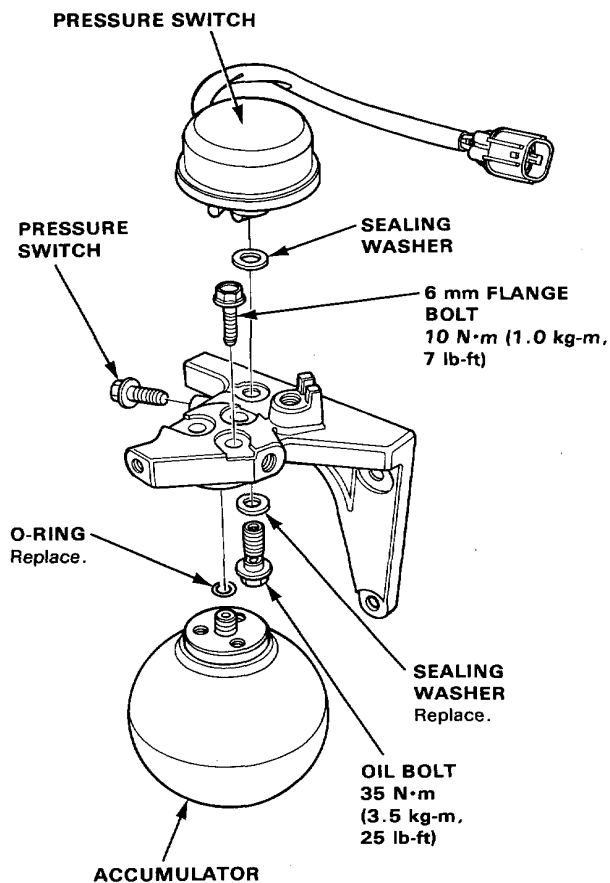

Accumulator Disposal

⚠ WARNING The accumulator contains high pressure nitrogen gas, do not puncture expose to flame or attempt to disassemble the accumulator or it may explode; severe personal injury may result.

1. Secure the accumulator in a vice so that the relief plug points straight up.
2. Slowly turn the plug 3-1/2 turns and then wait 3 minutes for all pressure to escape.
3. Remove the plug completely and dispose of the accumulator unit.

