


Power Door Mirror

Removal

1. Pry out the cover panel with a flat tip screwdriver, then remove the cover panel. Disconnect the power mirror connector.
2. Remove the mirror mounting screws while holding the mirror.

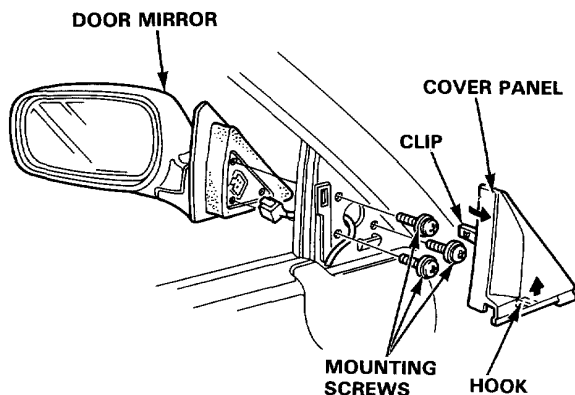


3. Install the door mirror in the reverse order of removal.
4. With the door and door glass closed fully, check for water and air leaks.


NOTE: Do not use high pressure water.

Mirror Glass Replacement

1. Insert a screwdriver in the mirror through the service hole, and loosen the actuator retaining screw.

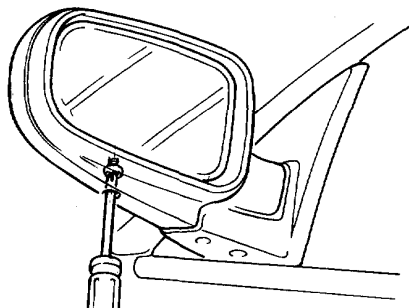

2. Pull the actuator out from the mirror housing.
3. Pull the lock cap stopper and remove the stopper pin, then separate the actuator and mirror holder.

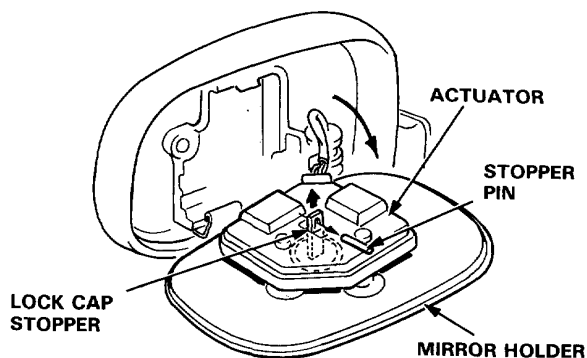

4. Heat the edge of the glass with a low powered heat gun for several minutes, then remove the glass.
5. Install the glass in the mirror case, narrow end first.

