


# Interior Trim

## Replacement

Disassemble in numbered sequence.

⊙: Clip locations

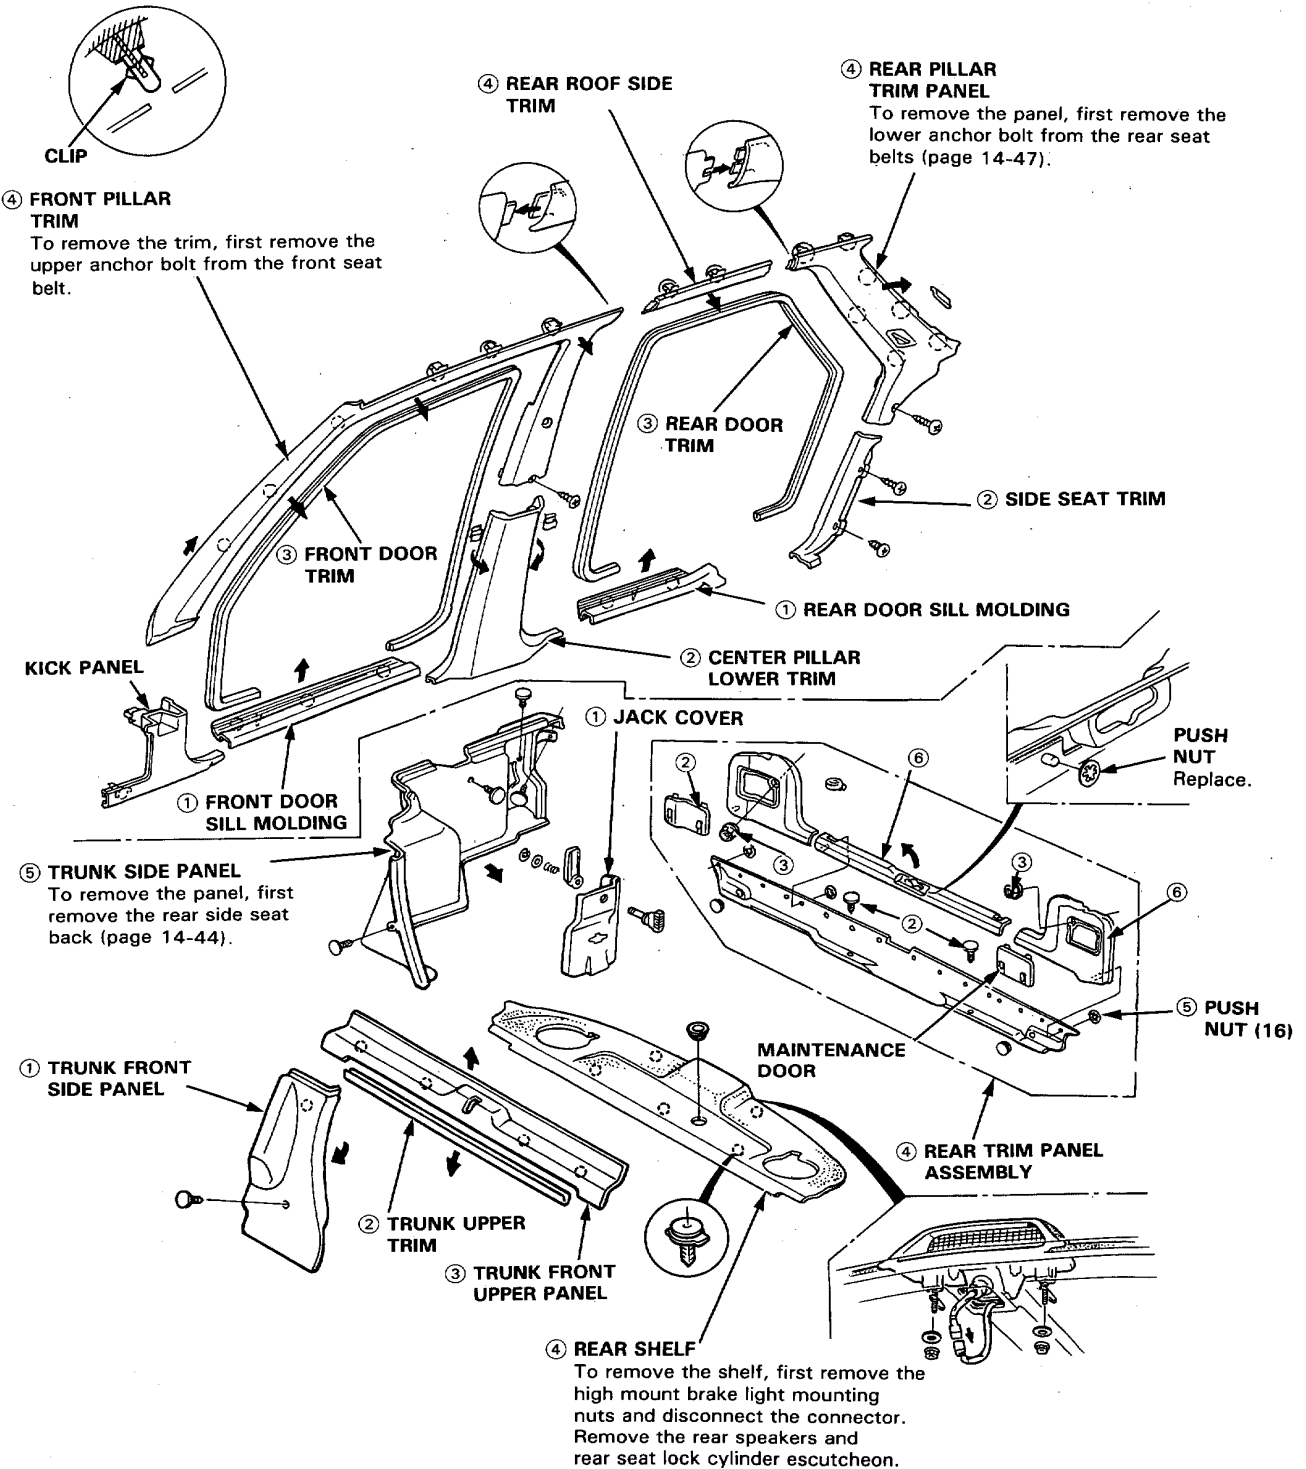

# Headliner




## Replacement

### 1. Remove:

- Sun visors and holders.
- Dome light.
- Rearview mirror assembly (page 14-49).
- Front pillar trims (page 14-38).
- Rear pillar trim panels (page 14-38).
- Roof trim (Sunroof model).
- Grab handles.
- Rear roof side trim (page 14-38).
- Rear seat (pages 14-44, 45).
- Front seat (Passenger's).
- Recline down the front seat back rearward (Driver's).

### 2. Remove the 2 mounting screws.

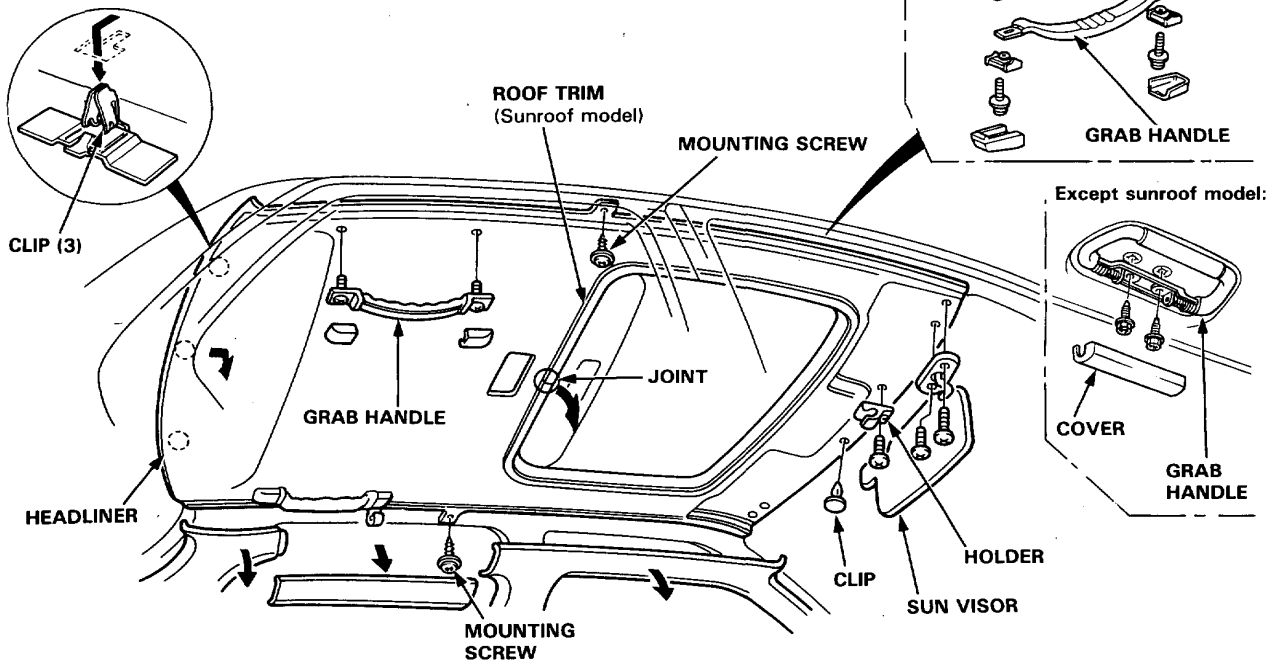

### 3. Remove the front and rear clips, then remove the headliner.

### 4. Remove the headliner from behind the front passenger's seat door opening.


#### NOTE:

- Take care not to bend the headliner.
- Keep water away from the headliner.
- Be careful not to damage the seats, dashboard and other interior trim.

### 5. Install the headliner in the reverse order of removal.

#### NOTE:

- When installing the headliner inside the passenger cabin, be careful not to fold or bend it. Also, be careful not to scratch the body.
- Check that the two sides of the headliner are securely attached to the trim.
- When installing the roof trim, install the joint towards the rear (Sunroof model).

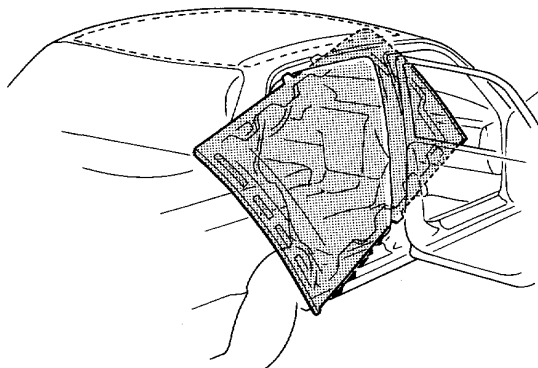


# Front Seat


## Replacement

NOTE: Take care not to scratch or score the seat covers and body.


1. Remove the seat track end covers as shown.
2. Remove the mounting bolts and disconnect the connectors, then remove the seat assembly.

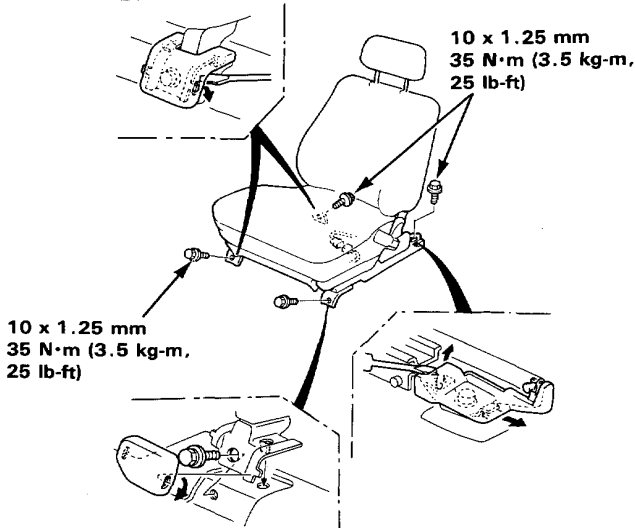


3. Remove the bracket cover and center cover.

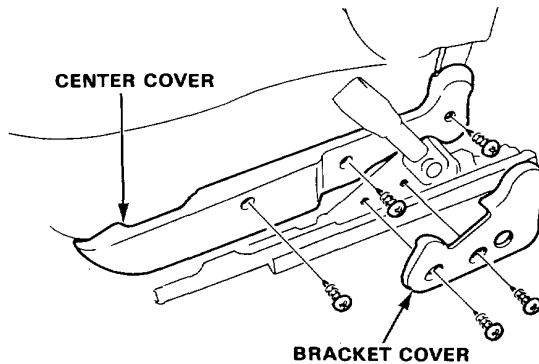

4. Remove the reclining adjuster cover and power seat switch.

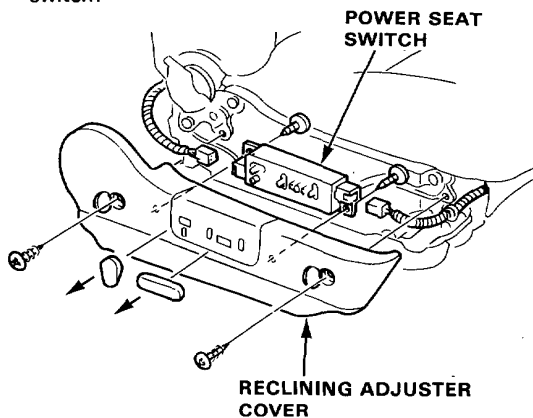

5. Remove the mounting bolts, then remove the seat cushion.

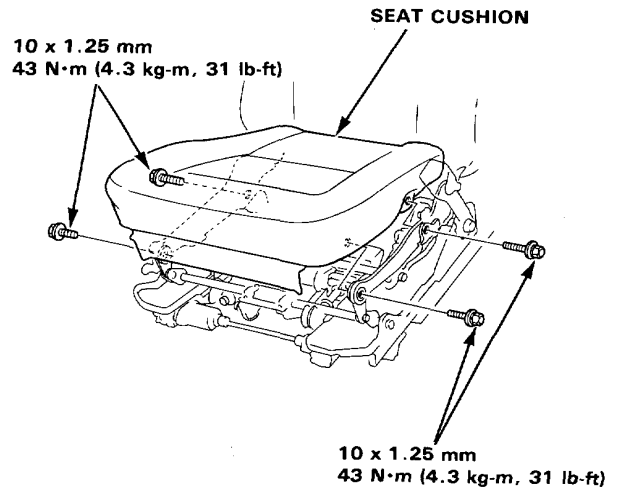

6. Remove the seat back cover.
7. Turn over the seat cover and remove the 2 mounting bolts.
8. Remove the pivot nut, then remove the seat back.

PIVOT NUT  
8 x 1.25 mm  
22 N·m (2.2 kg-m, 16 lb-ft)

