

# Front Seat

## Seat Device Disassembly (cont'd)

Height power adjusted type:

NOTE:


- Before installing the seat, make sure there are no twists or pinch in the seat wires.
- Grease the moving surfaces.

Bolts torque:




① 5.0 N·m (0.5 kg-m, 3.6 lb-ft)

② 12 N·m (1.2 kg-m, 9 lb-ft)

NOTE: \*On reassembly, use liquid thread lock.

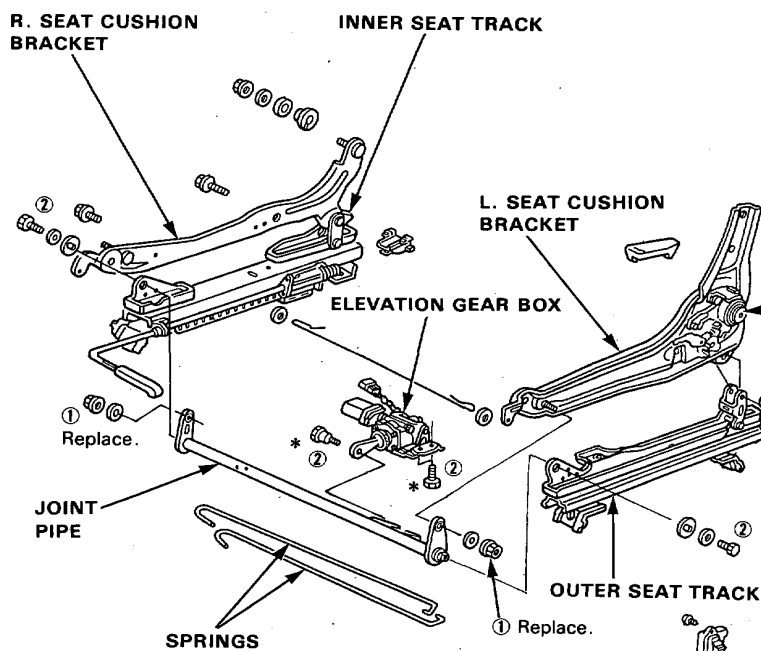

Manual adjusted type:

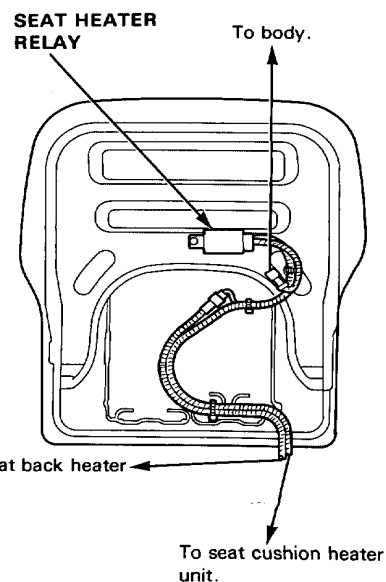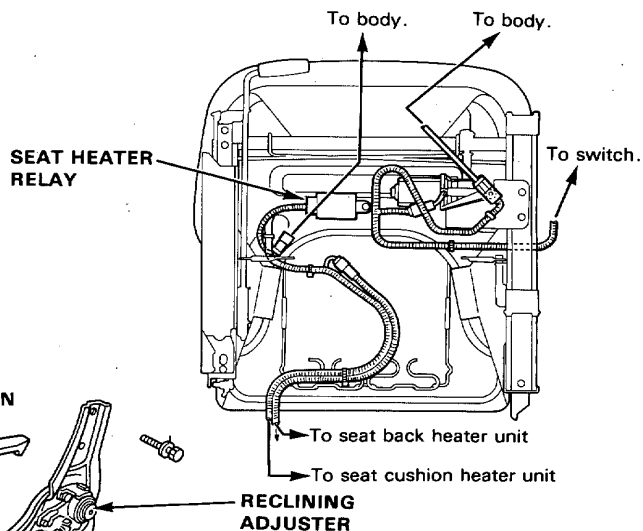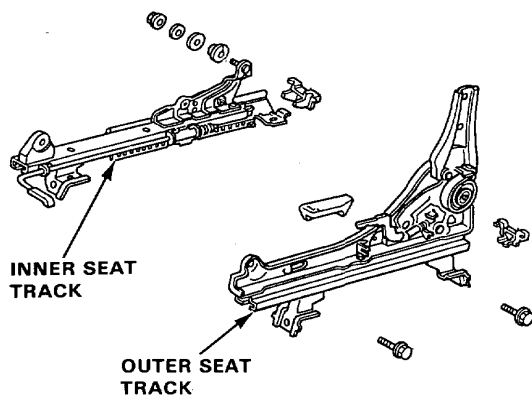






## Cover Replacement

**CAUTION:** Wear gloves to remove and install the seat cover.

**NOTE:** Take care not to open the seams or damage the cover.


### Seat back cover removal.

1. Remove the seat back from the seat track and reclining adjuster (page 14-40).
2. Remove the lumbar support knob.
3. Turn over the seat cover by releasing all the hooks and inside springs.
4. Remove the headrest guides, then remove the seat cover.

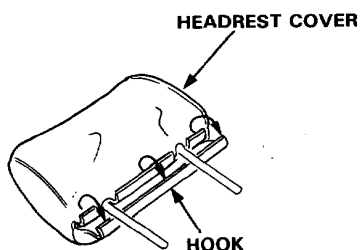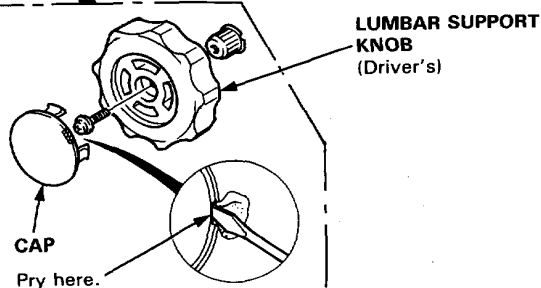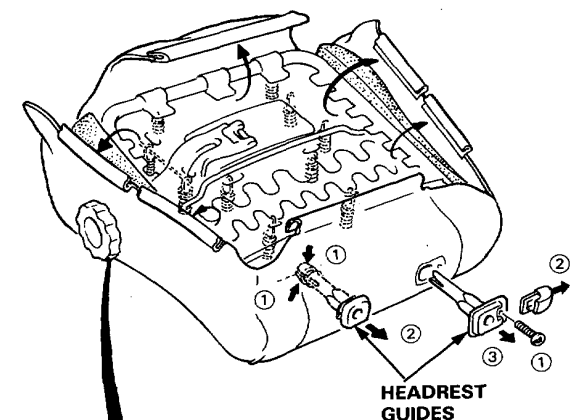

### Seat cushion cover removal.

1. Remove the seat cushion from the seat tracks (page 14-40).
2. Remove all hooks, clips and inside springs from under the seat cushion, then turn over the seat cover.
3. Turn up the edge of the trim cover all the way around, then release the clips of the cushion.

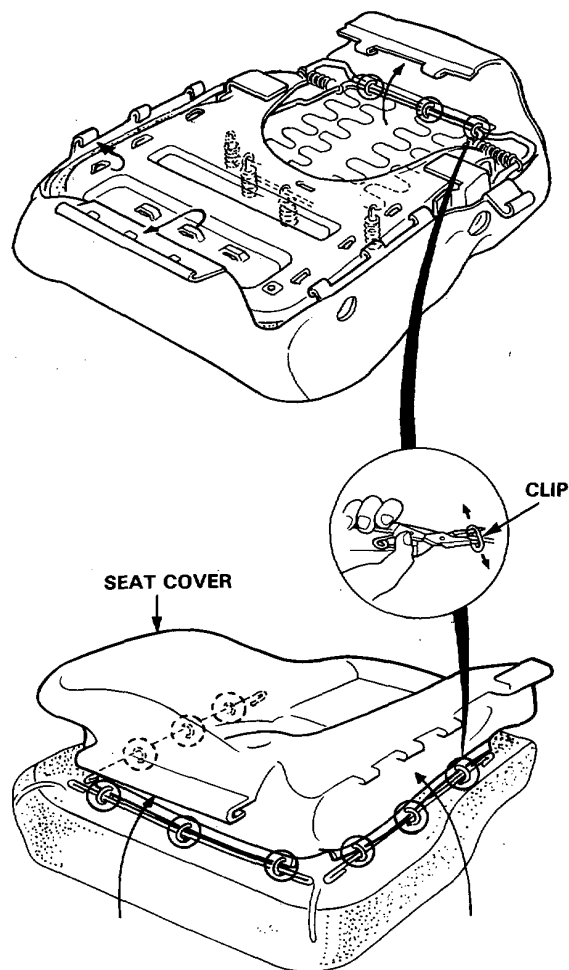

**NOTE:** To prevent wrinkles when installing a seat cover, make sure the material is stretched evenly over the frame before securing all the clips.