


Rear Seat Belts



Replacement

CAUTION: Check the seat belts for damage and replace them if necessary. Be careful not to damage them during removal and installation.

1. Remove the rear seat (pages 14-44, 45).
2. Remove the rear pillar trim panel.
3. Remove the upper anchor bolt, the lower anchor bolt and retractor bolt with a 17 mm socket or box-end wrench.

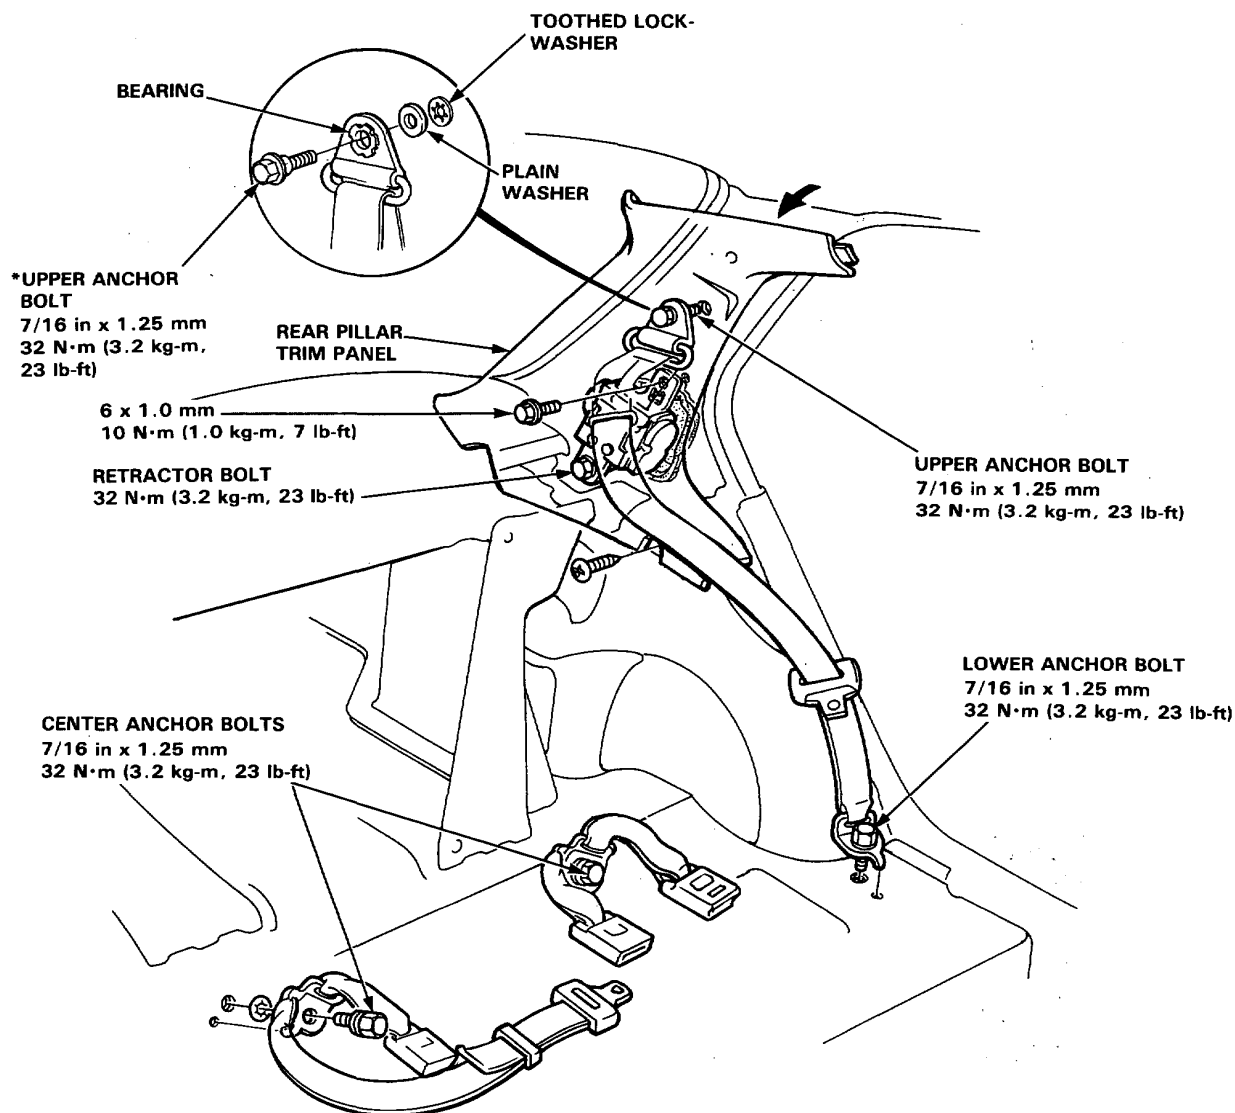

4. Check that the retractor locking mechanism functions as described on page 14-48.
5. Install the seat belt in the reverse order of removal.

NOTE:

- Before attaching the rear pillar trim panel and rear seat, make sure there are no twists in the belt.
- * On reassembly, replace the upper anchor bolt and use liquid thread lock.