


Rear Bumper

Replacement

1. Open the trunk lid and pry off the maintenance caps, then remove the 2 upper bumper mounting nuts from the trunk area.
2. Remove the 2 mud guard screws and 2 bumper mounting screws on each side at the corner edge of the bumper.
3. Remove the clips, then remove the under protectors on each side from under the trunk floor.
4. Remove the 2 lower bumper mounting nuts and center clip from under the trunk floor.
5. Remove the bumper by sliding it to the rear.

NOTE:

- Do not damage the threads of the bumper bolts.
- Take care not to scratch the bumper face.

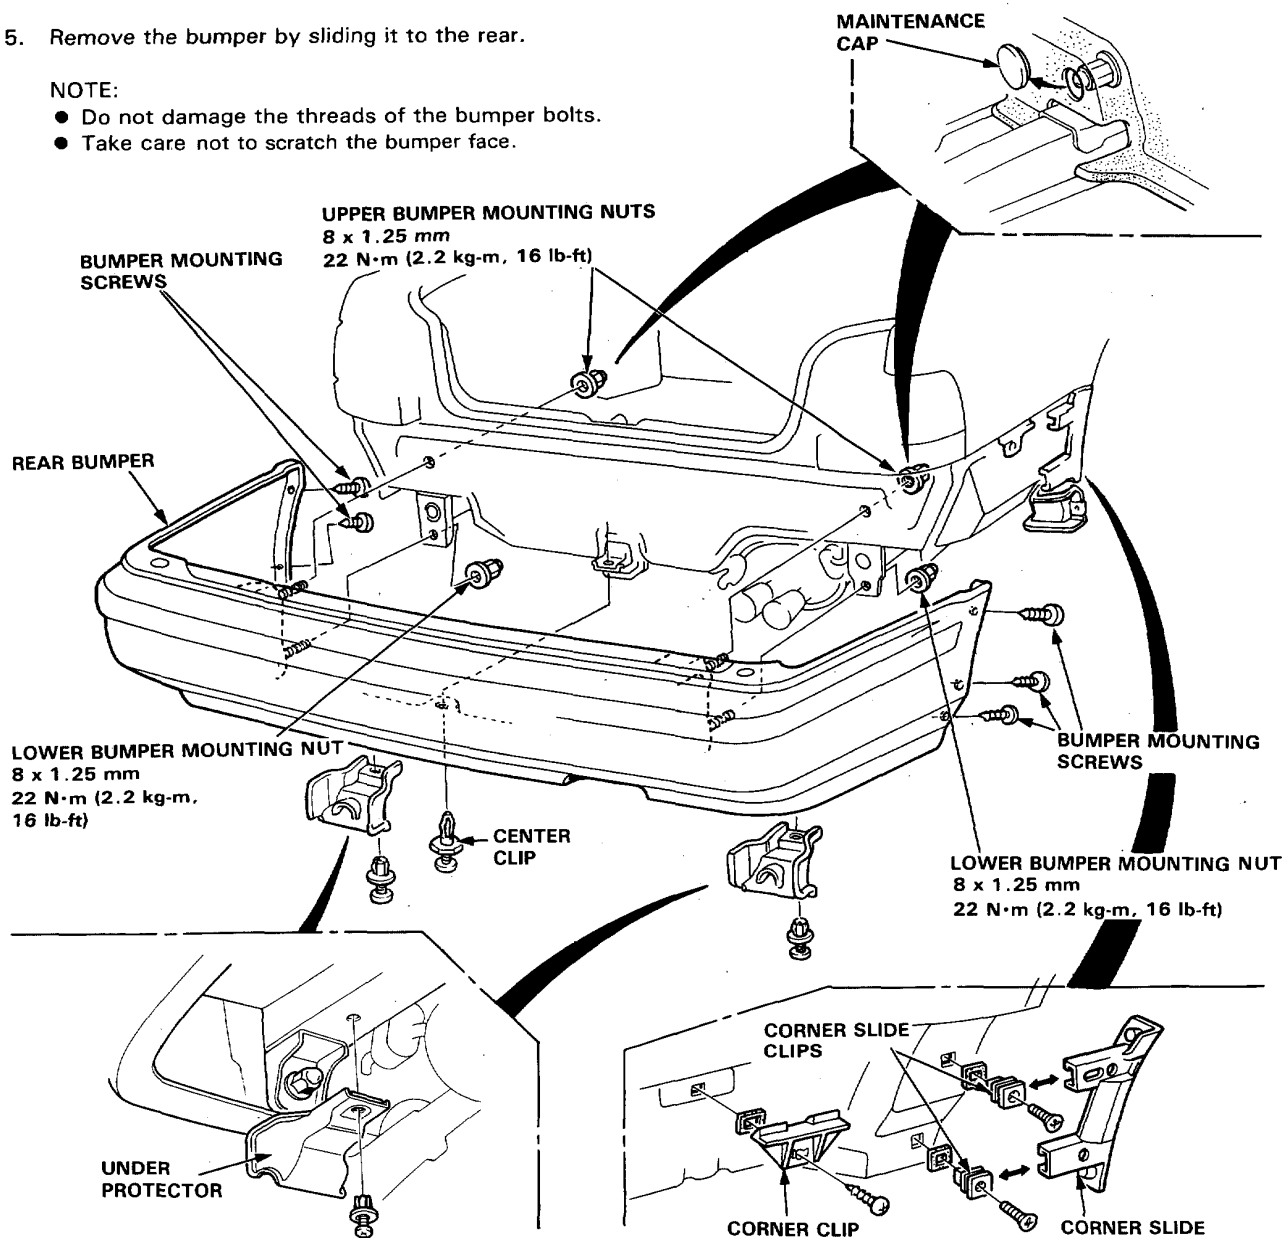

6. Install parts in the reverse order of removal. Use order of removal.