



Troubleshooting Flowchart-Blower

Blower motor runs, but one or more speeds are inoperative.

Disconnect the 5-P connector from the blower resistor.

Check the resistance between the No. 1 and No. 5 terminals of the resistor.

Is there about 2.7 Ω ?

NO

Replace the resistor

YES

Reconnect the 5-P connector to the resistor.

Disconnect the 8-P connector from the fan switch.

Turn the ignition switch on.

Measure the voltage between:

- BLU terminal and body ground.
- BLU/WHT terminal and body ground.
- BLU/YEL terminal and body ground.
- BLU/BLK terminal and body ground.
- BLU/RED terminal and body ground.


Is there battery voltage ?

NO


Repair open in BLU, BLU/WHT, BLU/YEL, BLU/BLK or BLU/RED wire (s) between the fan switch and resistor.

YES

Replace the fan switch.

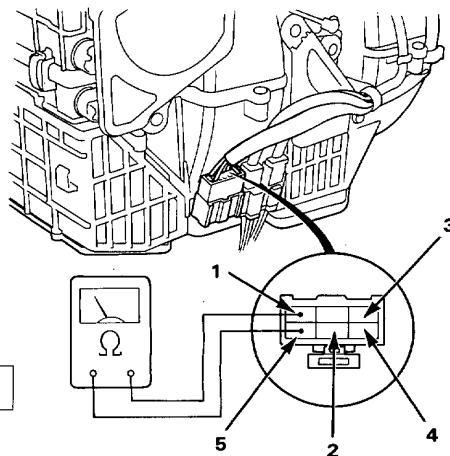

View from wire side

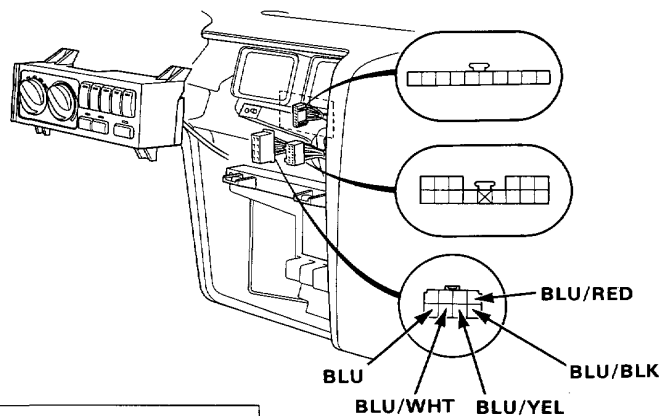

View from wire side