




Overhaul

1. Remove the heater assembly.
2. Remove the air mix rod from the clip.
3. Remove the self-tapping screws (2) and heater core cover.
4. Remove the self-tapping screw and clamp.
5. Pull out the heater core from the heater housing.
6. Install the heater in the reverse order of removal.

FUNCTION CONTROL MOTOR (Button type only)

- When installing the function control motor, be careful when connecting the link.
- Try the function control motor in every mode for two minutes, and make sure the motor operates correctly in each mode.

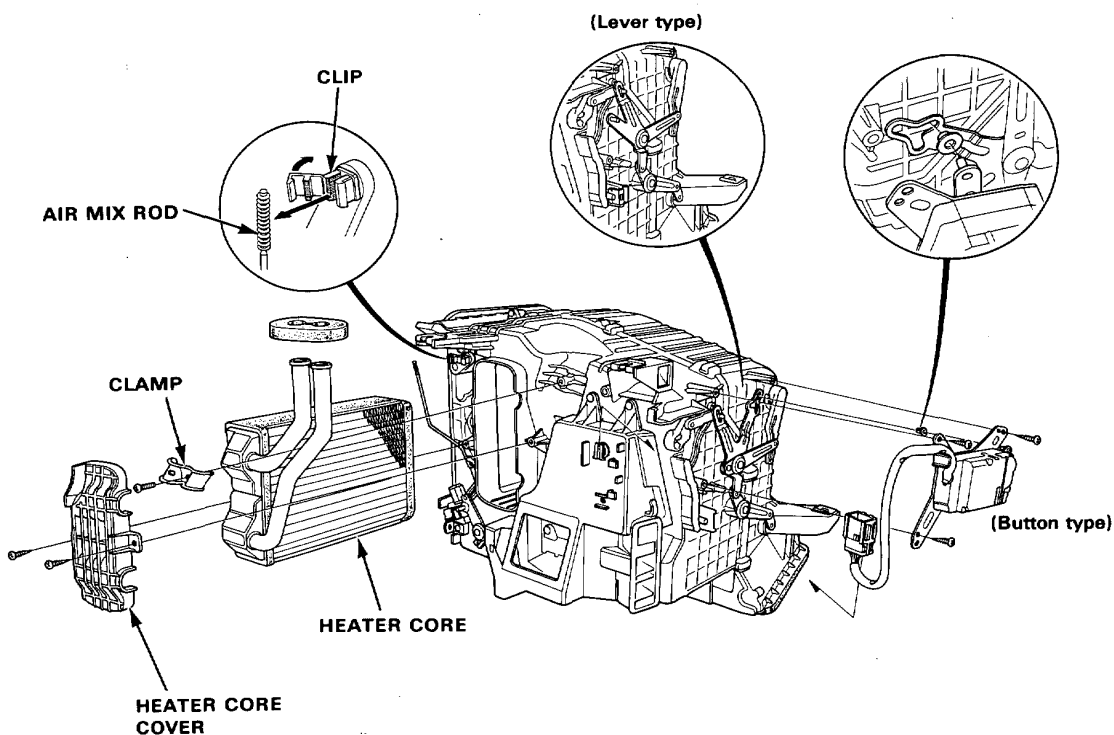

Adjustment

1. Heater linkage: page 15-24
2. Air mix rod: page 15-31
3. Function control cable (lever type only): page 15-32