

# Heater Assembly

## Heater Linkage Adjustment


(LH)

(Button Type)

(DEF door adjustment)

Set the heater control switch on HEAT, to adjust for DEF leak (shut ~20 %).

1. Loosen the adjusting screw.
2. Adjust the heater linkage as shown.
3. Tighten the adjusting screw.

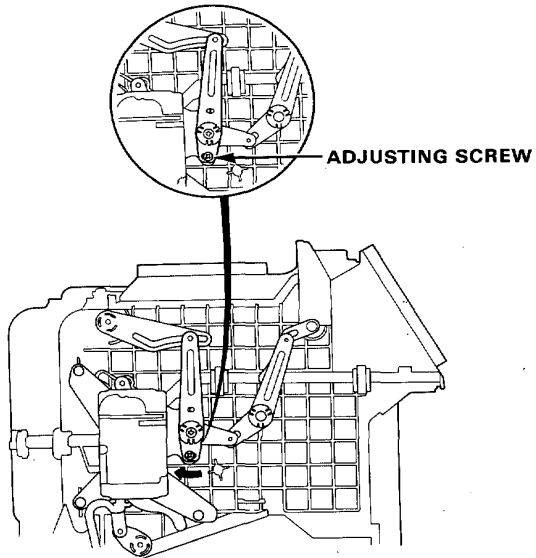


(RH)

(Lever Type)

(HEAT door adjustment)

When HEAT door is closed, air should not leak from the HEAT door.

1. Loosen the adjusting screw.
2. Adjust the heater linkage.
3. Tighten the adjusting screw.

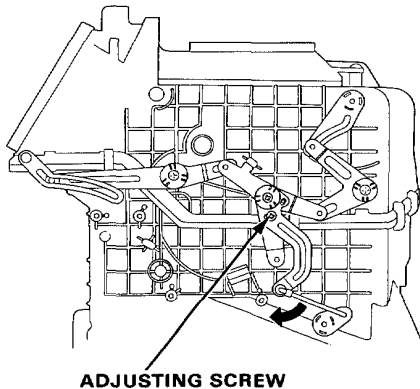

(RH)

(Button Type)

(DEF door adjustment)

Set the heater control switch on HEAT, to adjust for DEF leak (shut ~20 %).

1. Loosen the adjusting screw.
2. Adjust the heater linkage as shown.
3. Tighten the adjusting screw.

(HEAT door adjustment)

When HEAT door is closed, air should not leak from the HEAT door.

1. Loosen the adjusting screw.
2. Adjusting the heater linkage.
3. Tighten the adjusting screw.

