


Heater Control Cables


Heater Valve Cable Adjustment

(LH)

1. Remove the air mix cable.
2. Turn the cable arm to the stopper A and connect the end of the cable to the arm.
3. Gently slide the cable outer housing back from the end enough to take up any slack in the cable, but not enough to make the temperature control dial (lever) move, then snap the cable housing into the clamp.
 - Hold the end of the cable housing to the cable stopper B.

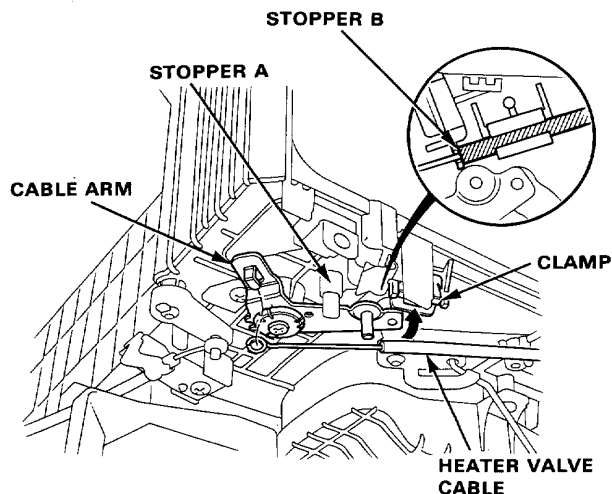


4. Turn the water valve arm to SHUT and connect the end of the cable to the arm.
5. Gently slide the cable outer housing back from the end enough to take up any slack in the cable, but not enough to make the temperature control dial (lever) move, then snap the cable housing into the clamp.

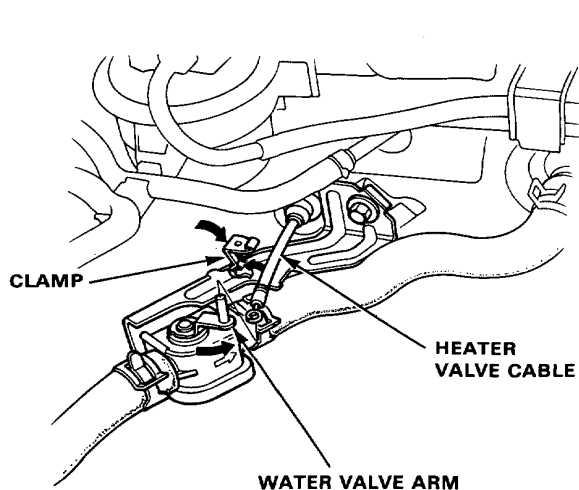

(RH)

NOTE: Before adjusting the heater valve cable, air mix cable should be adjusted.

1. Set the temperature control dial (lever) on COOL.
2. Turn the cable arm to the stopper and connect the end of the cable to the arm.
3. Gently slide the cable outer housing back from the end enough to take up any slack in the cable, but not enough to make the temperature control dial (lever) move, then snap the cable housing into the clamp.

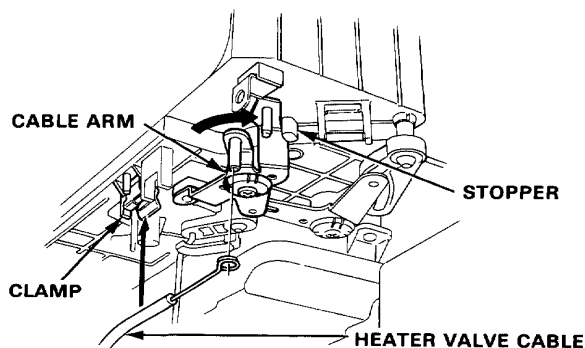

4. Turn the water valve arm to SHUT and connect the end of the cable to the arm.
5. Gently slide the cable outer housing back from the end enough to take up any slack in the cable, but not enough to make the temperature control dial (lever) move, then snap the cable housing into the clamp.

