




Recirculation Control Switch

1. Disconnect the (button type: 14-P, lever type: 10-P) connector from the heater control switch.
2. Check for continuity between the terminals of the heater control switch according to the table below.


(Button type)

Terminal	C	B	A
Position			
		○—○	
	○—○		

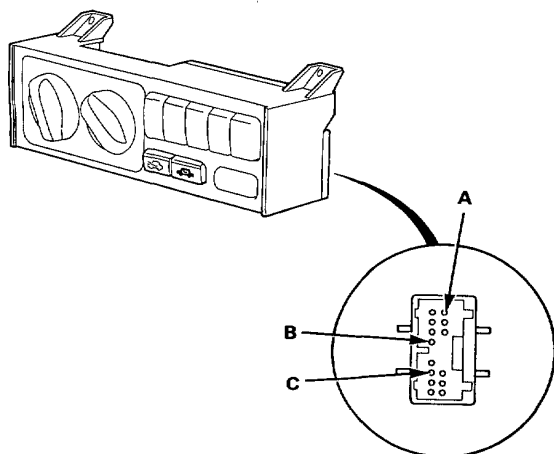

(Lever type)

Terminal	C	B	A
Position			
(OFF)		○—○	
(ON)	○—○		

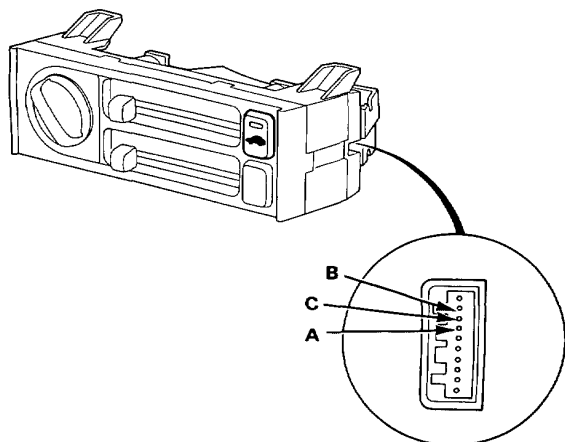

Function Control Switch

(Button type only)

1. Disconnect the 14-P connector from the heater control switch.
2. Check for continuity between the terminals of the heater control switch according to the table below.

Terminal	5	4	3	2	1	6
Position						
					○—○	
				○—○		
			○—○			
		○—○				
	○—○					

