

# Evaporator




## Replacement


1. Disconnect the battery negative terminal.
2. Discharge the refrigerant (page 15-80).
3. Disconnect the receiver line and suction hose from the evaporator.

**CAUTION:** Cap the open fittings immediately to keep moisture out of the system.


(Without ALB)

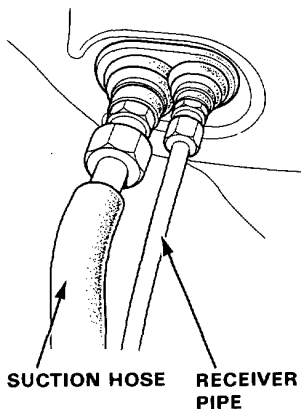


(With ALB)

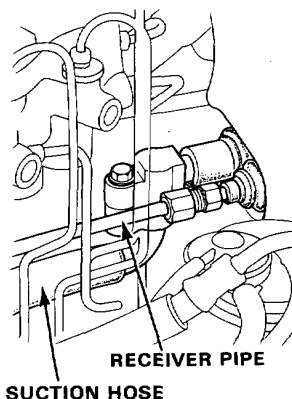

4. Remove the glove box and the glove box frame. (page 15-19)
5. Remove the self-tapping screw (3) and A/C band, then disconnect the connector from the thermostat.

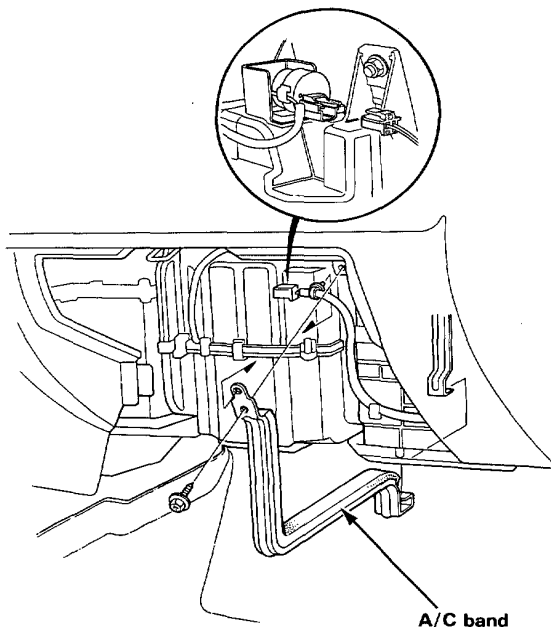

6. Remove the nuts, then remove the evaporator.

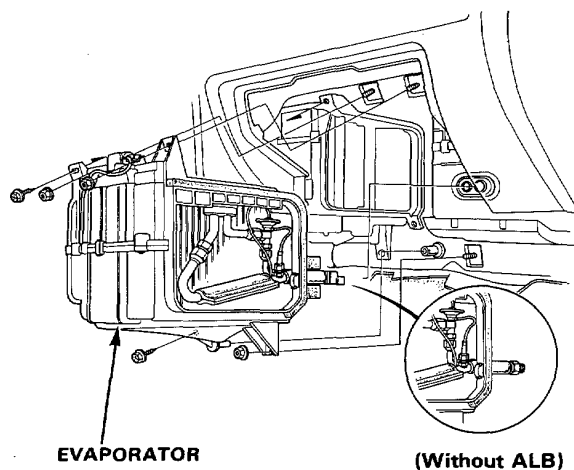

7. Install in the reverse order of remove, and:
  - Apply a sealant to the grommets.
  - Make sure that there is no air leakage.
  - Charge the system (page 15-81) and test performance (page 15-66).