


Condenser




Replacement

1. Discharge the refrigerant (page 15-80).
2. Temporarily remove the radiator reservoir tank and intake tube, then remove the suction pipe bracket.

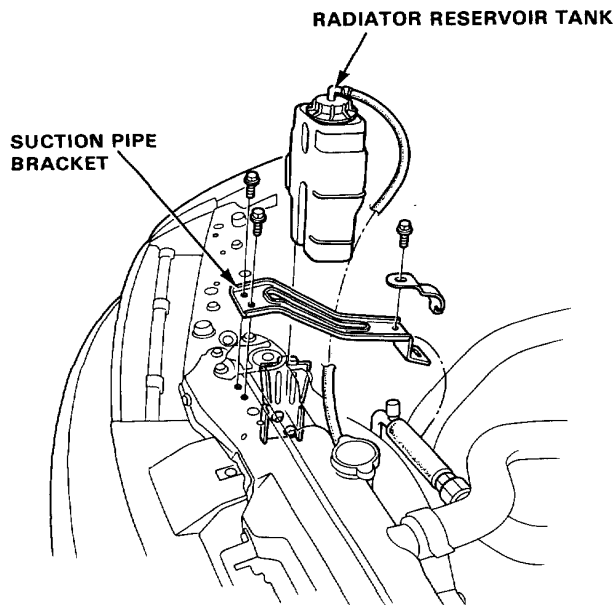


3. Remove the front grille.
NOTE: Remove the boss as shown.

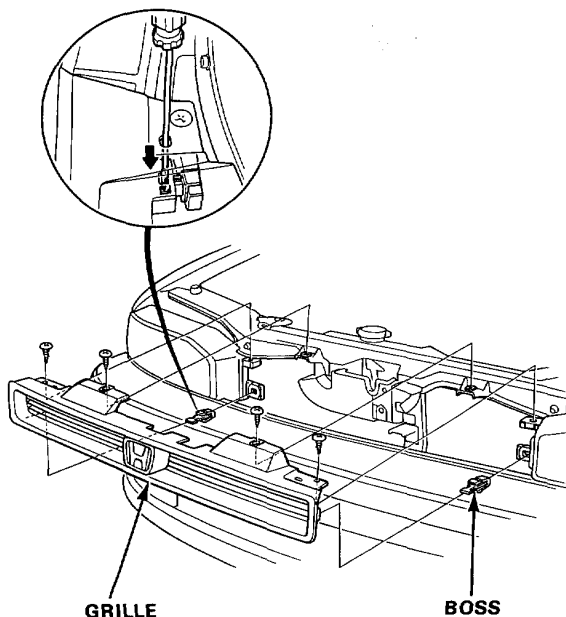


4. Disconnect the connector from the radiator fan motor, remove the mounting bolts (4) and remove the radiator fan shroud.

CAUTION: Do not damage the radiator fins when removing the fan shroud.

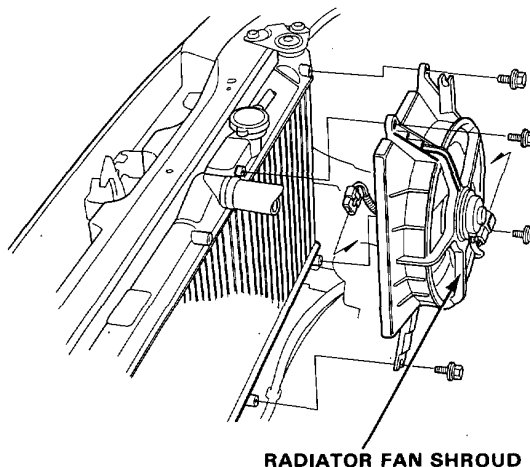

5. Disconnect the connector from the condenser fan motor and remove the connector from the compressor. Remove the mounting bolts (3) and remove the condenser fan shroud.

CAUTION: Do not damage the radiator fins when removing the fan shroud.

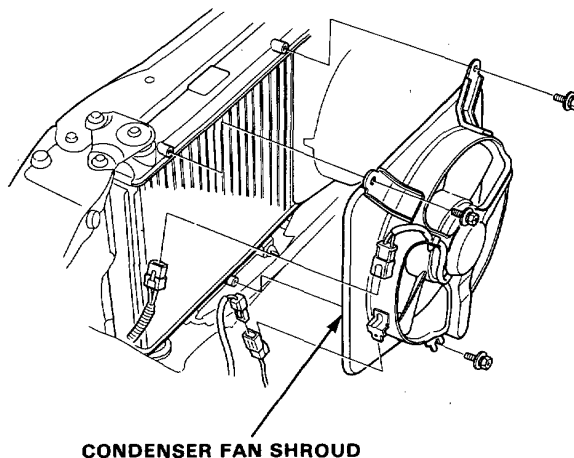

(cont'd)